

240.00.02
Excerpt from the Oerlikon Leybold Vacuum Full Line Catalog 2015/2016
Catalog Part High Vacuum Pumps

High Vacuum Pumps

- Turbomolecular Pumps TURBOVAC
- Turbomolecular Pumps TURBOVAC MAG
- Oil Diffusion Pumps DIP/LEYBOJET/OB
- Cryo Pumpes COOLVAC
- Cold Heads COOLPOWER
- Compressor Units COOLPAK

Contents

High Vacuum Pumps

Turbomolecular Pumps TURBOVAC / TURBOVAC MAG	320
General	
General to TURBOVAC Pumps	320
Applications for TURBOVAC Pumps	326
Accessories for TURBOVAC Pumps	327
Products	
Turbomolecular Pumps with Hybrid (magnetic/mechanical) Rotor Suspension	
General to Hybrid Pumps.	328
with integrated Frequency Converter	336
with integrated Frequency Converter and integrated Vacuum System Controller	336
Special Turbomolecular Pumps.	344
Turbomolecular Pumps with Mechanical Rotor Suspension	
without Compound Stage	346
with or without Compound Stage	
with Frequency Converter for Attaching or Separate	370
with Compound Stage	
with integrated Frequency Converter	374
without integrated Frequency Converter.	378
Turbomolecular Pumps with Magnetic Rotor Suspension	
MAG INTEGRA	
with integrated Frequency Converter	
with Compound Stage	382
MAG DIGITAL	
with separate Frequency Converter	
with Compound Stage	396
Accessories	
Electronic Frequency Converters	
for Turbomolecular Pumps with Mechanical Rotor Suspension	424
for Turbomolecular Pumps with Magnetic Rotor Suspension.	430
Vibration Absorber	436
Air Cooling Unit	
for TURBOVAC ClassicLine Pumps	436
for TURBOVAC SL Pump	437
Flange Heater for CF High Vacuum Flanges	437
Fine Filter	438
Securing Collar for Octal Socket Plugs	438
Solenoid Venting Valve	438
Power Failure Venting Valve.	438
Power Failure Venting Valve, electromagnetically actuated	439
Purge Gas and Venting Valve	439
for ClassicLine and SL Pump	440
Adapter Set for Seal Gas and Venting Valve for the SL pumps	440
Gas Filter to G 1/4" for Purge Gas and Venting Valve.	440
Accessories for Serial Interfaces RS 232 C and RS 485 C	441
Miscellaneous	
Services	442

Oil Diffusion Pumps DIP, LEYBOJET, OB 444

General

Applications and Accessories for Oil Diffusion Pumps 444
Oil for Diffusion Pumps, for different fields of application 445
Oil for Diffusion Pumps, for different pump types 446

Products

DIP Pumps, Water-Cooled 450
LEYBOJET 630, Water-Cooled 454
Oil Booster OB 456

Accessories

Astrotorus Baffles 458
Temperature dependant Switching Components for Automatic Pump System Control 460
Adsorption Traps with Aluminium Oxide Insert 464
Monitoring Instruments 461
Power Controller 462

Cryo Pumps, Cold Heads and Compressor Units

COOLVAC / COOLPOWER / COOLPAK 465

General

Applications and Accessories
 Cryo Pumps 465
 Cryogenics 466
Cryo Pumps 467
Refrigerating Capacity of Cryogenic Cold Heads 469
Cold Heads 470
Compressor Units 473

Products

Cryo Pumps

Standard Cryo Pumps
 BasicLine
 COOLVAC 800 BL 474
Cryo Pumps with Fully Automatic Control
 ClassicLine
 COOLVAC 800 CL, 1.500 CL 476
 COOLVAC 2.000 CL, 3.000 CL 480
 COOLVAC 5.000 CL, 10.000 CL 484
 COOLVAC 18.000 CL, 30.000, 60.000 488

Cryogenics

Cold Heads
 Pneumatically driven
 Single-Stage Cold Head COOLPOWER 50 and 140 T 490
 Dual-Stage Cold Heads COOLPOWER 7/25, 5/100 and 5/100 T 492
 Mechanically driven
 Dual-Stage Cold Heads COOLPOWER 10 MD 494

Compressor Units
 for pneumatically driven cold heads and pumps
 with air cooling
 COOLPAK 2000 A/2200 A 496
 with water cooling
 COOLPAK 2000/2200 498
 COOLPAK 6000 H/6200 H/6000 HD 500
 for mechanically driven cold heads and pumps
 with water cooling
 COOLPAK 6000 HMD/6200 HMD 502
 General Accessories for Compressor Units COOLPAK 504
 Refrigerator Cryostats
 based on the RDK 6-320 505
 optical, based on the RDK 6-320 506

Accessories

Cryo Pumps / Cryogenics

Controllers and Monitoring Units for Cryo Pumps. 508
 COOLVAC ClassicLine, System Configuration
 Single Operation 511
 Dual Operation 512
 Dual and Multiple Operation 513
 Low Temperature Controller MODEL 9700 514
 Low Temperature Measurement Instrument MODEL 211S 515
 Temperature Sensor 516
 Safety Valve. 517

General to TURBOVAC Pumps


Turbomolecular vacuum pumps (TURBOVAC) are used in applications which require a clean high or ultrahigh vacuum like, for example, in research, development or in industrial fields like the semiconductor industry, analytical instrumentation or coating technology.

Principle of Operation

In principle, the turbomolecular pump is a turbine rapidly revolving in a housing where the rotor stages of the turbine

are equipped with a number of rotor blades. Located between the rotating rotor blades are stationary stator disks with blades arranged in the opposite direction. By means of a momentum transfer from the rotating rotor blades to the gas molecules their initially non-directional thermal motion is changed in to a directional motion from the inlet flange of the pump in the axial direction towards the forevacuum flange. In the molecular flow range (i.e. at pressures below 10^{-3} mbar (0.75×10^{-3} Torr)) the mean free path of the gas molecules is

larger than the spacing between the rotor and the stator blades (typically a few tenths of a millimetre). Correspondingly the molecules chiefly collide with the optically dense rotor blades, resulting in a highly efficient pumping action. In the laminar flow range (i.e. at pressures over 10^{-1} mbar (0.75×10^{-1} Torr)) the effect of the rotor is impaired by frequent collisions between molecules themselves. For this reason, a turbomolecular pump is not capable of pumping gases at atmospheric pressure.

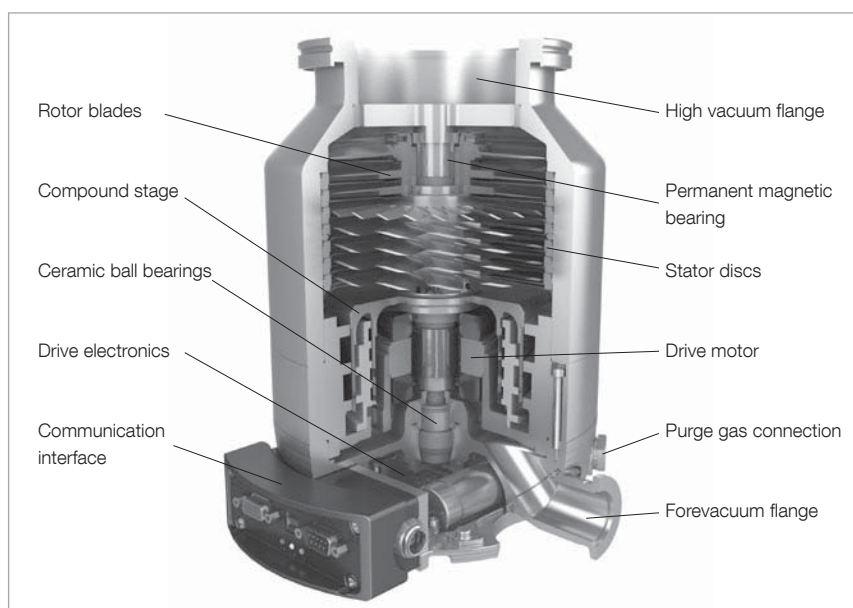

Sectional drawing of a turbomolecular pump (TURBOVAC i)

Rotor Bearing

Oerlikon Leybold Vacuum offers different rotor bearing systems. A purely classic mechanical type of rotor bearing (TURBOVAC) or a magnetic rotor bearing (TURBOVAC MAG) and also

a hybrid bearing (TURBOVAC i / iX) where the bearing on the forevacuum side is a ceramic ball bearing lubricated for life and where the bearing on the high vacuum side is implemented by way of a non-wearing magnetic bear

ing. Typical for all these types of bearing is that they do not require any lubricating oil which under circumstances like standstill of the pump might diffuse back into the vacuum chamber due to the lack of any pumping action.

Drive Electronics/Control Unit

Driving and monitoring the turbomolecular pump requires an electronic frequency converter (inverter). The frequency converter delivers the driving voltage and the output frequency for the motor and also automatically monitors the system. Optimum running up of the pump rotor is attained by a steadily increasing voltage and frequency feed. After attaining the nominal speed, the start-up current is reduced in a controlled manner to the level necessary for normal operation.

The frequency converter and the motor of the TURBOVAC have been designed for a minimal drop of speed even at high intake pressures. This ensures the highest possible gas throughput also in the transition range from molecular to viscous flow

Depending on the given system and installation conditions, the control unit may be supplemented by a comprehensive range of optional accessories facilitating easy integration within existing installations.

Forevacuum Pump

Since turbomolecular pumps are not capable of compressing directly against atmospheric pressure their operation will always require a sufficiently rated forevacuum pump. For the classic rotor arrangement with rotor blades, generally two-stage rotary vane pumps (TRIVAC) will be suitable. In some cases also single-stage rotary vane vacuum pumps (SOGEVAC BI) or scroll vacuum pumps (SCROLLVAC). In the case of the wide range variant where the rotor is equipped with an additional compression stage (compound stage) also diaphragm vacuum pumps (DIVAC) may be used.

Characteristic Quantities

Pumping speed (volume flow rate)

The pumping speed "S" is the conveyed volume flow through the intake opening of the pump. It is dependent on the type of gas so that for this reason the nominal pumping speed, i.e. the maximum attainable pumping speed of the pump is commonly stated for air, respectively nitrogen. In the field of high vacuum engineering it is common to state the pumping speed in the unit of measurement [l/s]. The pumping speed is a nonlinear function of the inlet pressure $S = S(p_1)$

Gas throughput

Gas throughput "Q", unit of measurement [mbar x l/s] is linked to the pumping speed through the inlet pressure.

$$Q = Q(p_1) = p_1 \times S(p_1).$$

Compression

Compression "K" is defined as the ratio between the pressure on the forevacuum side of the turbomolecular pump and the pressure on the high vacuum side.

$$K = K(p_{VV}) = p_{VV}/p_{HV}$$

Compression is dependent on the type of gas.

Ultimate pressure (base pressure)

The ultimate pressure " p_{ult} " of a turbomolecular pump which can be baked out is defined through the ratio between forevacuum pressure and compression ratio which is attained in a test chamber 48 hours after a 24-hour bake-out (degassing) of the measurement arrangement.

$$p_{ult} = p_{FV}/K_0.$$

The maximum attainable ultimate pressure depends among other things on the cleanliness of the apparatus, the type of forevacuum pump used, the types of seals used for the high vacuum flange and the bake-out conditions.

TURBOVAC Product Line

The TURBOVAC pumps are turbomolecular pumps with mechanical rotor suspension which are used in the pressure range from 10^{-1} mbar (0.75×10^{-1} Torr) to 10^{-10} mbar (0.75×10^{-10} Torr). Pumping speeds for air vary from $35 \text{ l} \times \text{s}^{-1}$ (inlet flange diameter = 40 mm (1.57 in.)) to $1,150 \text{ l} \times \text{s}^{-1}$ (inlet flange diameter = 250 mm (9.84 in.)).

Besides a variant with extremely reliable ceramic ball bearings on the forevacuum and the high vacuum side, Oerlikon Leybold Vacuum also offers a line of turbomolecular pumps equipped with hybrid bearings which on the forevacuum side are equipped with a ceramic ball bearing and on the high vacuum side with a permanent magnetic bearing (TURBOVAC i line).

Owing to their compact design and ease of operation, these pump lines are

used in all high vacuum and ultrahigh vacuum fields of application. In particular, the TURBOVAC pumps are running very successfully in mass spectrometers, in CD, DVD and hard disk production units, in the manufacture of large area optical coatings, in non-corrosive semiconductor production processes and in laboratories as well as research institutes

The most important advantages of the TURBOVAC product line are:

- Oil-free pumps for the generation of clean high and ultra-high vacuum conditions
- Highest performance in any orientation
- Highest degree of operating reliability
- Easy to operate
- Compact design



TURBOVAC (T) 350 iX

TURBOVAC MAG Product Line

The TURBOVAC MAG pumps are turbomolecular pumps with magnetic rotor suspension which are used in the pressure range from 10^{-1} mbar (0.75×10^{-1} Torr) to 10^{-10} mbar (0.75×10^{-10} Torr). Pumping speeds for air vary from $300 \text{ l} \times \text{s}^{-1}$ (inlet flange diameter = 100 mm (3.94 in.)) to $3,200 \text{ l} \times \text{s}^{-1}$ (inlet flange diameter = 320 mm (12.6 in.)).

The TURBOVAC MAG pumps are mostly installed on semiconductor processing lines like etching, CVD, PVD and ion implantation, i.e. in applications where corrosive gases need to be pumped. Also electron beam microscopy is an important area of application for these pumps.

The most important advantages of the TURBOVAC MAG product line are:

- Hydrocarbon-free pumps for the generation of clean high and ultra-high vacuum conditions
- High performance in any orientation
- High degree of operating reliability
- Extremely low vibration
- Designed for pumping of corrosive gases
- Almost maintenance-free



TURBOVAC MAG 2200 iPL

Use of Turbomolecular Pumps in Analytical Instruments

All modern analytical methods for gas, liquid and plasma analysis – like for example GC-MS, LC-MS and ICP-MS – rely on mass spectrometers and for this reason require adequate high vacuum conditions. Also in electron microscopes and many surface analysis instruments the production of a high vacuum is essential. In over 90% of all high vacuum applications, the turbomolecular pump has been found to be ideal. Thanks to the hydrocarbon-free vacuum, most simple operation, compact design and almost maintenance-free operation it has in most cases displaced above all the diffusion pump.

On the basis of decades of experience and in cooperation with research facilities and the manufacturers of analytical instruments, Oerlikon Leybold Vacuum has continually optimized its products.



TURBOVAC MAG W 600 iP

Through the TURBOVAC wide range series, a further improvement has been attained, making available to users in the area of analytical engineering highly flexible and reliable products.

Owing to the modular concept the user may adapt the vacuum system precisely to his requirements. The components can be integrated perfectly and thus find the most cost-effective system configuration. Through the introduction of the TURBOVAC multi inlet series, Oerlikon Leybold Vacuum has, based on special customer requirements, achieved a major step ahead for analytical instruments.

Two or more analysis chambers can be pumped down simultaneously by a single multi-inlet pump. These pumps have been tailored for pumping speed and gas throughput in order to attain a higher detection sensitivity of analytical systems, for a smaller footprint and an increased sample throughput, for example. The benefits for the customers are the extreme compactness of the vacuum systems without sacrificing performance density, simple installation, stable vacuum connections and, compared to the use of discrete individual pumps, significantly lower investment costs for the entire system. The cartridge solution, moreover, allows for an innovative and cost-effective design of the customer's system and during servicing a simple replacement of the active unit without involved assembly work and leak searching.

Cartridge benefits, which convince

- Higher effective pumping speed
- No losses in conductance
- Compact vacuum system
- Easy pump replacement without having to disassemble the highly sensitive mass spectrometer chambers

The benefits for the customers are reflected by the efficiency of the analytical instruments:

- Increase in detection sensitivity
- Smaller analytical systems
- Increase in sample throughput
- Reduction of system costs
- Lower maintenance costs

In combination with backing pumps like the SOGEVAC, TRIVAC or SCROLLVAC, Oerlikon Leybold Vacuum is able to offer the best vacuum system optimized for all major applications in the area of analytical instrumentation.



TURBOVAC i Multi Inlet

Use of Turbomolecular Pumps in the Area of Semiconductor Processes

In the semiconductor industry turbomolecular pumps are used on the following processes, among others:

- Etching
- Sputtering
- Ion implantation
- CVD
- Lithography.

In these applications pumping of aggressive gases is often required. This may necessitate the use of pumps equipped with a purge gas facility or a magnetic suspension in order to avoid damaged bearings. Especially during metal etching, deposits may occur in the forevacuum space of the turbomolecular pump. In order to prevent this the pumps must be heated to a certain

temperature. Such temperature controlled variants are optionally available for the MAG 1500 C, MAG 2000 C, MAG 2800 and MAG 3200.

In contrast to turbomolecular pumps with mechanical bearings, magnetically levitated pumps provide the advantage that they prevent overheating of the bearings at high gas flows and effectively exclude any damage to the magnetic bearings by aggressive media.

In electron microscopes and in lithographic equipment, low vibration levels are exceptionally important. For this reason magnetically levitated turbomolecular pumps should be used here. The recommended backing pumps are

rotary vane pumps from the TRIVAC range, possibly fitted with the BCS system.



TURBOVAC MAG W 2000 CT

Use of Turbomolecular Pumps in the Area of Coating Systems

Coating of optical and magnetic storage media, optical components as well as architectural glass requires high vacuum conditions. This is the only way to ensure that the formed layers will be uniform and adhere to the substrate.


The way in which the vacuum is generated has a significant impact on the quality of the coating. By pumping the vacuum chamber down to pressures in the range of 10^{-6} mbar (0.75×10^{-6} Torr), interfering gas and water molecules are removed from the processing chamber. In the case of sputtering the coating process is run in the pressure range between 10^{-3} and 10^{-2} mbar (0.75×10^{-3} and $0.75 \times$

10^{-2} Torr), and in the case of evaporation coating, pressures below 10^{-4} mbar (0.75×10^{-4} Torr) are utilized.

The turbomolecular pump meets all requirements of the customers as to a hydrocarbon-free vacuum, very simple operation, compact design and almost maintenance-free operation in an almost ideal manner. The range of pumps from Oerlikon Leybold Vacuum includes pumps with flange diameters ranging from 40 mm to 250 mm (1.57 in. to 9.84 in.) nominal width.

Thus the right pump is available for each application, be it coating of data memories (CD, DVD, hard discs), coat

ing of tools and coating of precision lenses in the area of optical components, displays or architectural glass.

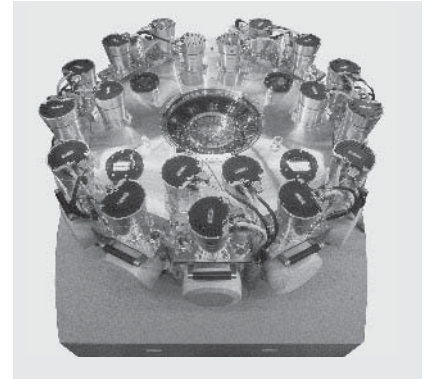


Entire high vacuum equipment of a CD/DVD coating system with TURBOVAC TW 250 S pumps

Use of turbomolecular pumps in research and development

In many applications in which new ideas shall be transformed into technical processes, vacuum technology is a basic requirement for being able to implement these processes at all.

In the field of research and development, all types of turbomolecular pumps from Oerlikon Leybold Vacuum are being used. Since the application

requirements differ widely, for example are being used. Since the application requirements differ widely, for example between university basic research, industrial development, in research and in large laboratories, the right component or the matching system can be put together from the comprehensive range of equipment being offered.

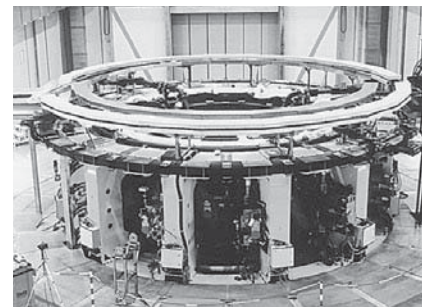

Nuclear fusion technology

Applications for TURBOVAC Pumps

Pumps	TURBOVAC 50	TURBOVAC 151, 361 (C)	TURBOVAC 600 C	TURBOVAC 1000 C	TURBOVAC 1100 C	TURBOVAC SL 80	TURBOVAC TW 250 S	TURBOVAC (T) 350/450 i	TURBOVAC i Multi Inlet	MAG W 300/400/600/700 iP	MAG W 1300/1600/1700/2200 iP(L)	MAG W 830/1300 C	MAG W 1500 CT	MAG W 2200 C	MAG W 2000 C/CT	MAG W 2800/3200 C/CT
Applications																
Analytical Instruments																
Leak detectors	■	■		■	■		■	■	■	■						
Mass spectrometers	■	■		■	■		■	■	■	■						
Gas chromatography (GC-MS)	■	■		■	■		■	■	■	■						
Liquid chromatography (LC-MS)	■	■		■	■		■	■	■	■						
Quadrupol time of flight (Q-TOF)					■		■	■	■	■						
Matrix assisted laser desorption time of flight (MALDI-TOF)	■				■		■	■	■	■						
Inductively coupled plasma mass spectrometry (ICP-MS)	■				■	■		■	■	■	■					
Electron beam microscopy	■			■	■	■		■	■	■	■					
Coating																
Data storage / optical		■				■	■		■	■	■	■		■	■	■
Data storage / magnetic			■	■	■		■	■	■	■			■	■	■	
Flat panel displays			■	■	■				■	■	■	■		■	■	■
Optical coating		■	■	■	■		■	■	■	■			■	■	■	
Large area coating				■	■				■		■		■	■	■	
Decorative coating				■	■				■		■		■	■	■	
Metallization				■	■				■		■		■	■	■	
Wear protection			■	■	■				■		■		■	■	■	
Metallurgy				■	■				■		■		■	■	■	
R & D (Research and Development)																
Surface analysis				■	■				■	■	■	■	■	■	■	■
UHV / XHV systems		■	■	■	■	■		■	■	■	■			■	■	
Particle accelerators		■		■	■				■	■	■	■		■	■	■
Fusion experiments			■	■	■				■	■	■	■	■	■	■	■
Space simulation			■	■	■				■	■	■	■	■	■	■	■
Semiconductor Processes																
Load locks and transfer chambers	■	■	■	■	■	■	■	■	■	■	■					
Etch												■	■			■
PECVD									■	■	■	■	■	■	■	■
PVD									■	■	■	■	■	■	■	■
Ion implantation									■		■	■	■	■	■	■

Accessories for TURBOVAC Pumps

Pumps	TURBOVAC 50	TURBOVAC 151, 361 (C)	TURBOVAC 800 C	TURBOVAC 1000 C	TURBOVAC 1100 C	TURBOVAC SL 80	TURBOVAC TW 250 S	TURBOVAC (T) 350/450 S	TURBOVAC (T) 350/450 i	MAG W 300/400/600/700 Inlet	MAG W 1300/1600/1700 iP	MAG W 300/400/600/700 iP	MAG W 830/1300 C	MAG W 1500 CT	MAG W 2200 C	MAG W 2000 C/CT	MAG W 2800/3200 C/CT
Applications																	
Integrated Frequency Converter						■	■	■	■	■	■						
External Frequency Converter					■	■											
External Frequency Converter and Power Supply	■	■	■	■	■							■	■	■	■	■	■
Power Supply					■	■	■	■	■	■							
Mounting Kit		■	■			■	■	■	■								
Inlet screen / Splinter guard						■	■	■	■	■	■	■	■	■	■	■	■
Vibration absorber	■	■	■	■	■	■	■	■	■	■	■						
Air cooling unit	■	■	■	■		■		■	■	■	■						
Water cooling kit	■					■	■	■	■	■	■						
Flange heaters for CF flanges	■	■	■	■		■	■	■	■	■	■						
Venting valve	■	■	■	■	■	■	■	■	■	■	■						
Purge gas valve						■	■	■	■	■	■	■					
Purge gas and venting valve		■	■	■	■	■	■				■	■	■	■	■	■	■
Power failure venting valve		■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Electronic brake module									■	■							
Relais box							■	■	■								
Accessories for serial interfaces	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■
Control Software for TURBOVAC	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■	■

High Vacuum Pumps

General to TURBOVAC i / iX Pumps

Turbomolecular Pumps with Hybrid (mechanical/magnetic) Rotor Suspension

TURBOVAC i, iX / T i, T iX

The TURBOVAC i / iX series is a modular line of turbomolecular vacuum pumps. With the integrated drive electronics (frequency converter) it forms a single unit.

In the development of the TURBOVAC i / iX special emphasis was placed on the maximum attainable pump performance in consideration of its footprint. The specially developed rotor/stator design, upon request with an additional compression stage, guarantees excellent performance data as to pumping speed, gas throughput and compression especially also for light gases.

In all pumps of this line, the bearing consists of a non-wearing permanent magnetic bearing on the high vacuum side and an oil-free ceramic ball bearing which is lubricated for life on the forevacuum side. For this reason, the usually required standard maintenance involving an oil change is no longer necessary. The ceramic ball bearing is replaceable on-site, should this be required.

The pumps are equipped as standard with a venting and purge gas facility for directly connecting a venting valve, purge gas valve or purge gas throttle to the pump.

Owing to the many possible combinations (electronics, pump stage design, housing and the range of accessories) the TURBOVAC i / iX can be flexibly adapted to the specific application in each case.

For example, in comparison with the TURBOVAC i, the TURBOVAC iX is equipped with an integrated vacuum system control unit which drives accessory components like vacuum gauge, valves, fans and forevacuum pumps. Moreover, numerous optionally available communication interfaces facilitate easy integration within your installation.

The pump stage design (rotor, stator and Holweck stage) can be selected specifically in consideration of the respective process requirements and offers variants for highest possible gas throughput, pumping speed and/or compression in single or multi-chamber systems. Equally comprehensive is the range of housing and flange variants being offered where the vacuum connections can be adapted flexibly to the on-site installation conditions. The comprehensive range of accessories completes the TURBOVAC i / iX line thereby extending the fields of application for these pumps.

Advantages to the User

- High pumping performance from a compact size
- Cost-effective price-to-performance ratio
- Highly reliable, maintenance-free bearing concept without oil lubrication
- Owing to the overall modular concept, individually adaptable to the respective conditions and requirements
- Variety of housings and flange options
- Easy and easily adaptable installation, any mounting position
- Easy process integration due to the numerous interfacing options
- Flexible accessory options (power supply, cooling, heating, venting, installation etc.)

Overview of Variants

Electronics Variants

All pumps are equipped with integrated drive electronics with a 24 V/48 V power supply which controls the amount of drive power and which monitors all pump functions.

The individual requirements with regard to communication interfaces and the functional scope of the driving options for accessory components can be covered through a number of different electronics variants.



Left: TURBOVAC i with standard interface

Centre: TURBOVAC i with Anybus interface extension

Right: TURBOVAC iX with integrated vacuum system control unit and Anybus interface extension

Electronics Variants

TURBOVAC i (Standard)

Cost-effective solution equipped with basic functions and interfaces.

- Internal 24/48 V DC frequency converter
- Status LEDs
- Accessory connection for up to 2 controllable accessory components
- User-friendly interfaces (USB, RS 485, 15-pin digital I/O)




Standard interface USB, RS 485 and 15-pin digital I/O for TURBOVAC i

TURBOVAC i (Anybus interface extension)

Features like TURBOVAC I, additionally:

- User-friendly interfaces (USB, 15-pin digital I/O) and Anybus interface instead of the RS 485 for further interface options: RS 232, Profibus, Ethernet/IP (further interfaces upon request)

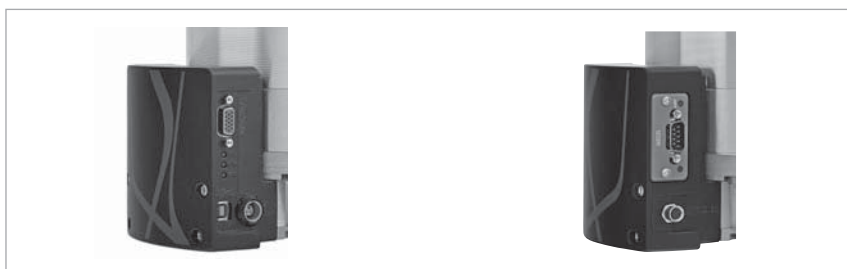

Anybus interface expansion for TURBOVAC i

TURBOVAC iX (Vacuum system control unit)

With integrated vacuum system control unit and Anybus interface extension.


Features like TURBOVAC i (Anybus interface extension), additionally:

- 3 outputs for controlling vacuum pump accessories
- 1 vacuum gauge head connection for powering and data recording of vacuum gauge heads and application of pressure data for pump system control
- Flexibly programmable software, for customising the configuration of the control connections




Integrated vacuum system control unit of the TURBOVAC iX

Performance Variants

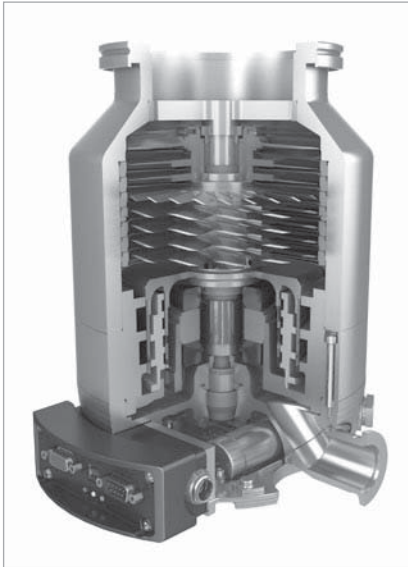

TURBOVAC i, iX

The standard variant for UHV applications and compact pump system solutions. Owing to the additional Holweck compression stage it delivers a high pumping speed and a high compression especially for light gases, and due to its high forevacuum tolerance it is suited for operation in connection with diaphragm or scroll forevacuum pumps.

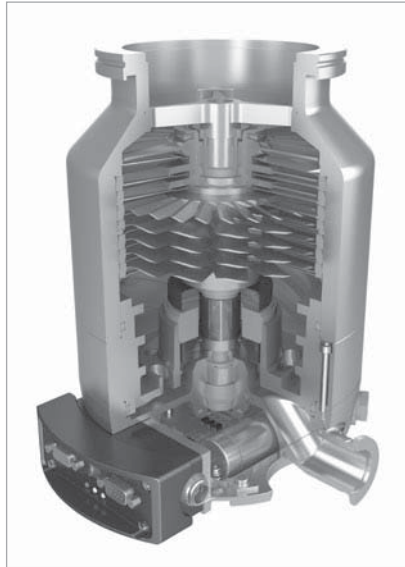

TURBOVAC T i, T iX

The "T" version with its classic rotor design without additional compression stage is suited for deployment under more stringent process conditions and high gas loads. Compared to the standard variant it stands for faster run-up times, increased gas throughput and an improved tolerance with regard to pumping of particle or dust containing media.



TURBOVAC i Multi-Inlet

The variant with a special rotor design and two or more inlets as an efficient and compact vacuum solution for multi-chamber systems. It allows for a high degree of system integration and convinces compared to systems with discrete turbomolecular pumps through its lower weight and smaller footprint as well as an increased reliability of the entire vacuum system through the reliance on fewer components compared to similar systems equipped with discrete turbomolecular pumps.


Housing and Flange Variants

The optimised rotor geometry has been specially adapted to the industrial standard sizes for maximum pump performance. Housings with ISO-K as well as CF flanges are available. Moreover, the standard housings with an additional inlet stage are available upon request.

Multiple inlet stages can be implemented through the **TURBOVAC Multi-Inlet**. Here in addition to the special cartridge solution which facilitates easy replacement in the field, also custom housing and chamber solutions are offered for utmost system integration.

Flexibility

The forevacuum connection on all pumps is rotatable thereby facilitating flexible installation within existing systems making optimum use of the available space. Moreover, the required amount of installation space may be reduced by a detachable cable connected interface module

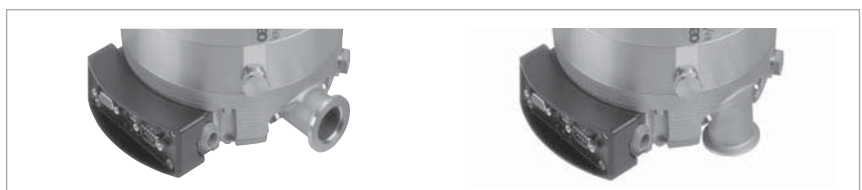

Left: TURBOVAC i with radial forevacuum flange
Right: TURBOVAC i with axial forevacuum flange

Accessories for TURBOVAC i, iX / T i, T iX

Power Supply


TURBO.POWER integra

- Plug-and-play power supply for fitting underneath the pump, 100-240 V
- Including short connecting cable to the pump
- Also for benchtop placement with optional extension cable (1, 3, 5 m (3.5, 10.5, 17.5 ft))
- Requires a country-specific mains cord (EU, US, UK ...)



Pump control unit with Power Supply TURBO.CONTROL 300

- Control unit and power supply for rack installation
- With on/off switch for the turbo-molecular pump
- Status LEDs and status relays for monitoring the pump
- For remote control via interface
- Requires a connection cable to the pump (1, 3, 5, 10, 20 m (3.5, 10.5, 17.5, 35.0, 70.0 ft)) and country-specific mains cord (EU, US, UK ...)

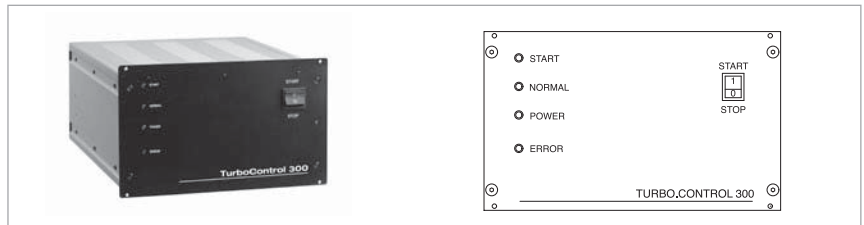

Connecting cables to the pump with bare wire ends of for customer specific power supply units



Relay Box

The relay box allows you to control via the 24 V DC output on the TURBOVAC i a mains powered electric consumer, like a backing pump, for example. Mains power and consumer are connected using mains power cords, the control voltage is connected through an M 8 connector.

- incl. connection cable with a M 8 plug, 2 m (7.0 ft) long



DC Pump Plug

for adapting the supply voltage by the customer.

- 24/48 V DC-In plug TURBOVAC i



Radial air cooler

for lateral installation on the pump, including connection plug

- Flexible positioning




Axial air cooler

For installation underneath the pump, including connection plug



Water cooling

for flexible installation on the pump (required for degassing the turbomolecular pump)

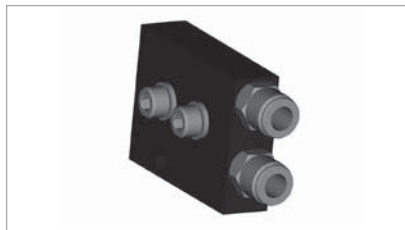

Heating Collar

for degassing the pump

- Degassing temperature 100 °C (212 °F)
- Requires a country-specific mains cord (EU, US, UK ...)
- With optional relay box and accessory cable, automatic control via the electronics of the TURBOVAC i / iX is possible



Accessory Valves

- Power supply 24 V DC
- G 1/8" inlet (inside thread) and discharge (outside thread) connection
- Including O-ring and connecting cable with M 8 plug for connection to the accessory input on the TURBOVAC i / iX

Purge Gas Valve (for connection to the purge gas connection on the turbomolecular pump)

for controlling the admitted purge gas quantity

- The valve is normally closed

Venting Valve (for connection the venting connection)


for venting the turbomolecular pump

- The valve is normally closed

Power Failure Venting Valve (for connection the venting connection)

for venting the turbomolecular pump

- The valve is normally open

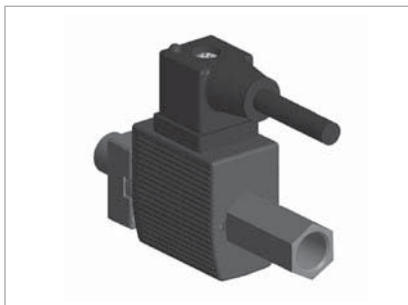

Purge Gas Throttle

for passively controlling the admitted purge gas quantity


- G 1/8" inlet (inside thread) and discharge (outside thread) connection
- Purge gas throttle 24 sccm



Air Filter


for connection to the valves or throttles

- Prevents contamination and clogging of valves and throttles
- G1/8"

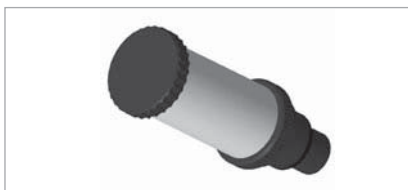

Y-Splitter

- Extends the M 8 accessory connection on the TURBOVAC i by a further connection for parallel driving of two accessory components. Here both accessory components are switched synchronously

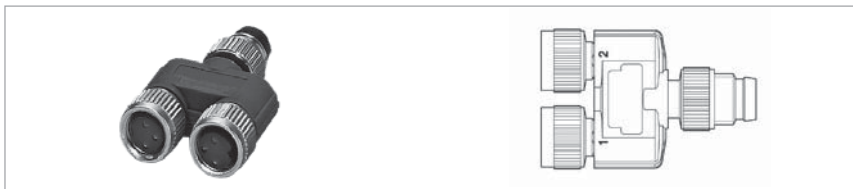

Installation and Mounting Accessories

Mounting kit for safe mounting of the pump

The mounting kits include:

ISO-K kit (100 und 160):

centering rings and clamps

ISO-F kit (100 und 160):

collar flange, outside ring, bolts and nuts

CF kit (100 und 160):

2 copper gaskets, bolts, nuts and washers



Mounting kits (left ISO-KF, centre ISO-F, right CF)

Centering Rings with Splinter Guard (DN 100 and 160 ISO-K/F)

Centering Rings with Inlet Screens (DN 100 and 160 ISO-K/F)

Splinter Guards (DN 100 und 160 CF)

Inlet Screens (DN 100 und 160 CF)

for protecting the pump against ingesting parts.

Inlet screen, 3.2 mm (0.01 ft) mesh

Splinter guard, 0.8 mm (0.003 ft) mesh

Note:

For ISO-K/F, both inlet screen and splinter guard have been integrated in the centering ring.



Vibration Absorber

(DN 100/160 ISO-K and 100/160 CF)

Prevents any possible vibration transfer from the pump to sensitive instrumentation or apparatus.



Software LEYASSIST

Software for PC-based communication, control and monitoring of turbomolecular pumps via USB, RS 485 or RS 232 interface with automatic pump detection.

Functions

- Display of vacuum system status
- Trend configuration and report
- Configuring the accessory functions of the TURBOVAC i / iX
- Reading/writing of parameters
- Data logging
- Alarm/warning message logging
- Interface uses USB (with USB cable 2.0, Type A/B, 1.8 m (6.3 ft) long), RS 485 or RS 232 (with dongle)
 - Functions: reading/writing of parameters, control and data acquisition
- Automatic detection of connected Leybold pump type or instrument
- Different languages and with different user access levels are available

Ordering Information

Software LEYASSIST for turbomolecular vacuum pumps

Part. No. 230439V01



Products

TURBOVAC
with Hybrid (mag/mech) Rotor Suspension

with integrated Frequency Converter


TURBOVAC (T) 350 i and (T) 450 i



TURBOVAC (T) 350 i (left) and (T) 450 i (right)

with integrated Frequency Converter and
integrated Vacuum System Controller

TURBOVAC (T) 350 iX and (T) 450 iX

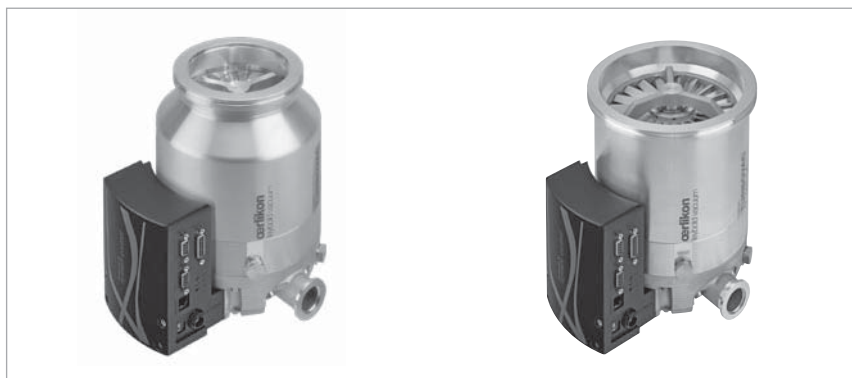

TURBOVAC (T) 350 iX (left) and (T) 450 iX (right)

Typical Applications

- Analytical technologies / Research & Development
- Mass spectrometers
- Electron microscopes
- Surface analysis
- X-ray-analysis
- Particle accelerators and synchrotrons
- Laboratory coating systems
- MBE (Molecular Beam Epitaxy)
- UHV systems
- Life Sciences
- Proton therapy
- Gamma sterilisation
- Production of high quality implants
- Industrial and Coating applications
- PVD- Physical Vapour deposition
- Optical coatings
- CD/DVD/Blu-Ray Disc production
- Thin film technologies, photovoltaics
- Load locks, transfer chambers, handling systems
- Electron beam welders
- Insulation vacuum and leak detection

Technical Features

TURBOVAC i

- Integrated electronic drive unit with 24/48 V DC supply
- Best in class pumping speed and compression especially for light gases
- Vacuum port design flexibility
- Installation in any orientation
- Superior reliability due to innovative pump and bearing design
- The only maintenance free hybrid mechanical TMP
 - no need for oil changes
- On-site maintenance possibility (bearing exchange) to reduce service costs and time
- Widest range of interface options (USB, RS 485 and 15 pin Dig I/O as standard)
- Optimized size/performance ratio on 100 and 160 flanges

TURBOVAC iX

- Integrated vacuum system controller with flexible interfaces and several accessory ports for control of cooling units, valves, gauges, forevacuum pumps etc.
- Flexible accessory program options for easy plug & play
- Flexibility to match different process and application requirements

TURBOVAC T i, T iX

- Variant without Compound Stage
- increased gas throughput
- Increased tolerance against dust and particles
- Improved run-up time

Advantages to the User

TURBOVAC i


- Best performance and functionality for your money
- Maximum user flexibility for easy system integration, operation and control
- Highest productivity and system uptime at lowest CoO (Cost of Ownership)
- Improved pump-down time and target pressures
- Superior pumping performance for light gases
- Down-sizing of vacuum system in terms of costs and dimensions (use of small forevacuum pumps)

TURBOVAC iX


- Easy plug & play pump system control
- Avoid extra costs for separate pump system control units and cabling

TURBOVAC T i, T iX


- Suitable for demanding process applications and high throughput operation
- Fast cycle operation and pump down possible

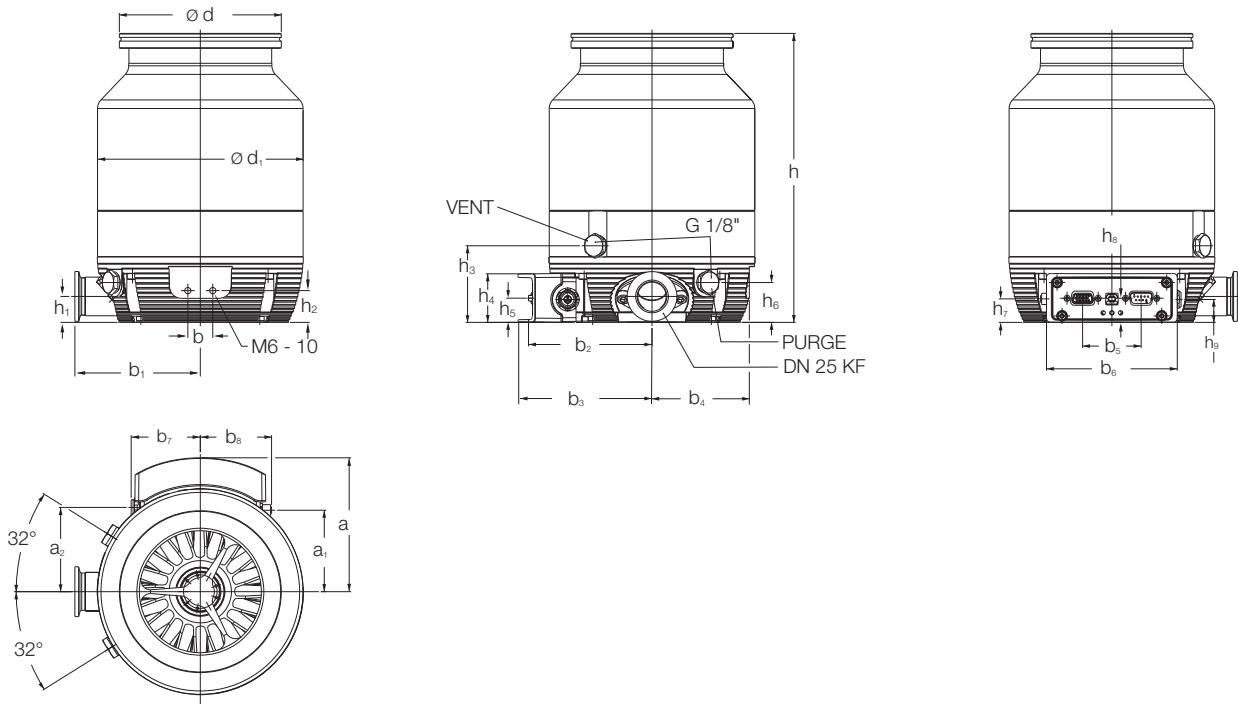


Type	DN		a	a ₁	a ₂	b	b ₁	b ₂	b ₃	b ₄
TURBOVAC (T) 350 i	ISO-K	mm (in.)	107.5 (4.23)	65.4 (2.57)	67.6 (2.66)	20.0 (0.79)	100.7 (3.96)	99.2 (3.91)	107.5 (4.23)	78.1 (3.07)
	CF	mm (in.)	107.5 (4.23)	65.4 (2.57)	67.6 (2.66)	20.0 (0.79)	100.7 (3.96)	99.2 (3.91)	107.5 (4.23)	78.1 (3.07)
TURBOVAC (T) 450 i	ISO-K	mm (in.)	107.5 (4.23)	65.4 (2.57)	67.6 (2.66)	20.0 (0.79)	100.7 (3.96)	99.2 (3.91)	107.5 (4.23)	78.1 (3.07)
	CF	mm (in.)	107.5 (4.23)	65.4 (2.57)	67.6 (2.66)	20.0 (0.79)	100.7 (3.96)	99.2 (3.91)	107.5 (4.23)	78.1 (3.07)
TURBOVAC (T) 350 i	ISO-K	mm (in.)	47.0 (1.85)	105.0 (4.13)	55.5 (2.19)	57.2 (2.25)	130.0 (5.12)	165.0 (6.5)	232.0 (9.13)	20.8 (0.82)
	CF	mm (in.)	47.0 (1.85)	105.0 (4.13)	55.5 (2.19)	57.2 (2.25)	180.0 (7.09)	165.0 (6.5)	245.0 (9.65)	20.8 (0.82)
TURBOVAC (T) 450 i	ISO-K	mm (in.)	47.0 (1.85)	105.0 (4.13)	55.5 (2.19)	57.2 (2.25)	130.0 (5.12)	165.0 (6.5)	216.0 (8.5)	20.8 (0.82)
	CF	mm (in.)	47.0 (1.85)	105.0 (4.13)	55.5 (2.19)	57.2 (2.25)	180.0 (7.09)	165.0 (6.5)	222.0 (8.74)	20.8 (0.82)
TURBOVAC (T) 350 i	ISO-K	mm (in.)	25.5 (1.0)	61.5 (2.42)	39.0 (1.54)	19.4 (0.76)	32.0 (1.26)	19.0 (0.75)	18.8 (0.74)	18.4 (0.72)
	CF	mm (in.)	25.5 (1.0)	61.5 (2.42)	39.0 (1.54)	19.4 (0.76)	32.0 (1.26)	19.0 (0.75)	18.8 (0.74)	18.4 (0.72)
TURBOVAC (T) 450 i	ISO-K	mm (in.)	25.5 (1.0)	61.5 (2.42)	39.0 (1.54)	19.4 (0.76)	32.0 (1.26)	19.0 (0.75)	18.8 (0.74)	18.4 (0.72)
	CF	mm (in.)	25.5 (1.0)	61.5 (2.42)	39.0 (1.54)	19.4 (0.76)	32.0 (1.26)	19.0 (0.75)	18.8 (0.74)	18.4 (0.72)

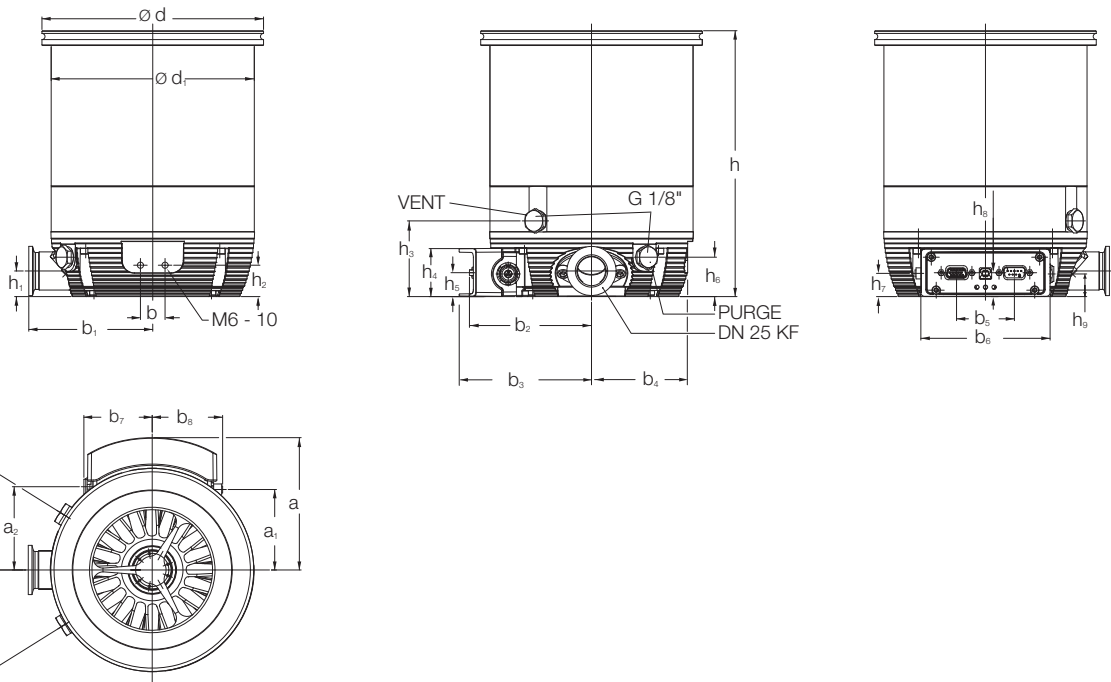

Dimensional drawing for the TURBOVAC (T) pumps, 350 i top and 450 i bottom

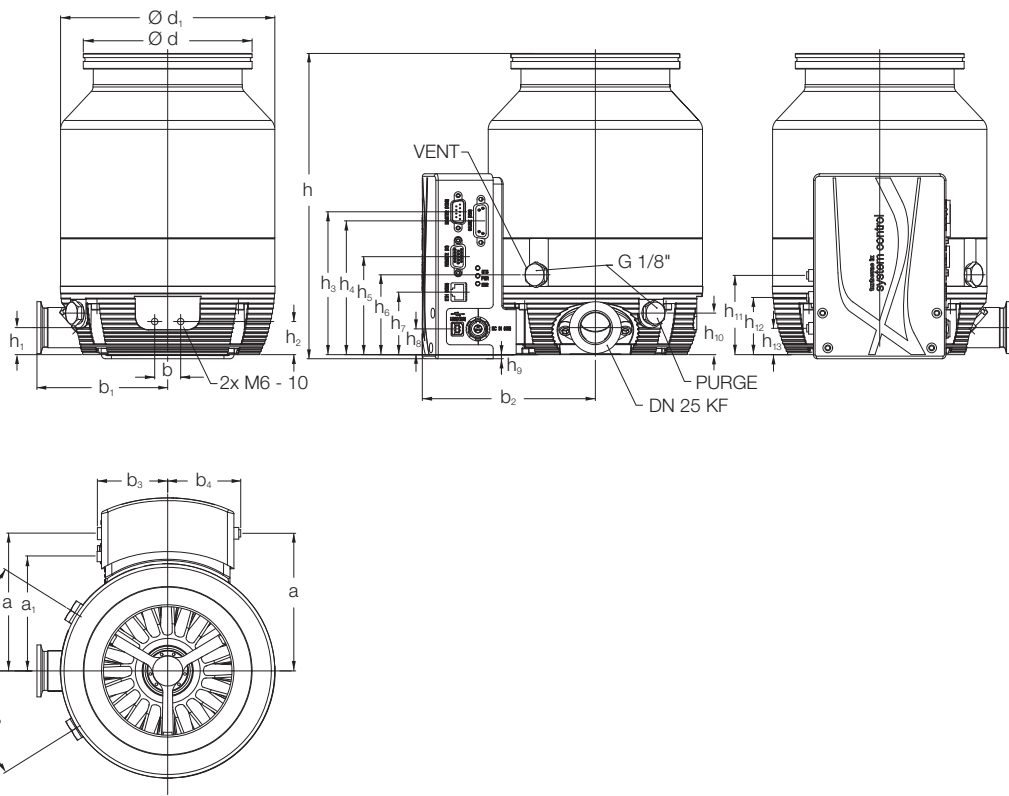

Type	DN		a	a ₃	b	b ₁	b ₂	b ₃	b ₄	
TURBOVAC (T) 350 IX	ISO-K	mm (in.)	111.0 (4.37)	78.0 (3.07)	20.0 (0.79)	101.0 (3.98)	138.0 (5.43)	54.0 (2.13)	56.0 (2.2)	
	CF	mm (in.)	111.0 (4.37)	78.0 (3.07)	20.0 (0.79)	101.0 (3.98)	138.0 (5.43)	54.0 (2.13)	56.0 (2.2)	
TURBOVAC (T) 450 IX	ISO-K	mm (in.)	111.0 (4.37)	78.0 (3.07)	20.0 (0.79)	101.0 (3.98)	138.0 (5.43)	54.0 (2.13)	56.0 (2.2)	
	CF	mm (in.)	111.0 (4.37)	78.0 (3.07)	20.0 (0.79)	101.0 (3.98)	138.0 (5.43)	54.0 (2.13)	56.0 (2.2)	
TURBOVAC (T) 350 IX	ISO-K	mm (in.)	130.0 (5.12)	165.0 (6.5)	235.0 (9.25)	21.0 (0.83)	26.0 (1.02)	110.0 (4.33)	103.0 (4.06)	76.0 (2.99)
	CF	mm (in.)	180.0 (7.09)	165.0 (6.5)	248.0 (9.76)	21.0 (0.83)	26.0 (1.02)	110.0 (4.33)	103.0 (4.06)	76.0 (2.99)
TURBOVAC (T) 450 IX	ISO-K	mm (in.)	130.0 (5.12)	165.0 (6.5)	219.0 (8.62)	21.0 (0.83)	26.0 (1.02)	110.0 (4.33)	103.0 (4.06)	76.0 (2.99)
	CF	mm (in.)	180.0 (7.09)	165.0 (6.5)	225.0 (8.86)	21.0 (0.83)	26.0 (1.02)	110.0 (4.33)	103.0 (4.06)	76.0 (2.99)
TURBOVAC (T) 350 IX	ISO-K	mm (in.)	62.0 (2.44)	48.0 (1.89)	20.0 (0.79)	3.0 (0.12)	32.0 (1.26)	64.0 (2.52)	47.0 (1.85)	23.0 (0.91)
	CF	mm (in.)	62.0 (2.44)	48.0 (1.89)	20.0 (0.79)	3.0 (0.12)	32.0 (1.26)	64.0 (2.52)	47.0 (1.85)	23.0 (0.91)
TURBOVAC (T) 450 IX	ISO-K	mm (in.)	62.0 (2.44)	48.0 (1.89)	20.0 (0.79)	3.0 (0.12)	32.0 (1.26)	64.0 (2.52)	47.0 (1.85)	23.0 (0.91)
	CF	mm (in.)	62.0 (2.44)	48.0 (1.89)	20.0 (0.79)	3.0 (0.12)	32.0 (1.26)	64.0 (2.52)	47.0 (1.85)	23.0 (0.91)

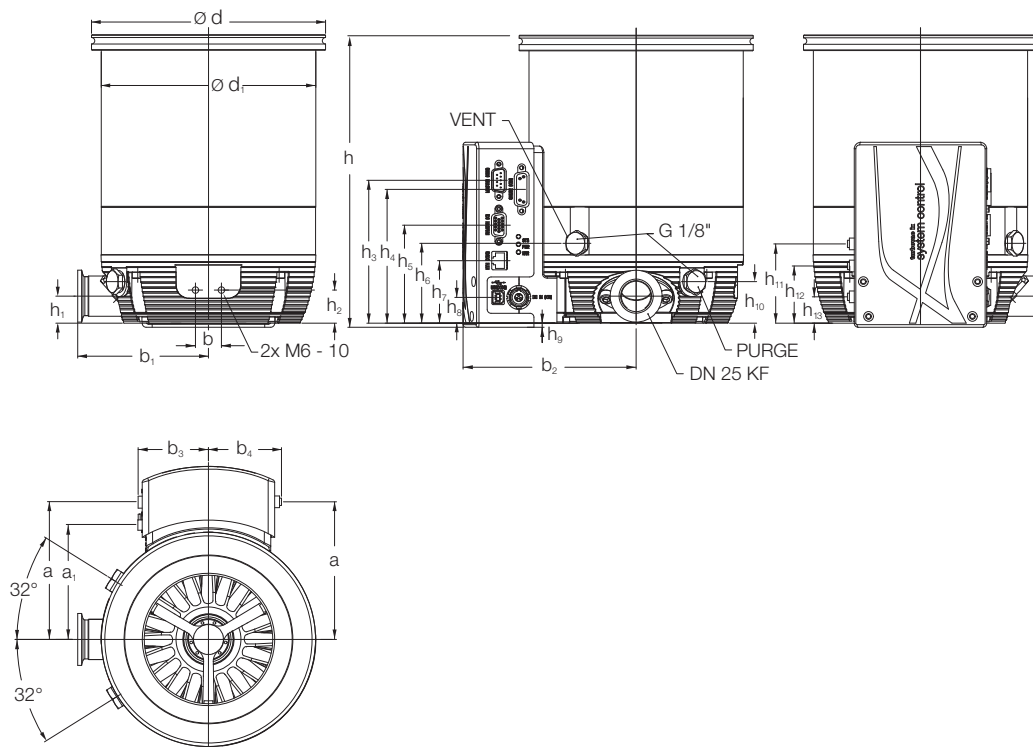

Dimensional drawing for the TURBOVAC (T) pumps, 350 IX top and 450 IX bottom

Technical Data

TURBOVAC

		350 i / iX	450 i / iX	T 350 i / iX	T 450 i / iX
High-vacuum connection	DN	100 ISO-K 100 CF	160 ISO-K 160 CF	100 ISO-K 100 CF	160 ISO-K 160 CF
Forevacuum connection	DN	25 ISO-KF	25 ISO-KF	25 ISO-KF	25 ISO-KF
Pumping speed					
N ₂	l x s ⁻¹	290	430	290	430
Ar	l x s ⁻¹	260	400	260	400
He	l x s ⁻¹	360	440	360	440
H ₂	l x s ⁻¹	350	420	320	400
Gas throughput					
N ₂	mbar x l x s ⁻¹	4.5	4.5	11.5	11.5
Ar	mbar x l x s ⁻¹	2.0	2.0	6.0	6.0
He	mbar x l x s ⁻¹	8.0	8.0	20.0	20.0
H ₂	mbar x l x s ⁻¹	8.0	8.0	20.0	20.0
Compression ratio					
N ₂		1 x 10 ¹¹	1 x 10 ¹¹	1 x 10 ¹⁰	1 x 10 ¹⁰
Ar		1 x 10 ¹¹	1 x 10 ¹¹	1 x 10 ¹¹	1 x 10 ¹¹
He		1 x 10 ⁸	1 x 10 ⁸	1 x 10 ⁸	1 x 10 ⁸
H ₂		1 x 10 ⁶	1 x 10 ⁶	1 x 10 ⁴	1 x 10 ⁴
Ultimate pressure with 2-stage oil-sealed rotary vane vacuum pump ISO-K / CF flange					
	mbar (Torr)	< 10 ⁻⁸ / < 10 ⁻¹⁰ (< 0.75 x 10 ⁻⁸ / < 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ / < 10 ⁻¹⁰ (< 0.75 x 10 ⁻⁸ / < 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ / < 10 ⁻¹⁰ (< 0.75 x 10 ⁻⁸ / < 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ / < 10 ⁻¹⁰ (< 0.75 x 10 ⁻⁸ / < 0.75 x 10 ⁻¹⁰)
Max. forevacuum pressure					
N ₂	mbar (Torr)	10.0 (7.5)	10.0 (7.5)	0.5 (0.375)	0.5 (0.375)
Recommended forevacuum pumps					
TRIVAC		D 4 B	D 4 B	D 16 B	D 16 B
SCROLLVAC		SC 5 D / 15 D	SC 5 D / 15 D	SC 15 D / 30 D	SC 15 D / 30 D
DIVAC		3.8 HV3	3.8 HV3	-	-
Operating speed	min ⁻¹ (rpm)	60 000	60 000	60 000	60 000
Speed adjustment range	%	50 to 100	50 to 100	50 to 100	50 to 100
Run-up time, approx.	min	5.5	5.5	3.5	3.5
Ambient temperature					
during operation	°C (°F)	+5 to +45 (+41 to +113)	+5 to +45 (+41 to +113)	+5 to +45 (+41 to +113)	+5 to +45 (+41 to +113)
during storage	°C (°F)	-15 to -70 (+5 to -94)	-15 to -70 (+5 to -94)	-15 to -70 (+5 to -94)	-15 to -70 (+5 to -94)
Cooling					
standard		Convection	Convection	Convection	Convection
optional		Air or water	Air or water	Air or water	Air or water
Cooling water connection					
alternatively		Plug connection for 6 x 1 hose G 1/8" Screw-in thread	Plug connection for 6 x 1 hose G 1/8" Screw-in thread	Plug connection for 6 x 1 hose G 1/8" Screw-in thread	Plug connection for 6 x 1 hose G 1/8" Screw-in thread
Cooling water consumption	l/h	50 to 100	50 to 100	50 to 100	50 to 100
Permissible cooling water pressure	bar(g)	3 to 6	3 to 6	3 to 6	3 to 6
Permissible cooling water temperature	°C (°F)	+15 to +35 (+59 to +95)	+15 to +35 (+59 to +95)	+15 to +35 (+59 to +95)	+15 to +35 (+59 to +95)
Noise level					
with convection cooling	db(A)	< 44	< 44	< 44	< 44
with radial cooler	db(A)	< 47	< 47	< 47	< 47
with axial cooler	db(A)	< 49	< 49	< 49	< 49

**Additional Technical Data for the
Frequency Converter (i Version)**
TURBOVAC

		350 i	450 i	T 350 i	T 450 i
Technical Data for the integrated Drive Electronics					
Supply voltage	V DC	24/48 ±10%	24/48 ±10%	24/48 ±10%	24/48 ±10%
Max. current consumption	A	10 at 24 V DC	10 at 24 V DC	10 at 24 V DC	10 at 24 V DC
Max. power consumption	W	240	240	240	240
Power consumption at ultimate pressure	W	20	20	20	20
Type of protection	IP	40	40	40	40
Interfaces		RS 485, USB, 15-pin digital I/O Upon request	RS 485, USB, 15-pin digital I/O Upon request	RS 485, USB, 15-pin digital I/O Upon request	RS 485, USB, 15-pin digital I/O Upon request
Other interfaces					
Accessory connection		1 pcs. M 8 connector 24 V DC	1 pcs. M 8 connector 24 V DC	1 pcs. M 8 connector 24 V DC	1 pcs. M 8 connector 24 V DC
Weight ISO-K / CF	kg (lbs)	7.5 / 11.5 (16.5 / 25.4)	7.7 / 12.5 (17.0 / 27.6)	7.0 / 11.0 (15.4 / 14.3)	7.2 / 12.0 (15.9 / 26.5)

**Additional Technical Data for the
Frequency Converter (iX Version)**
TURBOVAC

		350 iX	450 iX	T 350 iX	T 450 iX
Technical Data for the integrated Drive Electronics and Vacuum System Controller					
Supply voltage	V DC	24/48 ±10%	24/48 ±10%	24/48 ±10%	24/48 ±10%
Max. current consumption	A	10 at 24 V DC	10 at 24 V DC	10 at 24 V DC	10 at 24 V DC
Max. power consumption	W	240	240	240	240
Power consumption at ultimate pressure	W	20	20	20	20
Type of protection	IP	40	40	40	40
Interfaces		USB+, 15 pin standard, Anybus (either RS 485, RS 232, Profibus, ...)	USB+, 15 pin standard, Anybus (either RS 485, RS 232, Profibus, ...)	USB+, 15 pin standard, Anybus (either RS 485, RS 232, Profibus, ...)	USB+, 15 pin standard, Anybus (either RS 485, RS 232, Profibus, ...)
Accessory connections		3 pcs. M 8 connector 24 V DC	3 pcs. M 8 connector 24 V DC	3 pcs. M 8 connector 24 V DC	3 pcs. M 8 connector 24 V DC
Max. load for the 24 V DC output (cooler or valve supply)	V / W	24 / max. 12	24 / max. 12	24 / max. 12	24 / max. 12
Gauge head connection		15-way Sub-D	15-way Sub-D	15-way Sub-D	15-way Sub-D
Weight ISO-K / CF	kg (lbs)	8.0 / 12.0 (17.6 / 26.5)	8.2 / 13.0 (18.1 / 28.7)	7.5 / 11.5 (16.5 / 25.4)	7.7 / 12.5 (17.0 / 27.6)

Ordering Information

TURBOVAC

	Wide Range		Classic	
	350 i	450 i	T 350 i	T 450 i
TURBOVAC	Part No.	Part No.	Part No.	Part No.
with integrated frequency converter, RS 485, USB+ and 15-Pin digital I/O interface				
DN 100 ISO-K	830051V1000	—	830050V1000	—
DN 100 CF	830061V1000	—	830060V1000	—
DN 160 ISO-K	—	830071V1000	—	830070V1000
DN 160 CF	—	830081V1000	—	830080V1000
other interfaces	Upon request	Upon request	Upon request	Upon request

Ordering Information

TURBOVAC


	Wide Range		Classic	
	350 iX	450 iX	T 350 iX	T 450 iX
TURBOVAC	Part No.	Part No.	Part No.	Part No.
with integrated frequency converter and vacuum system controller, RS 485, USB+ and 15-Pin digital I/O interface				
DN 100 ISO-K	830051V3300	—	830050V3300	—
DN 100 CF	830061V3300	—	830060V3300	—
DN 160 ISO-K	—	830071V3300	—	830070V3300
DN 160 CF	—	830081V3300	—	830080V3300
other interfaces	Upon request	Upon request	Upon request	Upon request

Ordering Information

TURBOVAC (T)

350 i, iX / 450 i, iX

Mandatory Accessories	P PS	Part No.
Power supply TURBO.POWER integra, including 0.3 (1.1 ft) long cable		800100V0003
Mains cable, 3 m (10.5 ft)		
EU plug		800102V0002
UK plug		800102V0003
US plug 5-15P, 115 V		800102V1002
Cable pump - TURBO.POWER integra		
1 m (3.5 ft)		800096V0100
3 m (10.5 ft)		800096V0300
5 m (17.5 ft)		800096V0500
Mounting kit TURBOVAC		
DN 100 ISO-K		800134V0020
DN 160 ISO-K		800134V0030
DN 100 ISO-K auf ISO-F		800134V0025
DN 160 ISO-K auf ISO-F		800134V0035
DN 100 CF		800134V0021
DN 160 CF		800134V0031
Forevacuum pump		
TRIVAC D 4 B		
TRIVAC D 16 B		
see Catalog Part „Oil Sealed Vacuum Pumps“		
SCROLLVAC SC 5 D		
SCROLLVAC SC 15 D		
DIVAC 3.8 HV3		
see Catalog Part „Dry Compressing Vacuum Pumps“		

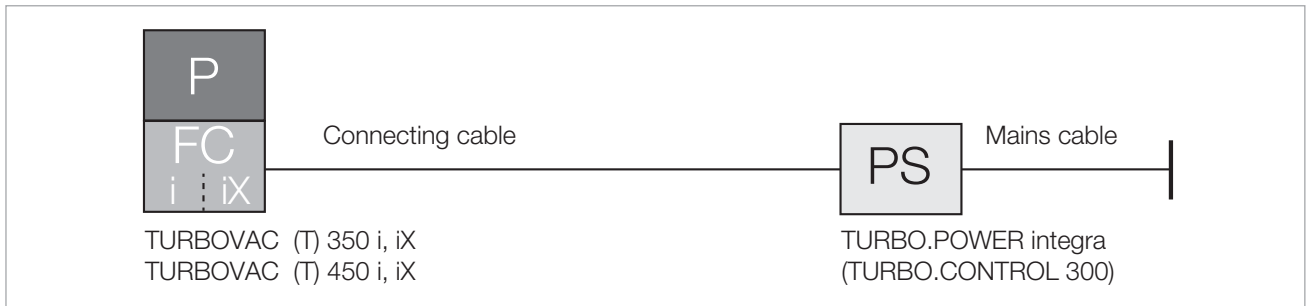

Ordering Information

TURBOVAC (T) 350 i / 450 i

Accessories, optional	P	Part No.
Power supply, cable, other accessories		
Power supply and control unit TURBO.CONTROL 300		800100V0001
Cable pump - TURBO.CONTROL 300		
1 m (3.5 ft)		800092V0100
3 m (10.5 ft)		800092V0300
5 m (17.5 ft)		800092V0500
10 m (35 ft)		800092V1000
20 m (70 ft)		800092V2000
24/48 V DC In plug TURBOVAC		800090V0000
USB cable 2.0, Type A/B, 1.8 m (6.3 ft) long		800110V0108
Y cable M 8		800110V0020
Relay box for forevacuum pump, 1-phase, 10 A		800110V0030
Start stop switch		800110V0021
Cooling		
Air cooler TURBOVAC 350/450 i		
radial		800136V0005
axial		800136V0006
Water cooling TURBOVAC 350/450 i		800135V0005
Venting and purge gas		
Venting valve, 24 V DC, G 1/8"		800120V0012
Power failure venting valve, 24 V DC, G 1/8"		800120V0022
Purge gas valve, 24 V DC, G 1/8", 24 sccm		800120V0013
Purge gas throttle, 24 sccm		800120V0014
Air filter, G 1/8"		800110V0022
Heating		
Flange heater		
DN 100 CF, 230 V		800137V0005
DN 100 CF, 115 V		800137V0006
DN 160 CF, 230 V		800137V0007
DN 160 CF, 115 V		800137V0008
Mains cable, 3 m (10.5 ft) (for connection of the heating collar)		
EU-plug		800102V0002
UK-plug		800102V0003
US-plug 5-15P, 115 V		800102V1002
Vibration absorber		
DN 100 ISO-K		800131V1100
DN 160 ISO-K		500073
DN 100 CF		500071
DN 160 CF		500072
Centering ring		
with fine inlet screen, 0.8 mm (0.03") mesh		
DN 100 ISO-K/F		800133V0022
DN 160 ISO-K/F		800133V0032
with coarse inlet screen, 3.2 mm (0.13") mesh		
DN 100 ISO-K/F		800133V0021
DN 160 ISO-K/F		800133V0031
Fine Inlet screen, 0.8 mm (0.03") mesh		
DN 100 CF		800132V0022
DN 160 CF		800132V0032
Coarse inlet screen, 3.2 mm (0.13") mesh		
DN 100 CF		800132V0021
DN 160 CF		800132V0031
Included in the Delivery of the Pump		
High and forevacuum flanges are protective-capped		
The flange mounting components and the inlet screen are not included in the delivery		

Special Turbomolecular Pumps



TURBOVAC i Multi Inlet Cartridge

Precision is key when it comes to analytical instruments.

Outfitted with two or more inlets, the innovative turbopumps with integrated drive electronics provide extraordinary pumping performance and are adaptable to the system requirements of each instrument.

In combination with our support for the whole vacuum system design, it will result in the best possible level of pump system integration you have ever experienced.



The TURBOVAC 350-400 i Multi Inlet line has been especially developed to meet the requirements of analytical instruments and features an extremely high level of flexibility, allowing you to choose the number, height and position of the multiple vacuum ports. The result: a pump that is perfectly fitted to your specific performance needs and installation requirements.

Additionally, we offer the support and experience in vacuum system design which opens a wide range of possibilities, from the adaptation of the pump housing to your vacuum chamber through to the design of a custom-built housing/chamber that meets your particular needs. Your benefit: optimum system integration of the pump(s) into your instrument and a reduced time to market.

Your Advantage

- Perfect integration of the pump(s) within your instrumentation
- Cutting of system costs
- Smaller size of the analytical system
- Reduction in the number of individual vacuum components
- Choice between cartridge and custom pump housing

In order to simplify installation, operation and control, all TURBOVAC i variants feature an integrated electronic drive with 24/48 V DC supply and a detachable operator interface with USB, RS 485 and digital I/O connections.

Performance

- Industry-leading pumping speed especially for light gases (up to 60 % higher than existing products)
- Optimized rotor diameter to provide maximum pumping performance
- > 40 l/s pumping speed at Interstage port 2

Flexibility

- Vacuum port design flexibility
 - Rotatable fore-vacuum port
 - Multiple interstage ports
 - High level of flexibility in terms of height and position of vacuum ports
- Unique cartridge solutions for optimized system integration with fast and simple field replacement
- Special pump housing solutions adapted to your instrument
- Complete vacuum system design including your vacuum chamber
- Variable rotor and Holweck design to adapt the performance to your application



Installation, operation and control

- Integrated 24/48 V DC drive electronics to avoid expensive cabling
- Widest range of communication interfaces: USB, RS 485 and remote 15 pin digital I/O as standard options
- Highly efficient motor
- Thermal isolation by design for optimized cooling of bearing and improved pump lifetime
- Simply-supported shaft reduces vibration
- Maintenance free upper passive magnetic bearing
- Oil free, lifetime lubricated lower mechanical ceramic ball bearing, field-replaceable

Outstanding performance

Thanks to its variable rotor and drag stage design, our new Multi Inlet product line provides the highest performance for all mass spectrometer applications. With increased pumping speed levels especially for light gases which are up to 60% higher than those

offered by other products currently on the market, it provides significant advantages for your instruments: lower pressures, improved detection sensitivity levels and higher sample throughput rates.

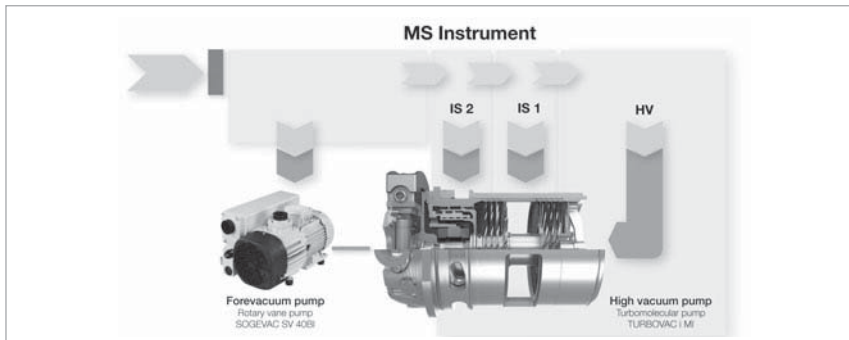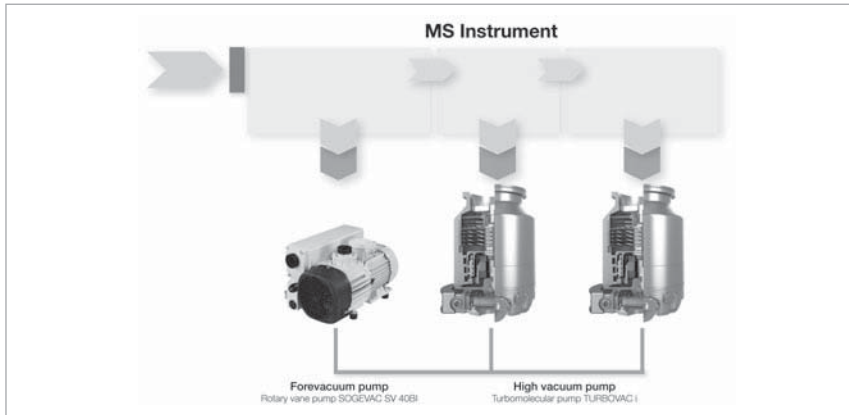

Superior reliability

The unique maintenance and oil free hybrid bearing system is characterized by its extreme reliability and durability – that's because we equipped it with an innovative lifetime lubrication system that never needs an oil change. The simply-supported shaft system results in a low vibration pump design which reduces noise, mechanical stress and negative impact on vibration sensitive applications. Optimized cool-

ing of the bearings is ensured through thermal isolation and the highly efficient motor. To protect the bearings from critical gases or particles, all pumps are equipped with a purge port. As a consequence, not only pump lifetime is increased significantly, but also system uptime as well as productivity. In combination with low costs of ownership, the operation of your vacuum system will be more efficient than ever.

Advantages to the User

- High gas throughput
- High effective pumping speed
- High efficiency for analytical instruments
- High detection sensitivity
- High sample throughput
- Free of hydrocarbons
- Hybrid bearing suspension for low vibration levels
- Space and weight saving
- Low component count
- Favourable price-to-performance ratio
- Installation and user friendly
- Practically maintenance free

Typical Applications

For example

- LC-MS (linking of a liquid chromatograph to a mass spectrometer)
- GC/MS (linking of a gas chromatograph to a mass spectrometer)
- TOF-MS (time-of-flight mass spectrometer)
- ICP-MS (inductively coupled plasma mass spectrometry)
- Helium leak detectors

Technical Features

- Dual Inlet (pumping down of two analysis chambers)
- Triple inlet (pumping down of three analysis chambers)
- High effective pumping speed

HV stage	up to 400 l/s
Interstage IS 1	up to 300 l/s
Interstage IS 2	up to 50 l/s
- Cartridge solutions (without pump housing) are available
- Compact vacuum system

Customized versions are available upon request


Mechanical Rotor Suspension without Compound Stage

TURBOVAC 50



Typical Applications


- Leak detectors
- Mass spectrometers
- Electron beam microscopy
- TV tube manufacturing
- Load locks and transfer chambers
- High vacuum chambers

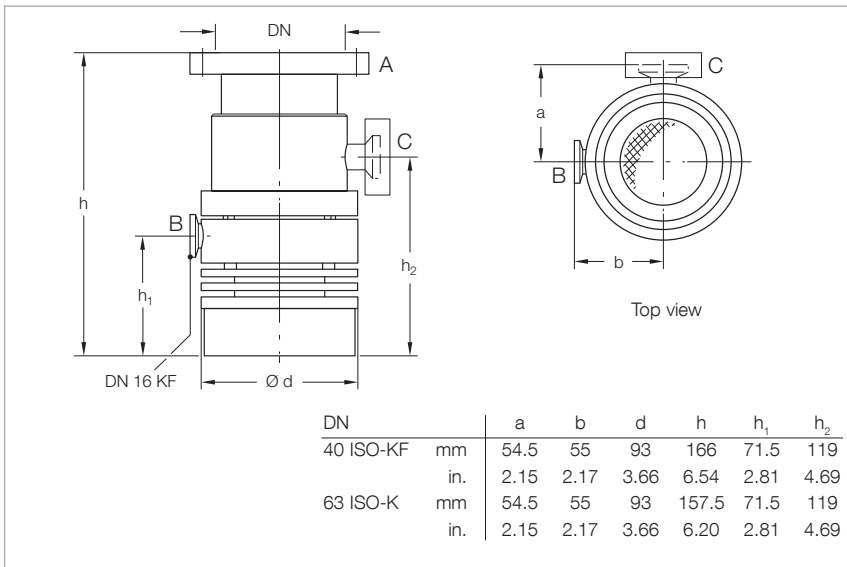

Dimensional drawing for the TURBOVAC 50

Technical Features

- Small footprint
- Installation in any orientation
- Cooling by convection is sufficient for most applications
- Air and water cooling can be added easily
- Oil-free pump for generating clean high and ultra-high vacuum conditions

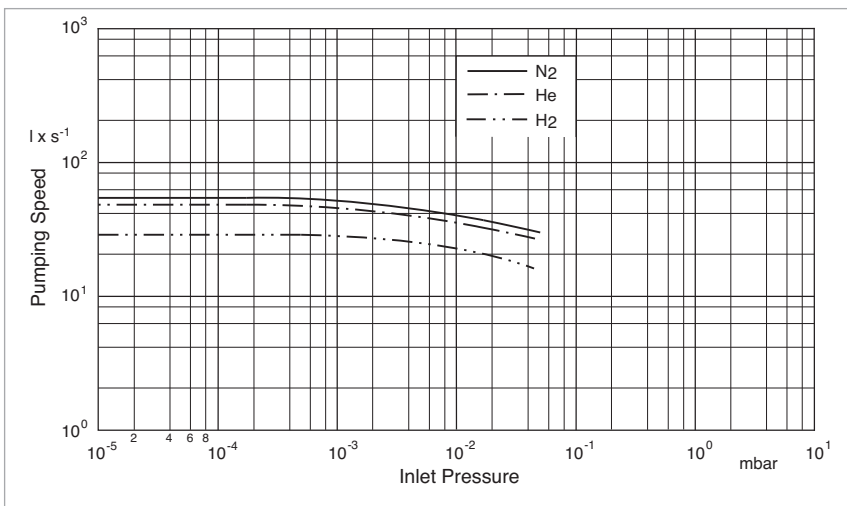

Pumping speed as a function of the inlet pressure (TURBOVAC 50 with flange DN 63 ISO-K)

Advantages to the User

- Space-saving
- Easy to integrate into complex vacuum systems
- Low operating costs
- Highly reliable operation also in processes loaded with particles

Technical Data

TURBOVAC 50

Connection			
Inlet	DN	40 ISO-KF • 40 CF	63 ISO-K • 63 ICF
Outlet	DN	16 ISO-KF	16 ISO-KF
Pumping speed			
N ₂	l x s ⁻¹	33	55
Ar	l x s ⁻¹	30	50
He	l x s ⁻¹	36	48
H ₂	l x s ⁻¹	28	30
Gas throughput			
N ₂	mbar · l x s ⁻¹	0.90	1.00
Ar	mbar · l x s ⁻¹	0.70	0.80
He	mbar · l x s ⁻¹	0.30	0.40
H ₂	mbar · l x s ⁻¹	0.25	0.30
Compression ratio			
N ₂		2 x 10 ⁶	2 x 10 ⁶
Ar		2 x 10 ⁶	2 x 10 ⁶
He		5 x 10 ²	5 x 10 ²
H ₂		2 x 10 ²	2 x 10 ²
Ultimate pressure	mbar (Torr)	< 5 x 10 ⁻⁸ (< 3.8 x 10 ⁻⁹)	< 5 x 10 ⁻⁸ (< 3.8 x 10 ⁻⁹)
Max. foreline pressure for N ₂	mbar (Torr)	1 x 10 ⁻¹ (7.5 x 10 ⁻²)	1 x 10 ⁻¹ (7.5 x 10 ⁻²)
Recommended forevacuum pump		TRIVAC D 2,5 E	TRIVAC D 2,5 E
Nominal rotation speed	min ⁻¹ (rpm)	72 000	72 000
Run-up time, approx.	min	2	2
Max. power consumption	W	45	45
Power consumption at ultimate pressure	W	15	15
Admissible ambient temperature	°C (°F)	+10 to +55 (+50 to +131)	+10 to +55 (+50 to +131)
Cooling			
standard		Convection	Convection
optional		Air / Water	Air / Water
Cooling water connection		10 mm hose nozzle	10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	15 to 25	15 to 25
Permissible cooling water pressure	bar	3 to 7	3 to 7
Permissible cooling water temperature	°C (°F)	+10 to +35 (+50 to +95)	+10 to +35 (+50 to +95)
Weight	kg (lbs)	2.0 (4.4)	2.0 (4.4)



Technical Data


TURBOTRONIK NT 10

Mains connection	50/60 Hz	100-120 or 200-240 V
Max. power consumption	W	45
Max. output voltage	V	3 x 150
Max. output current	A	6
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +40 (+32 to +104)
Dimensions (W x H x D)	mm (in.)	106 x 128 x 233 (4.17 x 5.04 x 9.17)
Weight, approx.	kg (lbs)	1.5 (3.3)

Ordering Information

TURBOVAC 50

TURBOVAC 50 without Compound Stage	P	Part No.	
DN 40 ISO-KF, convection DN 40 CF, convection DN 63 ISO-K, convection DN 63 CF, convection		854 00 853 99 854 01 854 02	
Mandatory Accessories		FC	PS
Electronic frequency converter TURBOTRONIK NT 10 with EURO plug, 180-240 V with US plug, 90-140 V		859 00 859 01	
Connecting cable converter – TURBOVAC 1.0 m (3.5 ft) 3.0 m (10.5 ft) 5.0 m (17.5 ft) 10.0 m (35.0 ft) 20.0 m (70.0 ft)		200 11 609 121 08 121 09 161 10 800150V2000	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V, 200-240 V, 50/60 Hz; without plug, world version 110-120 V, 50/60 Hz; NEMA plug, US version 100 V, 50/60 Hz; NEMA plug, Japan version		140 000 140 001 140 002 140 003	
For further types, see Catalog Part “Oil sealed Vacuum Pumps”			

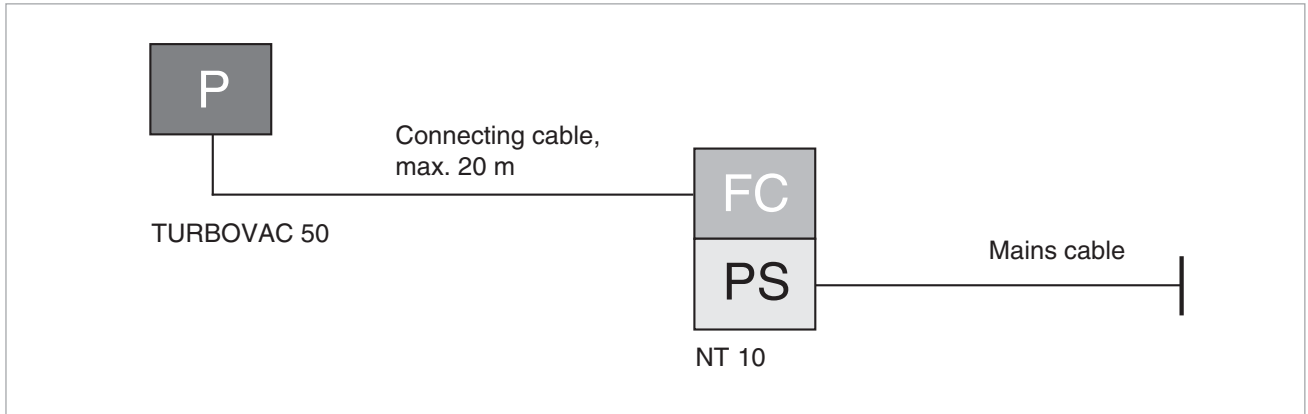

Ordering Information

TURBOVAC 50

Accessories, optional	Part No.
Air cooling unit 230 V AC 100 - 115 V AC	854 05 800152V0015
Water cooling kit (hose nozzles \varnothing 10 mm (0.4 in.))	800135V0003
Vibration absorber DN 63 ISO-K	800131V0063
Solenoid venting valve, normally closed 24 V DC, DN 16 ISO-KF	800120V0011
Power failure venting valve, normally open 24 V DC, DN 16 ISO-KF	800120V0021
Included in the Delivery of the Pump P	
Inlet screen, centering ring with FPM sealing ring, outer ring	ISO-K
Inlet screen, centering ring with FPM O-ring, clamping ring	ISO-KF
Centering ring with O-ring, clamping ring	Foreline Flange
Included in the Delivery of the Frequency Converter FC PS	
Mains cable	

Mechanical Rotor Suspension without Compound Stage


TURBOVAC 151, 151 C ClassicLine




Turbomolecular pumps without a purge gas facility are only suited for pumping of air or inert gases. They are not suited for pumping of aggressive or reactive gases.

TURBOVAC pumps with a "C" in the type designation are equipped with a purge gas facility.

The purge gas protects the bearing area and the motor of the TURBOVAC.

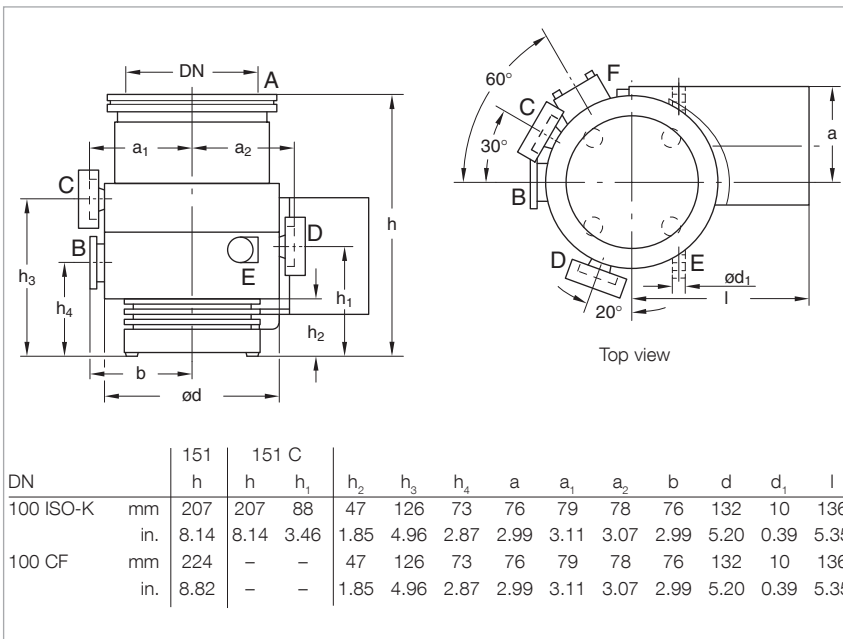

Dimensional drawing for the TURBOVAC 151 and 151 C

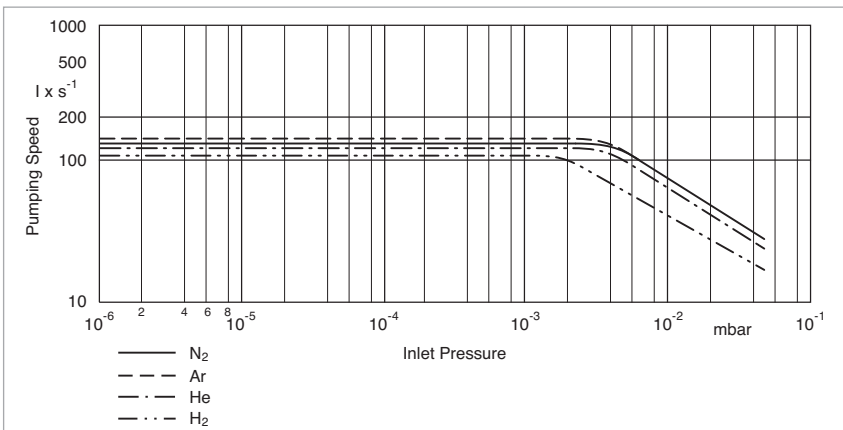

Pumping speed as a function of the inlet pressure (TURBOVAC 151 with flange DN 100)

Typical Applications

- Leak detectors
- Mass spectrometers
- Optical coating
- R & D
- UHV systems
- Particle accelerators
- Load locks and transfer chambers

Technical Features

- Small footprint
- Operation in any orientation
- Oil-free pump for generating clean high and ultra-high vacuum conditions
- Bearing temperature measurement through the TURBO.DRIVE TD 20 *classic*

Advantages to the User

- Space-saving
- Easy to integrate into complex vacuum systems
- Low operating costs
- Highly reliable operation also in processes loaded with particles

Technical Data

TURBOVAC 151 (C)

Connection			
Inlet	DN	100 ISO-K	100 CF
Outlet	DN	25 ISO-KF	25 ISO-KF
Pumping speed			
N ₂	l x s ⁻¹	145	145
Ar	l x s ⁻¹	150	150
He	l x s ⁻¹	135	135
H ₂	l x s ⁻¹	115	115
Gas throughput			
N ₂	mbar · l x s ⁻¹	1.5	1.5
Ar	mbar · l x s ⁻¹	1.3	1.3
He	mbar · l x s ⁻¹	1.5	1.5
H ₂	mbar · l x s ⁻¹	1.0	1.0
Compression ratio			
N ₂		1 x 10 ⁹	1 x 10 ⁹
Ar		1 x 10 ⁹	1 x 10 ⁹
He		2 x 10 ⁴	2 x 10 ⁴
H ₂		8 x 10 ²	8 x 10 ²
Ultimate pressure	mbar (Torr)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)
Max. foreline pressure for N ₂	mbar (Torr)	5 x 10 ⁻¹ (3.8 x 10 ⁻¹)	5 x 10 ⁻¹ (3.8 x 10 ⁻¹)
Recommended forevacuum pump		from TRIVAC D 4 B to D 16 B	from TRIVAC D 4 B to D 16 B
Nominal rotation speed	min ⁻¹ (rpm)	50 000	50 000
Run-up time, approx.	min	2	2
Max. power consumption	W	300	300
Power consumption at ultimate pressure	W	70	70
Admissible ambient temperature	°C (°F)	10 to 55 (50 to 131)	10 to 55 (50 to 131)
Cooling			
standard		Water	Water
optional		Air	Air
Cooling water connection		10 mm hose nozzle	10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	15 to 35	15 to 35
Permissible cooling water pressure	bar	3 to 7	3 to 7
Permissible cooling water temperature	°C (°F)	10 to 25 (50 to 77)	10 to 25 (50 to 77)
Weight	kg (lbs)	8 (17)	8 (17)



Technical Data

TURBO.DRIVE TD 20 *classic*


Mains connection	50/60 Hz	100 to 240 V (+15 % / -10 %)
Max. power consumption	W	500
Max. output voltage	V	3 x 47
Max. output current	A	5
Interface		Without, RS 232 C, RS 485 C, Profibus or 25-way terminal strip
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	213 x 128 x 315 (8.39 x 5.04 x 12.40)
Weight, approx.	kg (lbs)	4.0 (8.8)

Ordering Information

TURBOVAC 151 (C)

TURBOVAC 151 (C) without Compound Stage	P	Part No.		
DN 100 ISO-K, water-cooled DN 100 ISO-K, water-cooled (C version) DN 100 CF, water-cooled DN 100 CF, water-cooled (C version)		856 31 856 35 856 32 103 41		
Mandatory Accessories		FC	PS	
TURBO.DRIVE TD 20 ^{classic} without interface with RS 232 C interface with RS 485 C interface with Profibus with 25-pol I/O		800075V0001 800075V0002 800075V0004 800075V0003 800075V0005		
Connecting cable TURBOVAC - frequency converter 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft) 50 m (175.0 ft) 60 m (210.0 ft) 80 m (280.0 ft) 140 m (490.0 ft)		857 65 857 66 857 67 857 68 800152V0008 800152V0007 800152V0080 800152V0140		
Mains cable 3 m (10.5 ft) EURO plug UK plug US plug 5-15 P 2 m (7.5 ft) US plug 115 V AC		800102V0002 800102V0003 800102V1002 992 76 513		
Forevacuum pump TRIVAC D 4 B 1 phase motor; 230 V, 50 Hz 1 phase dual voltage motor; 100-120 V / 200-240 V; 50/60 Hz		112 45 140 081 ¹⁾		
TRIVAC D 8 B 1 phase motor; 230 V, 50 Hz 1 phase dual voltage motor; 100-220 V / 200-240 V; 50/60 Hz		112 55 140 082 ¹⁾		
TRIVAC D 16 B 1 phase motor; 230 V, 50 Hz 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 200-240 V/380-400 V, 50 Hz / 200-240 V/380-480 V, 60 Hz		112 65 113 25 112 66		
SCROLLVAC SC 30 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz 3 phase motor; 380-415 V, 50 Hz / 200-230 V, 460 V 60 Hz		133 002 133 102 133 004		
For further types, see Catalog Parts "Oil Sealed Vacuum Pumps" and "Dry Compressing Vacuum Pumps"				

¹⁾ The mains cord (Part No. 200 81 091) must be ordered additionally

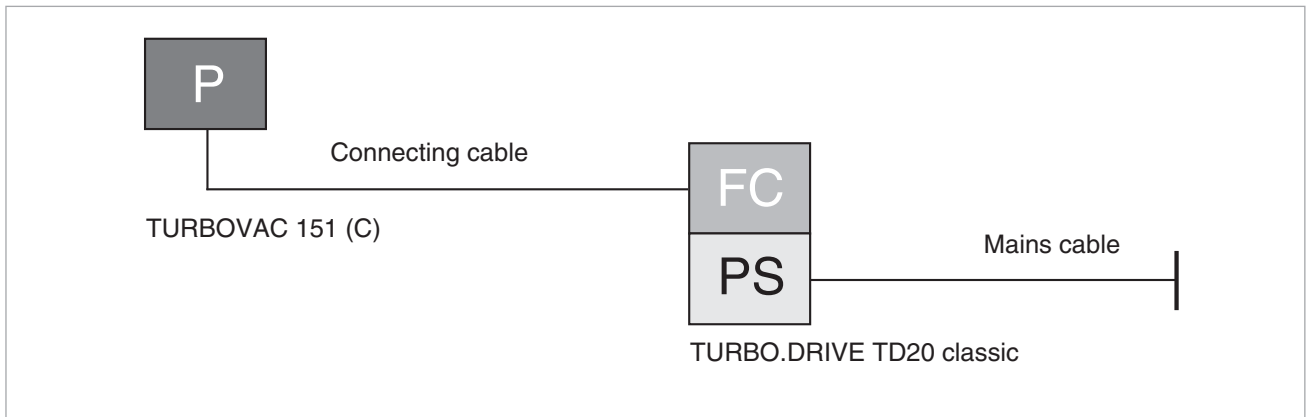

Ordering Information

TURBOVAC 151 (C)

Accessories, optional	Part No.
Air cooling unit 230 V AC 100 - 115 V AC	855 31 800152V0016
Flange heater DN 100 CF, 230 V, 50 Hz DN 100 CF, 115 V, 60 Hz	854 27 854 28
Vibration absorber DN 100 ISO-K DN 100 CF	800131V0100 500 071
Solenoid venting valve, with gas admission filter, normally closed 24 V DC, DN 16 ISO-KF	800120V0011
Power failure venting valve, with gas admission filter, normally open 24 V DC, DN 16 ISO-KF	800120V0021
Purge gas and venting valve gas flow at 1 bar 0.4 mbar x l x s ⁻¹ (24 sccm), pump connection DN 10 ISO-KF / gas connection G 1/4" 230 V AC 100 - 115 V AC 24 V DC	800152V0014 800152V0041 800152V0013
Gas filter to G 1/4" for purge gas and venting valve	800110V0012
Replacement filter (for gas filter to G 1/4" for purge gas and venting valve)	E 200 18 515
Included in the Delivery of the Pump	P
Inlet screen, centering ring with FPM sealing ring, outer ring	ISO-K
Inlet screen	CF
Centering ring with O-ring, clamping ring	Foreline Flange
Pivoted threaded fittings to replace the included hose nipples	Water Cooling

Mechanical Rotor Suspension without Compound Stage

TURBOVAC 361, 361 C ClassicLine




Turbomolecular pumps without a purge gas facility are only suited for pumping of air or inert gases.

They are not suited for pumping of aggressive or reactive gases.

TURBOVAC pumps with a "C" in the type designation are equipped with a purge gas facility.

The purge gas protects the bearing area and the motor of the TURBOVAC.

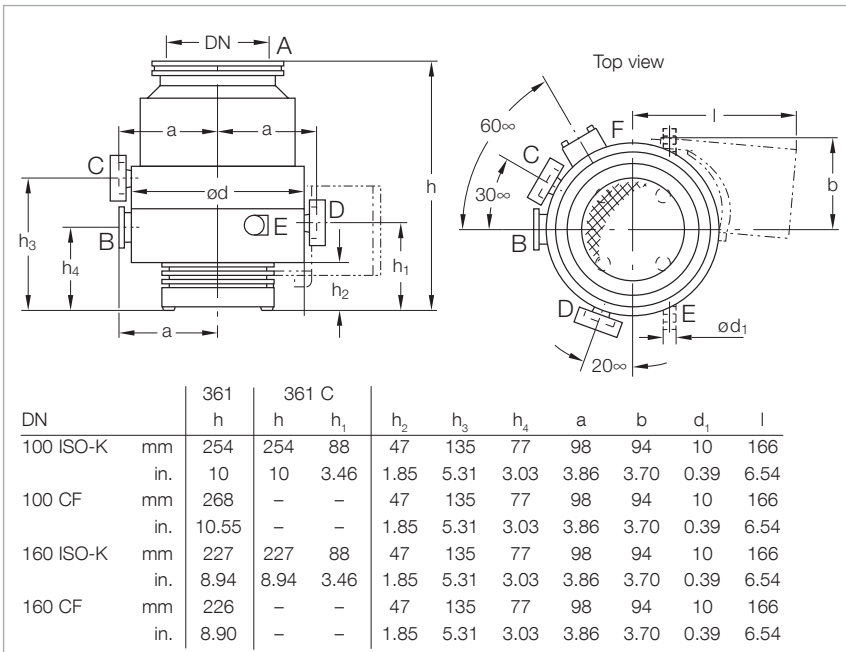


Dimensional drawing for the TURBOVAC 361 and 361 C

Typical Applications

- Leak detectors
- Mass spectrometers
- Data storage
- Optical coating
- R & D
- UHV systems
- Particle accelerators
- Load locks and transfer chambers

Technical Features

- Small footprint
- Installation in any orientation
- Oil-free pump for generating clean high and ultra-high vacuum conditions
- Bearing temperature measurement through the TURBO.DRIVE TD 20 *classic*

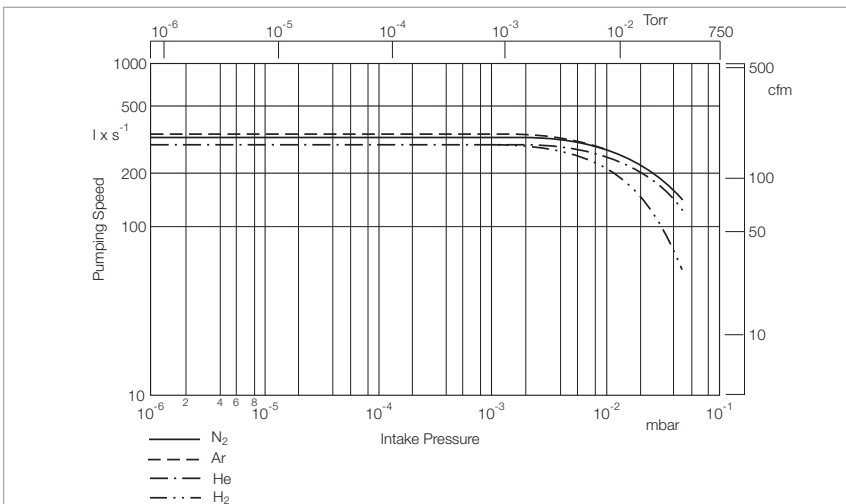

Pumping speed as a function of the inlet pressure (TURBOVAC 361 with flange DN 100)

Advantages to the User

- Space-saving
- Easy to integrate into complex vacuum systems
- Low operating costs
- Highly reliable operation also in processes loaded with particles

Technical Data

TURBOVAC 361 (C)

Connection			
Inlet	DN	100 ISO-K • 100 CF	160 ISO-K • 160 CF
Outlet	DN	25 ISO-KF	25 ISO-KF
Pumping speed			
N ₂	l x s ⁻¹	345	400
Ar	l x s ⁻¹	350	410
He	l x s ⁻¹	340	380
H ₂	l x s ⁻¹	340	370
Gas throughput			
N ₂	mbar · l x s ⁻¹	3.0	3.0
Ar	mbar · l x s ⁻¹	2.5	2.5
He	mbar · l x s ⁻¹	3.0	3.0
H ₂	mbar · l x s ⁻¹	2.0	2.0
Compression ratio			
N ₂		1 x 10 ⁹	1 x 10 ⁹
Ar		1 x 10 ⁹	1 x 10 ⁹
He		6 x 10 ⁴	6 x 10 ⁴
H ₂		3 x 10 ³	3 x 10 ³
Ultimate pressure	mbar (Torr)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)
Max. foreline pressure for N ₂	mbar (Torr)	5 x 10 ⁻¹ (4 x 10 ⁻¹)	5 x 10 ⁻¹ (3.8 x 10 ⁻¹)
Recommended forevacuum pump		from TRIVAC D 16 B to D 25 B	from TRIVAC D 16 B to D 25 B
Nominal rotation speed	min ⁻¹ (rpm)	45 000	45 000
Run-up time, approx.	min	2	2
Max. power consumption	W	300	300
Power consumption at ultimate pressure	W	70	70
Admissible ambient temperature	°C (°F)	10 to 55 (50 to 131)	10 to 55 (50 to 131)
Cooling			
standard		Water	Water
optional		Air	Air
Cooling water connection		10 mm hose nozzle	10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	15 to 35	15 to 35
Permissible cooling water pressure	bar	3 to 7	3 to 7
Permissible cooling water temperature	°C (°F)	10 to 25 (50 to 77)	10 to 25 (50 to 77)
Weight	kg (lbs)	12 (26)	12 (26)



Technical Data


TURBO.DRIVE TD 20 classic

Mains connection	50/60 Hz	100 to 240 V (+15 % / -10 %)
Max. power consumption	W	500
Max. output voltage	V	3 x 47
Max. output current	A	5
Interface		Without, RS 232 C, RS 485 C, Profibus or 25-way terminal strip
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	213 x 128 x 315 (8.39 x 5.04 x 12.40)
Weight, approx.	kg (lbs)	4.0 (8.8)

Ordering Information

TURBOVAC 361 (C)

TURBOVAC 361 (C) without Compound Stage	P	Part No.	
DN 100 ISO-K, water-cooled DN 100 ISO-K, water-cooled (C version) DN 100 CF, water-cooled DN 100 CF, water-cooled (C version) DN 160 ISO-K, water-cooled DN 160 ISO-K, water-cooled (C version) DN 160 CF, water-cooled		856 70 856 75 856 71 112 09 856 72 856 77 856 73	
Mandatory Accessories		FC	PS
TURBO.DRIVE TD 20 <small>classic</small> without interface with RS 232 C interface with RS 485 C interface with Profibus with 25-pol I/O		800075V0001 800075V0002 800075V0004 800075V0003 800075V0005	
Connecting cable TURBOVAC - frequency converter 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft) 50 m (175.0 ft) 60 m (210.0 ft) 80 m (280.0 ft) 140 m (490.0 ft)		857 65 857 66 857 67 857 68 800152V0008 800152V0007 800152V0080 800152V0140	
Mains cable 3 m (10.5 ft) EURO plug UK plug US plug 5-15 P 2 m (7.5 ft) US plug 115 V AC		800102V0002 800102V0003 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 16 B 1 phase motor; 230 V, 50 Hz 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 200-240 V/380-400 V, 50 Hz / 200-240 V/380-480 V, 60 Hz		112 65 113 25 112 66	
TRIVAC D 25 B 1 phase motor; 230 V, 50 Hz 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz		112 75 113 35 112 76	
SCROLLVAC SC 30 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz 3 phase motor; 380-415 V, 50 Hz / 200-230 V, 460 V, 60 Hz		133 002 133 102 133 004	
For further types, see Catalog Parts "Oil Sealed Vacuum Pumps" and "Dry Compressing Vacuum Pumps"			

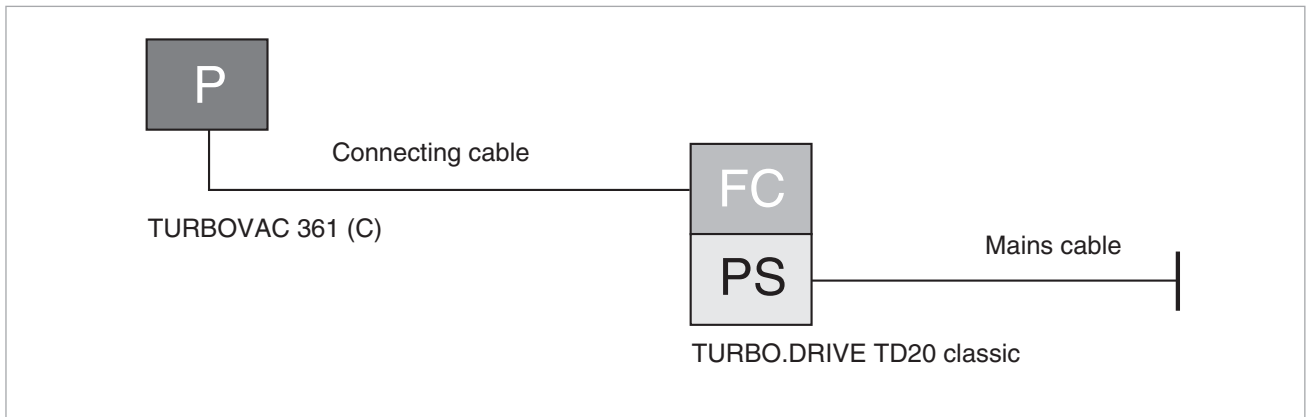

Ordering Information

TURBOVAC 361 (C)

Accessories, optional	Part No.
Air cooling unit 230 V AC 100 - 115 V AC	855 31 800152V0016
Flange heater DN 100 CF, 230 V, 50 Hz DN 100 CF, 115 V, 60 Hz DN 160 CF, 230 V, 50 Hz DN 100 CF, 115 V, 60 Hz	854 27 854 28 854 37 854 38
Vibration absorber DN 100 ISO-K DN 100 CF DN 160 ISO-K DN 160 CF	800131V0100 500 071 500 073 500 072
Solenoid venting valve, with gas admission filter, normally closed 24 V DC, DN 16 ISO-KF	800120V0011
Power failure venting valve, with gas admission filter, normally open 24 V DC, DN 16 ISO-KF	800120V0021
Purge gas and venting valve gas flow at 1 bar 0.4 mbar x l x s ⁻¹ (24 sccm), pump connection DN 10 ISO-KF / gas connection G 1/4" 230 V AC 100 - 115 V AC 24 V DC	800152V0014 800152V0042 800152V0013
Gas filter to G 1/4" for purge gas and venting valve	800110V0012
Replacement filter	E 200 18 515
Included in the Delivery of the Pump	P
Inlet screen, centering ring with FPM sealing ring, outer ring	ISO-K
Inlet screen	CF
Centering ring with O-ring, clamping ring	Foreline Flange
Pivoted threaded fittings to replace the included hose nipples	Water Cooling


Mechanical Rotor Suspension without Compound Stage

TURBOVAC 600 C ClassicLine



Typical Applications


- Load locks and transfer chambers
- Optical coating
- Flat panel displays
- R & D

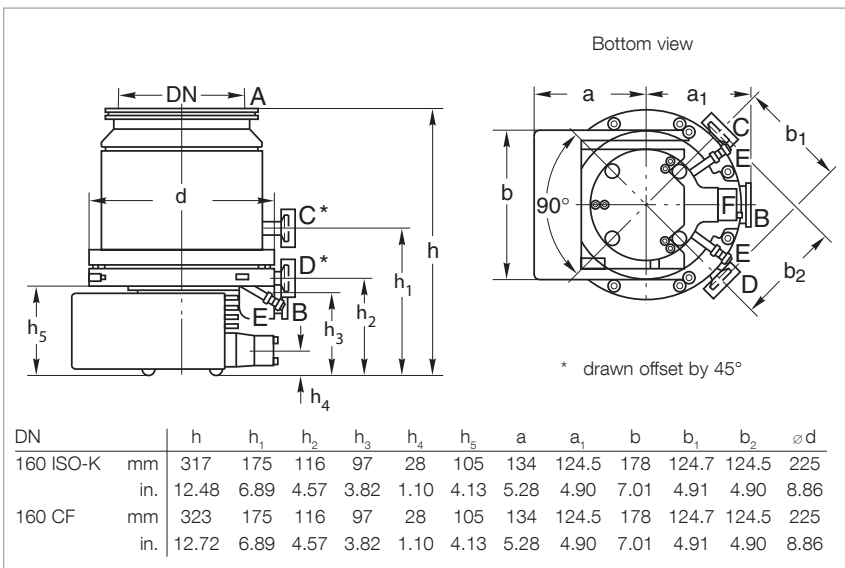

Dimensional drawing for the TURBOVAC 600 C

Technical Features

- Small footprint
- Installation in any orientation
- Oil-free pump for generating clean high and ultra-high vacuum conditions
- Bearing temperature measurement through the TURBO.DRIVE TD 20 *classic*
- Seal gas connection
- Venting connection

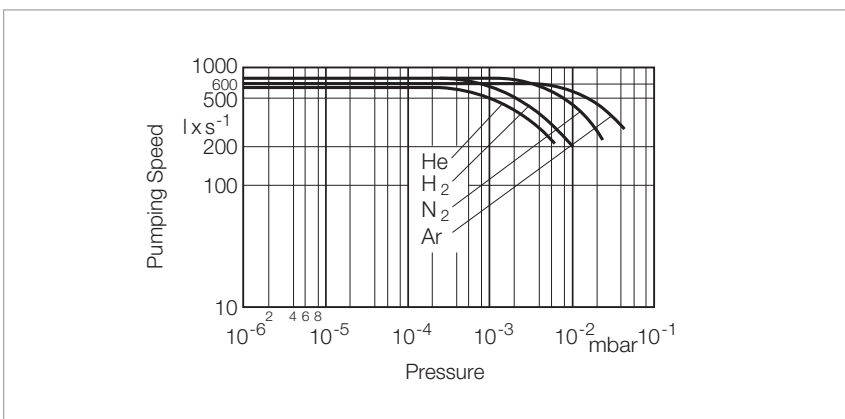

Pumping speed for different gases as a function of intake pressure (TURBOVAC 600 C with flange DN 160 ISO-K)

Advantages to the User

- Installation in any orientation
- Highly reliable due to hybrid ceramic ball bearings

Technical Data

TURBOVAC 600 C

Connection		
Inlet	DN	160 ISO-K • 160 CF
Outlet	DN	40 ISO-KF
Pumping speed		
N ₂	l x s ⁻¹	560
Ar	l x s ⁻¹	550
He	l x s ⁻¹	600
H ₂	l x s ⁻¹	570
Gas throughput		
N ₂	mbar · l x s ⁻¹	4.0
Ar	mbar · l x s ⁻¹	4.0
He	mbar · l x s ⁻¹	5.5
H ₂	mbar · l x s ⁻¹	4.0
Compression ratio		
N ₂		> 10 ⁹
Ar		> 10 ⁹
He		2.0 x 10 ⁴
H ₂		1.1 x 10 ³
Ultimate pressure	mbar (Torr)	< 1.0 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)
Max. foreline pressure for N ₂	mbar (Torr)	1.0 x 10 ⁻¹ (7.5 x 10 ⁻²)
Recommended forevacuum pump		TRIVAC D 25 B / D 40 B
Nominal rotation speed	min ⁻¹ (rpm)	36 000
Run-up time, approx.	min	3
Max. power consumption	W	400
Power consumption at ultimate pressure	W	90
Admissible ambient temperature	°C (°F)	10 to 55 (50 to 131)
Cooling		
standard		Water
optional		Air
Cooling water connection		10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	20 to 80
Permissible cooling water pressure	bar	3 to 7
Permissible cooling water temperature	°C (°F)	10 to 30 (50 to 86)
Weight	kg (lbs)	17.0 (37.5)



Technical Data


TURBO.DRIVE TD 20 *classic*

Mains connection	50/60 Hz	100 to 240 V (+15 % / -10 %)
Max. power consumption	W	500
Max. output voltage	V	3 x 47
Max. output current	A	5
Interface		Without, RS 232 C, RS 485 C, Profibus or 25-way terminal strip
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	213 x 128 x 315 (8.39 x 5.04 x 12.40)
Weight, approx.	kg (lbs)	4.0 (8.8)

Ordering Information

TURBOVAC 600 C

TURBOVAC 600 C without Compound Stage	P	Part No.	
DN 160 ISO-K, water-cooled DN 160 CF, water-cooled		800150V0015 800150V0017	
<div style="display: flex; justify-content: center; gap: 10px;"> FC PS </div>			
TURBO.DRIVE TD 20 <small>classic</small> without interface with RS 232 C interface with RS 485 C interface with Profibus with 25-pol I/O		800075V0001 800075V0002 800075V0004 800075V0003 800075V0005	
Connecting cable TURBOVAC - frequency converter 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft) 50 m (175.0 ft) 60 m (210.0 ft) 80 m (280.0 ft) 140 m (490.0 ft)		857 65 857 66 857 67 857 68 800152V0008 800152V0007 800152V0080 800152V0140	
Mains cable 3 m (10.5 ft) EURO plug UK plug US plug 5-15 P 2 m (7.5 ft) US plug 115 V AC		800102V0002 800102V0003 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 25 B 1 phase motor; 230 V, 50 Hz 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz;		112 75 113 35 112 76	
TRIVAC D 40 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 200/346 V, 50 Hz / 208/360 V, 60 Hz		112 86 113 47	
SCROLLVAC SC 30 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz 3 phase motor; 380-415 V, 50 Hz / 200-230 V, 460 V, 60 Hz		133 002 133 102 133 004	
For further types, see Catalog Parts "Oil Sealed Vacuum Pumps" and "Dry Compressing Vacuum Pumps"			

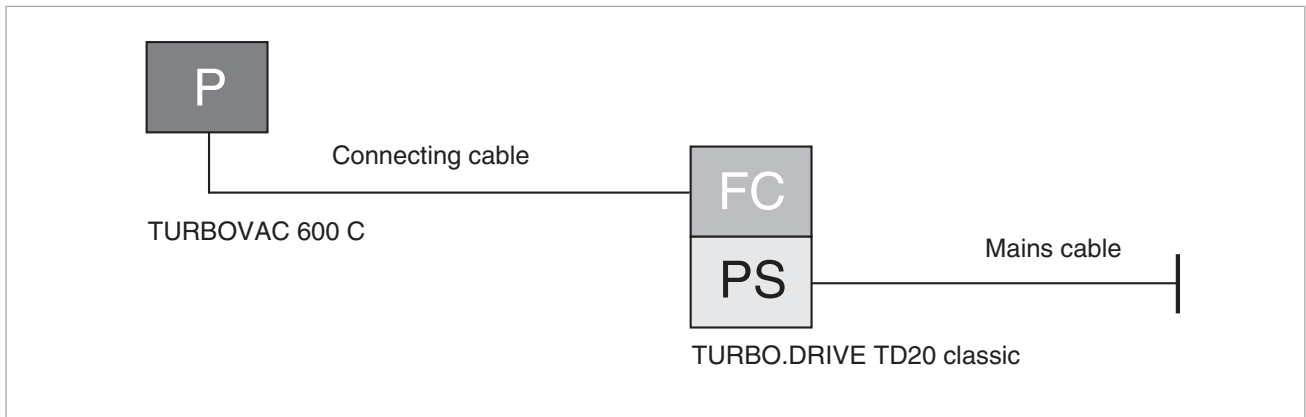

Ordering Information

TURBOVAC 600 C

Accessories, optional	Part No.
Air cooling unit 230 V AC 100 - 115 V AC	855 41 800152V0017
Flange heater DN 160 CF, 230 V, 50 Hz DN 100 CF, 115 V, 60 Hz	854 37 854 38
Vibration absorber DN 160 ISO-K DN 160 CF	500 073 500 072
Solenoid venting valve, with gas admission filter, normally closed 24 V DC, DN 16 ISO-KF	800120V0011
Power failure venting valve, with gas admission filter, normally open 24 V DC, DN 16 ISO-KF	800120V0021
Purge gas and venting valve gas flow at 1 bar 0.6 mbar x l x s ⁻¹ (36 sccm), pump connection DN 10 ISO-KF / gas connection G 1/4" 230 V AC 100 - 115 V AC 24 V DC	800152V0040 800152V0043 800152V0012
Gas filter to G 1/4" for purge gas and venting valve	800110V0012
Replacement filter	E 200 18 515
Included in the Delivery of the Pump	P
Inlet screen, centering ring with FPM sealing ring, outer ring	ISO-K
Inlet screen	CF
Centering ring with O-ring, clamping ring	Foreline Flange
Pivoted threaded fittings to replace the included hose nipples	Water Cooling


Mechanical Rotor Suspension without Compound Stage

TURBOVAC 1000 C ClassicLine




Typical Applications

- Research systems

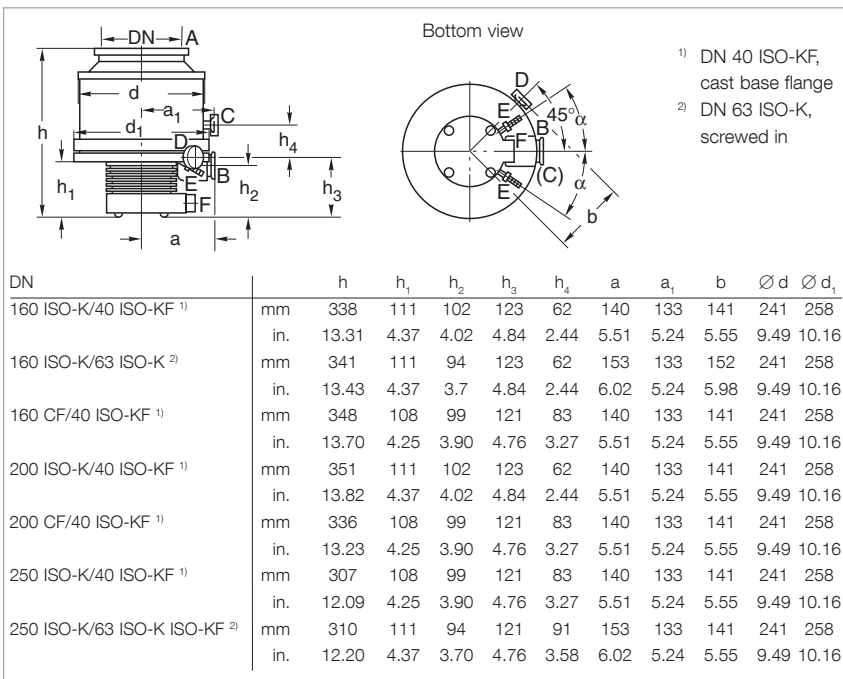

Dimensional drawing for the TURBOVAC 1000 C

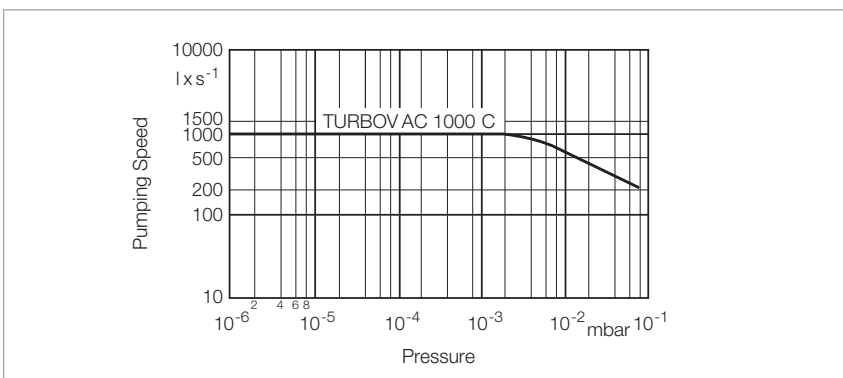

Pumping speed for air as a function of intake pressure (TURBOVAC 1000 C with DN 250 flange)

Technical Features

- Robust rotor design
- Installation in any orientation
- Highest pumping speed and highest throughput
- Bearing temperature measurement through the TURBO.DRIVE TD 20 *classic*
- Seal gas connection
- Venting connection

Advantages to the User

- Installation in any orientation
- Highly reliable due to hybrid ceramic ball bearings
- Standard model: water cooling
- Purge gas facility

Technical Data

TURBOVAC 1000 C

Connection				
Inlet	DN	160 ISO-K • 160 CF	200 ISO-K • 200 CF	250 ISO-K
Outlet	DN	40 ISO-KF • 63 ISO-K	40 ISO-KF	40 ISO-KF • 63 ISO-K
Pumping speed				
N ₂	l x s ⁻¹	850	1100	1150
Ar	l x s ⁻¹	810	1050	1100
He	l x s ⁻¹	880	975	1000
H ₂	l x s ⁻¹	900	970	1000
Gas throughput				
N ₂	mbar · l x s ⁻¹	6.5	6.5	6.5
Ar	mbar · l x s ⁻¹	4.0	4.0	4.0
He	mbar · l x s ⁻¹	7.0	7.0	7.0
H ₂	mbar · l x s ⁻¹	8.0	8.0	8.0
Compression ratio				
N ₂		> 1 x 10 ⁹	> 1 x 10 ⁹	> 1 x 10 ⁹
Ar		> 1 x 10 ⁹	> 1 x 10 ⁹	> 1 x 10 ⁹
He		5 x 10 ⁴	5 x 10 ⁴	5 x 10 ⁴
H ₂		1 x 10 ⁴	1 x 10 ⁴	1 x 10 ⁴
Ultimate pressure	mbar (Torr)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)	< 1 x 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)
Max. foreline pressure for N ₂	mbar (Torr)	5 x 10 ⁻² (3.8 x 10 ⁻²)	5 x 10 ⁻² (3.8 x 10 ⁻²)	5 x 10 ⁻² (3.8 x 10 ⁻²)
Recommended forevacuum pump for standard operation		TRIVAC D 25 B / D 40 B	TRIVAC D 25 B / D 40 B	TRIVAC D 25 B / D 40 B
for purge gas operation		TRIVAC D 40 B / D 65 B	TRIVAC D 40 B / D 65 B	TRIVAC D 40 B / D 65 B
Nominal rotation speed	min ⁻¹ (rpm)	36 000	36 000	36 000
Run-up time, approx.	min	9	9	9
Max. power consumption	W	300	300	300
Power consumption at ultimate pressure	W	200	200	200
Admissible ambient temperature	°C (°F)	10 to 55 (50 to 131)	10 to 55 (50 to 131)	10 to 55 (50 to 131)
Cooling				
standard		Water	Water	Water
optional		Air	Air	Air
Cooling water connection		10 mm hose nozzle	10 mm hose nozzle	10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	20 to 80	20 to 80	20 to 80
Permissible cooling water pressure	bar	3 to 7	3 to 7	3 to 7
Permissible cooling water temperature	°C (°F)	10 to 30 (50 to 86)	10 to 30 (50 to 86)	10 to 30 (50 to 86)
Weight	kg (lbs)	25.0 (55.1)	25.0 (55.1)	25 (55.1)



Technical Data


TURBO.DRIVE TD 20 classic

Mains connection	50/60 Hz	100 to 240 V (+15 % / -10 %)
Max. power consumption	W	500
Max. output voltage	V	3 x 47
Max. output current	A	5
Interface		Without, RS 232 C, RS 485 C, Profibus or 25-way terminal strip
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	213 x 128 x 315 (8.39 x 5.04 x 12.40)
Weight, approx.	kg (lbs)	4.0 (8.8)

Ordering Information

TURBOVAC 1000 C

TURBOVAC 1000 C without Compound Stage P	Part No.	
DN 160 ISO-K / DN 40 ISO-KF, water-cooled DN 160 ISO-K / DN 63 ISO-K, water-cooled DN 160 CF / DN 40 ISO-KF, water-cooled DN 200 ISO-K / DN 40 ISO-KF, water-cooled DN 200 CF / DN 40 ISO-KF, water-cooled DN 250 ISO-K / DN 40 ISO-KF, water-cooled DN 250 ISO-K / DN 63 ISO-K, water-cooled	855 35 855 38 854 91 153 00 117 64 855 36 855 39	
Mandatory Accessories FC PS		
TURBO.DRIVE TD 20 <small>classic</small> without interface with RS 232 C interface with RS 485 C interface with Profibus with 25-pol I/O	800075V0001 800075V0002 800075V0004 800075V0003 800075V0005	
Connecting cable TURBOVAC - frequency converter 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft) 50 m (175.0 ft) 60 m (210.0 ft) 80 m (280.0 ft) 140 m (490.0 ft)	857 65 857 66 857 67 857 68 800152V0008 800152V0007 800152V0080 800152V0140	
Mains cable 3 m (10.5 ft) EURO plug UK plug US plug 5-15 P 2 m (7.5 ft) US plug 115 V AC	800102V0002 800102V0003 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 25 B 1 phase motor; 230 V, 50 Hz 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz	112 75 113 35 112 76	
TRIVAC D 40 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 200/346 V, 50 Hz / 208/360 V, 60 Hz	112 86 113 47	
TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 230/346 V, 50 Hz / 208/360 V, 60 Hz	112 96 113 57	
SCROLLVAC SC 30 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz 3 phase motor; 380-415 V, 50 Hz / 200-230 V, 460 V, 60 Hz	133 002 133 102 133 004	
For further types, see Catalog Parts "Oil Sealed Vacuum Pumps" and "Dry Compressing Vacuum Pumps"		

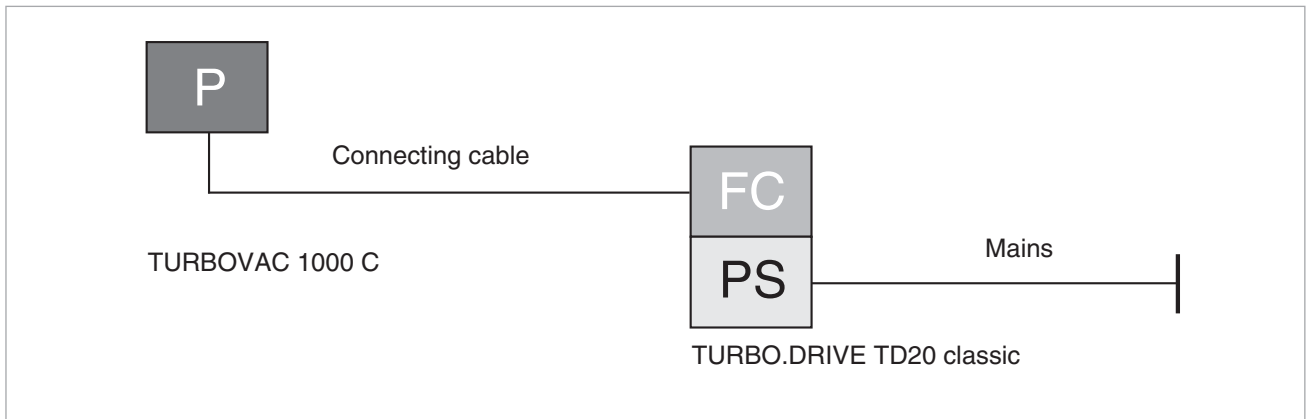

Ordering Information

TURBOVAC 1000 C

Accessories, optional	Part No.
Air cooling unit 230 V AC 100 - 115 V AC	855 41 800152V0017
Flange heater DN 160 CF, 230 V, 50 Hz DN 100 CF, 115 V, 60 Hz	854 37 854 38
Vibration absorber DN 160 ISO-K DN 160 CF	500 073 500 072
Solenoid venting valve, with gas admission filter, normally closed 24 V DC, DN 16 ISO-KF	800120V0011
Power failure venting valve, with gas admission filter, normally open 24 V DC, DN 16 ISO-KF	800120V0021
Purge gas and venting valve gas flow at 1 bar 0.6 mbar x l x s ⁻¹ (36 sccm), pump connection DN 10 ISO-KF / gas connection G 1/4" 230 V AC 100-115 V AC 24 V DC	800152V0040 800152V0043 800152V0012
Gas filter to G 1/4" for purge gas and venting valve	800110V0012
Replacement filter	E 200 18 515
Included in the Delivery of the Pump	P
Inlet screen, centering ring with FPM sealing ring, outer ring	ISO-K
Inlet screen	CF
Centering ring with O-ring, clamping ring	Foreline Flange
Pivoted threaded fittings to replace the included hose nipples	Water Cooling


Mechanical Rotor Suspension without Compound Stage

TURBOVAC 1100 C ClassicLine



Typical Applications


- Data storage
- Flat panel displays
- Optical coating
- Large area coating
- Load locks and transfer chambers

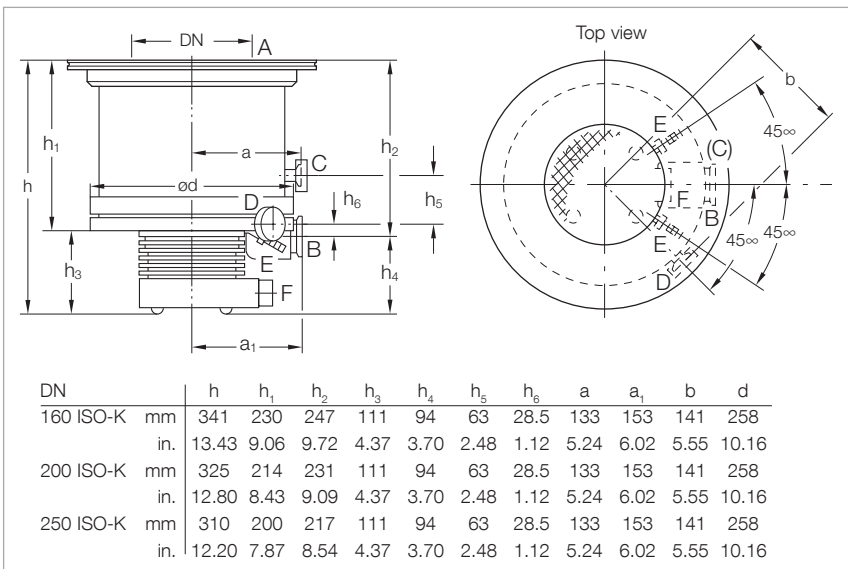

Dimensional drawing for the TURBOVAC 1100 C

Technical Features

- Robust rotor design
- Installation in any orientation
- Highest pumping speed and highest throughput
- Bearing temperature measurement through the TURBO.DRIVE TD 20 *classic*
- Oil-free pump for generating clean high and ultra-high vacuum conditions
- Seal gas connection
- Venting connection

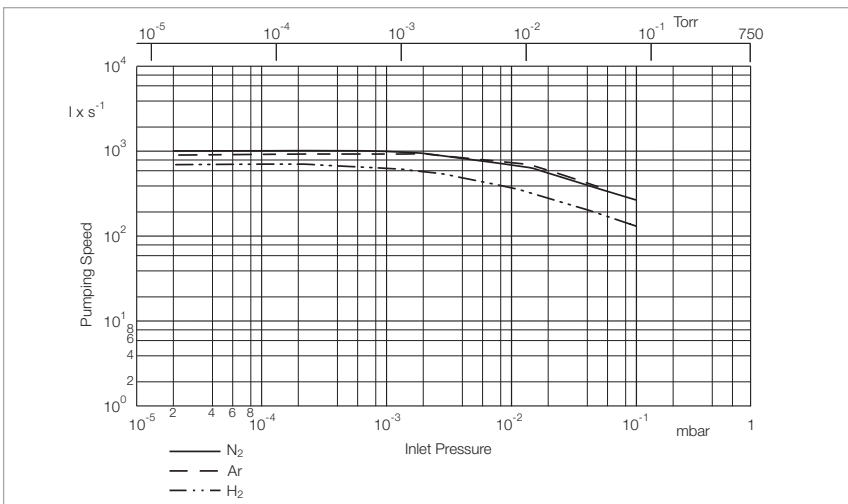

Pumping speed as a function of the inlet pressure (TURBOVAC 1100 C with flange DN 250)

Advantages to the User

- Space-saving
- Easy to integrate into complex vacuum systems
- High productivity
- Low operating costs
- Highly reliable operation also in processes loaded with particles

Technical Data

TURBOVAC 1100 C

Connection				
Inlet	DN	160 ISO-K	200 ISO-K	250 ISO-K
Outlet	DN	63 ISO-K	63 ISO-K	63 ISO-K
Pumping speed				
N ₂	l x s ⁻¹	710	830	1050
Ar	l x s ⁻¹	660	760	980
He	l x s ⁻¹	650	750	850
H ₂	l x s ⁻¹	520	600	630
Gas throughput				
N ₂	mbar · l x s ⁻¹	6.5	6.5	6.5
Ar	mbar · l x s ⁻¹	6.5	6.5	6.5
He	mbar · l x s ⁻¹	8.0	8.0	8.0
H ₂	mbar · l x s ⁻¹	9.0	9.0	9.0
Compression ratio				
N ₂		> 1 x 10 ⁷	> 1 x 10 ⁷	> 1 x 10 ⁷
Ar		> 1 x 10 ⁷	> 1 x 10 ⁷	> 1 x 10 ⁷
He		3 x 10 ⁴	3 x 10 ⁴	3 x 10 ⁴
H ₂		1 x 10 ³	1 x 10 ³	1 x 10 ³
Ultimate pressure	mbar (Torr)	< 3.0 x 10 ⁻¹⁰ (< 2.3 x 10 ⁻¹⁰)	< 3.0 x 10 ⁻¹⁰ (< 2.3 x 10 ⁻¹⁰)	< 3.0 x 10 ⁻¹⁰ (< 2.3 x 10 ⁻¹⁰)
Max. foreline pressure for N ₂	mbar (Torr)	< 1.0 x 10 ⁻¹ (< 7.5 x 10 ⁻²)	< 1.0 x 10 ⁻¹ (< 7.5 x 10 ⁻²)	< 1.0 x 10 ⁻¹ (< 7.5 x 10 ⁻²)
Recommended forevacuum pump		TRIVAC D 65 B / SCROLLVAC SC 15/30 D	TRIVAC D 65 B / SCROLLVAC SC 15/30 D	TRIVAC D 65 B / SCROLLVAC SC 15/30 D
Nominal rotation speed	min ⁻¹ (rpm)	30 000	30 000	30 000
Run-up time, approx.	min	9	9	9
Max. power consumption	W	400	400	400
Power consumption at ultimate pressure	W	300	300	300
Admissible ambient temperature	°C (°F)	10 to 55 (50 to 131)	10 to 55 (50 to 131)	10 to 55 (50 to 131)
Cooling				
standard		Water	Water	Water
optional		Air	Air	Air
Cooling water connection		10 mm hose nozzle	10 mm hose nozzle	10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	24 to 60	24 to 60	24 to 60
Permissible cooling water pressure	bar	3 to 7	3 to 7	3 to 7
Permissible cooling water temperature	°C (°F)	10 to 30 (50 to 86)	10 to 30 (50 to 86)	10 to 30 (50 to 86)
Weight	kg (lbs)	22 (48)	22 (48)	22 (48)


Technical Data


TURBO.DRIVE TD 20 classic

Mains connection	50/60 Hz	100 to 240 V (+15 % / -10 %)
Max. power consumption	W	500
Max. output voltage	V	3 x 47
Max. output current	A	5
Interface		Without, RS 232 C, RS 485 C, Profibus or 25-way terminal strip
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	213 x 128 x 315 (8.39 x 5.04 x 12.40)
Weight, approx.	kg (lbs)	4.0 (8.8)

Ordering Information

TURBOVAC 1100 C

TURBOVAC 1100 C without Compound Stage	P	Part No.	
DN 160 ISO-K / DN 63 ISO-K, water-cooled DN 200 ISO-K / DN 63 ISO-K, water-cooled DN 250 ISO-K / DN 63 ISO-K, water-cooled		800150V0030 800150V0031 800150V0032	
Mandatory Accessories		FC	PS
TURBO.DRIVE TD 20 <small>classic</small> without interface with RS 232 C interface with RS 485 C interface with Profibus with 25-pol I/O		800075V0001 800075V0002 800075V0004 800075V0003 800075V0005	
Connecting cable TURBOVAC - frequency converter 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft) 50 m (175.0 ft) 60 m (210.0 ft) 80 m (280.0 ft) 140 m (490.0 ft)		857 65 857 66 857 67 857 68 800152V0008 800152V0007 800152V0080 800152V0140	
Mains cable 3 m (10.5 ft) EURO plug UK plug US plug 5-15 P 2 m (7.5 ft) US plug 115 V AC		800102V0002 800102V0003 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 230/346 V, 50 Hz / 208/360 V, 60 Hz		112 96 113 57	
SCROLLVAC SC 30 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz 3 phase motor; 380-415 V, 50 Hz / 200-230 V, 460 V, 60 Hz		133 002 133 102 133 004	
For further types, see Catalog Parts "Oil Sealed Vacuum Pumps" and "Dry Compressing Vacuum Pumps"			

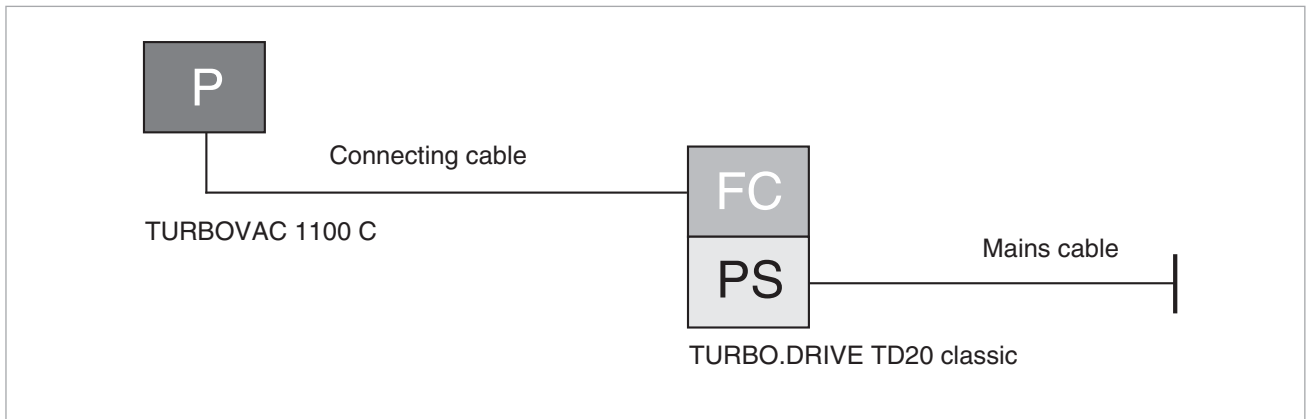

Ordering Information

TURBOVAC 1100 C

Accessories, optional	Part No.
Vibration absorber DN 160 ISO-K	500 073
Solenoid venting valve, with gas admission filter, normally closed 24 V DC, DN 16 ISO-KF	800120V0011
Power failure venting valve, with gas admission filter, normally open 24 V DC, DN 16 ISO-KF	800120V0021
Purge gas and venting valve gas flow at 1 bar 0.6 mbar x l x s ⁻¹ (36 sccm), pump connection DN 10 ISO-KF / gas connection G 1/4" 230 V AC 100-115 V AC 24 V DC	800152V0040 800152V0043 800152V0012
Gas filter to G 1/4" for purge gas and venting valve	800110V0012
Replacement filter	E 200 18 515
Included in the Delivery of the Pump	P
Inlet screen, centering ring with FPM sealing ring, outer ring	ISO-K
Inlet screen	CF
Centering ring with O-ring, clamping ring	Foreline Flange
Pivoted threaded fittings to replace the included hose nipples	Water Cooling


Mechanical Rotor Suspension with Frequency Converter for Attaching or Separate with or without Compound Stage

TURBOVAC SL 80 / L 80 H / SL 80 C



Typical Applications


- Helium leak detectors
- Mass spectrometers (gas chromatography GC-MS), liquid chromatography (LC-MS), residual gas analysis, mobile analytical systems, etc.)
- Electron beam microscopy
- XHV-/UHV systems
- Transfer chambers

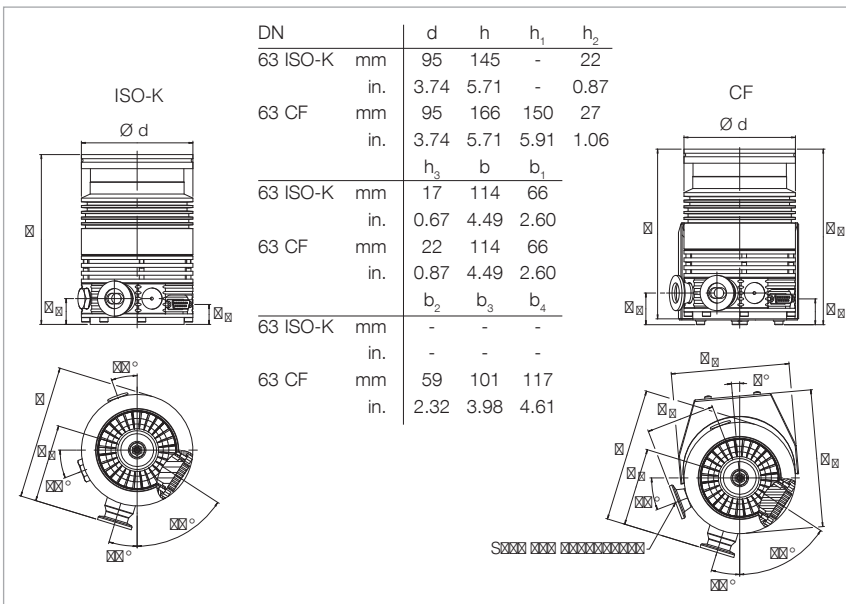

Dimensional drawing for the TURBOVAC SL 80: attachment examples

Technical Features

- Oil-free pump
- High pressure foreline tolerance
- Excellent resistance to vibration due to proven mechanical bearings
- Efficient convection cooling due to a large number of cooling fins
- Purge gas/venting connection
- Installation in any orientation
- Flexible attachment of the frequency converter to the pump
- Small footprint
- Delayed venting through the frequency converter TURBO.DRIVE TD 400 (optional)
- Selection of interfaces, USB, RS 232 C, RS 485 C, Profibus

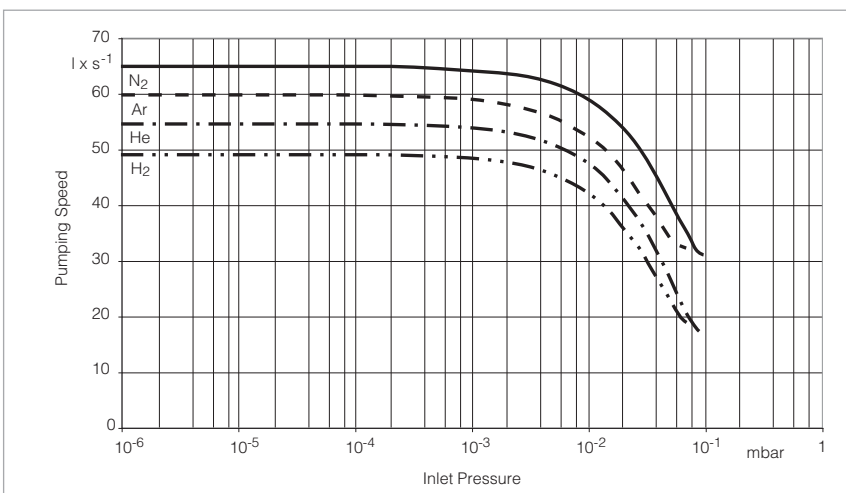

Pumping speed as a function of the inlet pressure

Advantages to the User

- Easy to integrate into complex vacuum systems
- Space-saving
- Prepared for pumping of slightly corrosive gases owing to the seal gas connection
- High reliability, MTTF over 200,000 hours
- Matching accessories (fan, water cooling, seal gas/venting valves, power failure venting valves, flange heaters, different cable lengths etc.)
- High reliability due to self-monitoring

Technical Data

TURBOVAC

		SL 80			SL 80 H		SL 80 C	
Connection								
Inlet	DN	40 ISO-KF	63 ISO-K	63 CF	63 ISO-K	63 CF	63 ISO-K	
Outlet	DN	16 ISO-KF			16 ISO-KF		16 ISO-KF	
Pumping speed								
N ₂	l x s ⁻¹	40	65	65	65		70	
Ar	l x s ⁻¹	34	60	60	60		65	
He	l x s ⁻¹	44	55	55	55		50	
H ₂	l x s ⁻¹	40	49	49	49		45	
Gas throughput								
N ₂	mbar · l x s ⁻¹	2.0			0.9		3.5	
Ar	mbar · l x s ⁻¹	1.6			0.8		3.5	
He	mbar · l x s ⁻¹	1.2			1.5		2.0	
H ₂	mbar · l x s ⁻¹	0.5			0.6		1.0	
Compression ratio								
N ₂		> 1 x 10 ¹¹			> 1 x 10 ¹¹		2 x 10 ⁶	
Ar		> 1 x 10 ¹¹			> 1 x 10 ¹¹		2 x 10 ⁶	
He		2 x 10 ⁶			6 x 10 ⁶		6 x 10 ²	
H ₂		4 x 10 ⁴			8 x 10 ⁴		2 x 10 ²	
Ultimate pressure								
	mbar Torr)	< 2 x 10 ⁻¹⁰ ($< 1.5 \times 10^{-10}$)			< 2 x 10 ⁻¹⁰ ($< 1.5 \times 10^{-10}$)		< 5 x 10 ⁻⁸ ($< 4.0 \times 10^{-6}$)	
Max. foreline pressure for N₂		16 (12)			16 (12)		0.35 (0.26)	
Recommended forevacuum pump		TRIVAC D 2,5 E / D 4 B SCROLLVAC SC 5 D / 15 D DIVAC 1.4 HV3			TRIVAC D 2,5 E / D 4 B SCROLLVAC SC 5 D / 15 D DIVAC 1.4 HV3		TRIVAC D 2,5 E / D 4 B SCROLLVAC SC 5 D / 15 D -	
Nominal rotation speed		72 000			72 000		72 000	
Run-up time, approx.		1.5			1.5		1.5	
Max. power consumption		120			120		120	
Power consumption at ultimate pressure		17			17		17	
Admissible ambient temperature		+15 to +45 (+50 to +113)			+15 to +45 (+50 to +113)		+15 to +45 (+50 to +113)	
Cooling								
standard		Convection			Convection		Convection	
optional		Water / Air			Water / Air		Water / Air	
Cooling water connection		G 1/8", inside thread / 8 mm hose nozzle			G 1/8", inside thread / 8 mm hose nozzle		G 1/8", inside thread / 8 mm hose nozzle	
Cooling water consumption		15 to 60			15 to 60		15 to 60	
Permissible cooling water pressure		2 to 7			2 to 7		2 to 7	
Permissible cooling water temperature		10 to 40 (50 to 104)			10 to 40 (50 to 104)		10 to 40 (50 to 104)	
Weight, approx.		1.8 1.9 3.1 (3.97) (4.19) (6.84)			1.9 3.1 (4.19) (6.84)		1.9 (4.19)	





Technical Data

TURBO.DRIVE TD 400


Mains connection	V DC	24
Max. current consumption	A	8
Max. power consumption	W	190
Max. output voltage	V	3 x 24
Interface		USB, RS 232 C, RS 485 C or Profibus
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	+5 to +45 (+41 to +113)
Dimensions (W x H x D)	mm (in.)	100 x 90 x 100 (3.9 x 3.5 x 3.9)
Weight, approx.	kg (lbs)	0.7 (1.6)

Ordering Information

TURBOVAC SL 80 / SL 80 H / SL 80 C

TURBOVAC SL 80	P	Part No.			
with compound stage DN 40 ISO-KF DN 63 ISO-K / DN 16 ISO-KF DN 63 ISO-K / DN 16 ISO-KF (SL 80 H) DN 63 CF / DN 16 ISO-KF DN 63 CF / DN 16 ISO-KF (SL 80 H)		800002V3004 800002V3001 800002V3005 800002V3002 800002V3006			
without compound stage DN 63 ISO-K / DN 16 ISO-KF (SL 80 C)		800002V3008			
Mandatory Accessories	P	FC	PS		
Electronic frequency converter TURBO.DRIVE TD 400 with USB interface with RS 232 C interface with RS 485 C interface with Profibus				800073V0008 800073V0002 800073V0003 800073V0004	
Connecting cable pump - frequency converter 0.2 m (0.7 ft) 0.3 m (1.1 ft) 0.4 m (1.4 ft) 0.5 m (1.75 ft) 1.0 m (3.5 ft) 2.5 m (8.75 ft) 3.0 m (10.5 ft) 5.0 m (17.5 ft) 10.0 m (35.0 ft)				800152V0021 800152V0023 800152V0022 800152V0050 152 47 864 49 864 40 864 50 800080V1000	
Power supply and control unit TURBO.CONTROL 300				800100V0001	
24 V connecting cable power supply - TURBO.CONTROL 300 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)				800091V0100 800091V0300 800091V0500 800091V1000 800091V2000	
Power supply TURBO.POWER 300				800100V0002	
24 V connecting cable power supply - TURBO.POWER 300 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)				800094V0100 800094V0300 800094V0500 800094V1000 800094V2000	
Mains cable 3 m (10.5 ft) - TURBO.CONTROL 300 / TURBO.POWER 300 with EURO plug with UK plug with US plug 5-15 P with US plug 115 V AC, 2 m (7.5 ft)				800102V0002 800102V0003 800102V1002 992 76 513	
START/STOP switch for manual operation of the turbomolecular pump				152 48	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V / 220-240 V, 50/60 Hz, without plug, (world version)				140 000 140 001	
TRIVAC D 4 B 1 phase EURO motor; 230 V, 50 Hz 1 phase dual voltage motor; 100-120 V / 200-240 V; 50/60 Hz				112 45 140 081 ¹⁾	
DIVAC 1.4 HV3 90-230 V, 50/60 Hz				127 90 V	
SCROLLVAC SC 5 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz				133 000 133 100	
SCROLLVAC SC 15 D 1 phase motor; 200-230 V, 50/60 Hz 1 phase motor; 100-115 V, 50/60 Hz 3 phase motor; 380-415 V, 50 Hz / 200-230 V, 460 V, 60 Hz				133 001 133 101 133 003	
For further types, see Catalog Parts "Oil Sealed Vacuum Pumps" and "Dry Compressing Vacuum Pumps"					

¹⁾ The mains cord (Part No. 200 81 091) must be ordered additionally

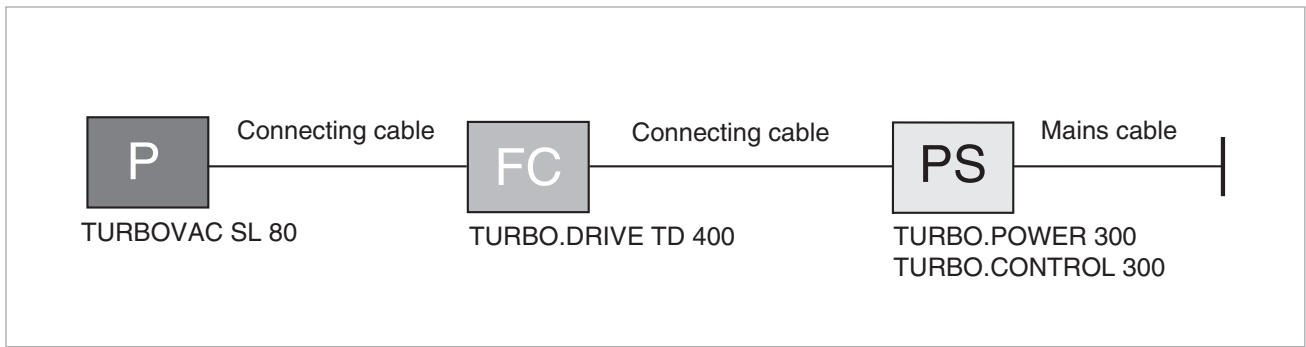

Ordering Information

TURBOVAC SL 80 / SL 80 H / SL 80 C

Accessories, optional	P	FC	PS	Part No.
Mounting kit TD 400 for SL 80, incl. 0.2 m (0.7 ft.) long connecting cable pump - frequency converter for installing the frequency converter beside the pump for installing the frequency converter beneath the pump (not for 800073V0007)				800110V0005 800110V0008
Water cooling unit with 2x G 1/8" connections, including 2 hose nozzles G 1/8" 8 mm (0.3 in.) OD, 2 gaskets (copper) 10 x 14 x 1 mm (0.4 x 0.6 x 0.04 in.) and hose clamps				800135V0001
Air cooling unit				800136V0001
Flange heater DN 63 CF, 230 V, 50 Hz DN 63 CF, 115 V, 60 Hz				854 04 854 07
Inlet screen DN 40 ISO-KF DN 63 ISO-K (coarse) DN 63 CF (coarse)				E 200 17 169 E 200 17 170 E 200 17 171
Fine filter with centering ring DN 63 ISO-K				887 20
Vibration absorber DN 63 ISO-K DN 63 CF				800131V0063 500 070
Pump connection adapter DN 10 ISO-KF / pump connection M 8 (incl. O-ring, filter and clamping ring)				800110V0011
Purge gas and venting valve gas flow at 1 bar 0.4 mbar x l x s ⁻¹ (24 sccm), pump connection DN 10 ISO-KF / gas connection G 1/4" 230 V AC 100 - 115 V AC 24 V DC				800152V0014 800152V0042 800152V0013
Gas filter to G 1/4" for purge gas and venting valve				800110V0012
Replacement filter				E 200 18 515
Power failure venting valve, normally open 24 V DC, DN 16 ISO-KF				800120V0021
Power failure venting valve, normally open 24 V DC, DN 10 ISO-KF 230 V AC / 50/60 Hz, DN 10 ISO-KF				174 46 174 26
Hat rail adaptor as mounting aid				800110V0003
Fin type cooler				800110V0001


Mechanical Rotor Suspension with integrated Frequency Converter with Compound Stage

TURBOVAC TW 250 S



Typical Applications


- Analytical Instruments
- Coating
- R & D
- Transfer chambers

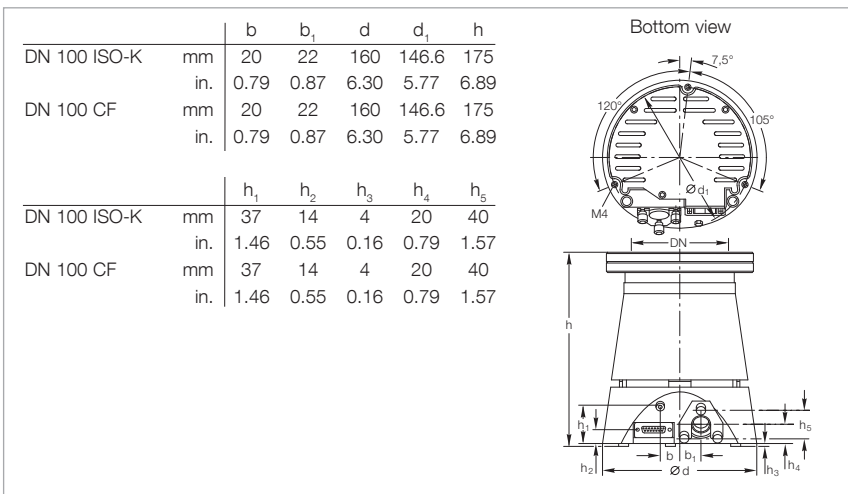

Technical Features

- High gas throughput
- Oil-free pump
- Insensitive to impact and movement due to the mechanical bearing concept
- Installation in any orientation
- Small footprint
- Integrated fan
- Purge gas/venting connection

Dimensional drawing for the TURBOVAC TW 250 S without frequency converter

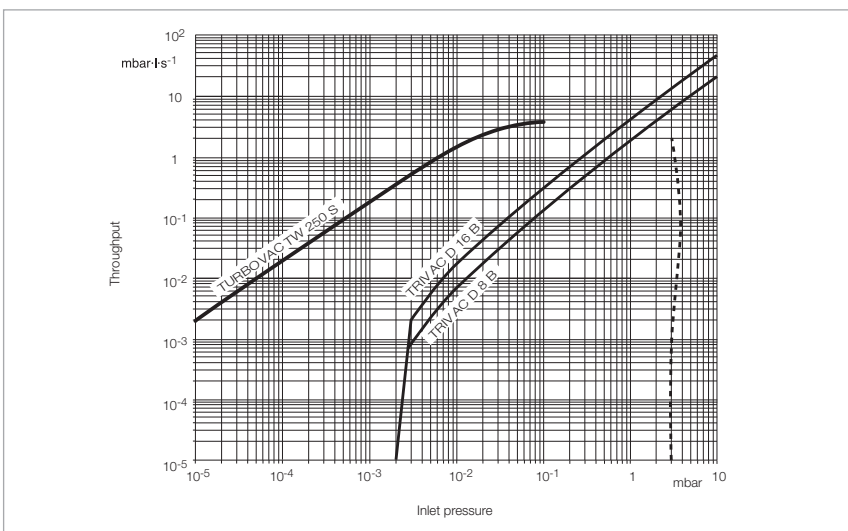

Operation diagram for nitrogen for TURBOVAC TW 250 S

Advantages to the User

- Highest throughput for N₂ and Ar
- Highest reliability in operation
- Space-saving
- High reliability due to self-monitoring
- Easy to integrate into complex vacuum systems

Technical Data

TURBOVAC TW 250 S

Connection		
Inlet	DN	100 ISO-K • 100 CF
Outlet	DN	16 ISO-KF
Pumping speed		
N ₂	l x s ⁻¹	230
Ar	l x s ⁻¹	210
He	l x s ⁻¹	150
H ₂	l x s ⁻¹	80
Gas throughput		
N ₂	mbar · l x s ⁻¹	3.7
Ar	mbar · l x s ⁻¹	3.5
He	mbar · l x s ⁻¹	2.4
H ₂	mbar · l x s ⁻¹	1.1
Compression ratio		
N ₂		1 x 10 ⁸
Ar		1 x 10 ⁸
He		1 x 10 ⁴
H ₂		5 x 10 ²
Ultimate pressure	mbar (Torr)	< 2 x 10 ⁻⁹ (< 1.5 x 10 ⁻⁸)
Max. foreline pressure for N ₂	mbar (Torr)	3.0 (2.3)
Recommended forevacuum pump		TRIVAC D 2,5 E TRIVAC D 8 B (at purge gas operation)
diaphragm pump with an ultimate pressure < 3 mbar (< 2.3 Torr)		upon request
Nominal rotation speed	min ⁻¹ (rpm)	51 600
Run-up time, approx.	min	3
Max. power consumption	W	140
Power consumption at ultimate pressure	W	20
Admissible ambient temperature	°C (°F)	+15 to +40 (+59 to +104)
Cooling		
standard		Air
optional		Water
Cooling water connection		G 1/8", inside thread / 10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	30 to 60
Permissible cooling water pressure	bar	3 to 7
Permissible cooling water temperature	°C (°F)	20 to 40 (+68 to +104)
Weight	kg (lbs)	5.8 (12.8)




Technical Data

TURBO.DRIVE TD 400


Mains connection	V DC	24
Max. current consumption	A	8
Max. power consumption	W	190
Max. output voltage	V	3 x 24
Interface		USB, RS 232 C, RS 485 C or Profibus
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	+5 to +45 (+41 to +113)
Dimensions (W x H x D)	mm (in.)	100 x 90 x 100 (3.9 x 3.5 x 3.9)
Weight, approx.	kg (lbs)	0.7 (1.6)

Ordering Information

TURBOVAC TW 250 S

TURBOVAC TW 250 S with Compound Stage	P	Part No.		
DN 100 ISO-K / DN 16 ISO-KF, water-cooled, Profibus DN 100 ISO-K / DN 16 ISO-KF, water-cooled, Profibus, inlet screen coarse DN 100 ISO-K / DN 16 ISO-KF, air-cooled, Profibus, inlet screen coarse DN 100 ISO-K / DN 16 ISO-KF, air-cooled, RS 232 C interface DN 100 ISO-K / DN 16 ISO-KF, air-cooled, RS 485 C interface DN 100 CF/ DN 16 ISO-KF, air-cooled, RS 232 C interface DN 100 CF / DN 16 ISO-KF, air-cooled, RS 485 C interface		114 37 800150V0016 800150V0009 800150V0011 800150V0013 800150V0012 800150V0014		
Mandatory Accessories		P	FC	PS
Power supply and control unit TURBO.CONTROL 300		800100V0001		
24 V connection line frequency converter TD 400 - TURBO.CONTROL 300 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)		800091V0100 800091V0300 800091V0500 800091V1000 800091V2000		
Power supply TURBO.POWER 300		800100V0002		
24 V connection line frequency converter TD 400 - TURBO.POWER 300 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)		800094V0100 800094V0300 800094V0500 800094V1000 800094V2000		
Mains cable 3 m (10.5 ft) - TURBO.CONTROL 300 / TURBO.POWER 300 with EURO plug with UK plug with US plug 5-15 P with US plug 115 V AC, 2 m (7.5 ft)		800102V0002 800102V0003 800102V1002 992 76 513		
START/STOP switch for manual operation of the turbomolecular pump		152 48		
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V / 220-240 V, 50/60 Hz, without plug, (world version)		140 000 140 001		
TRIVAC D 8 B 1 phase EURO motor; 230 V, 50 Hz 1 phase dual voltage motor; 100-120 V / 200-240 V; 50/60 Hz		112 55 140 082 ¹⁾		
For further types, see Catalog Part "Oil Sealed Vacuum Pumps"				

¹⁾ The mains cord (Part No. 200 81 091) must be ordered additionally

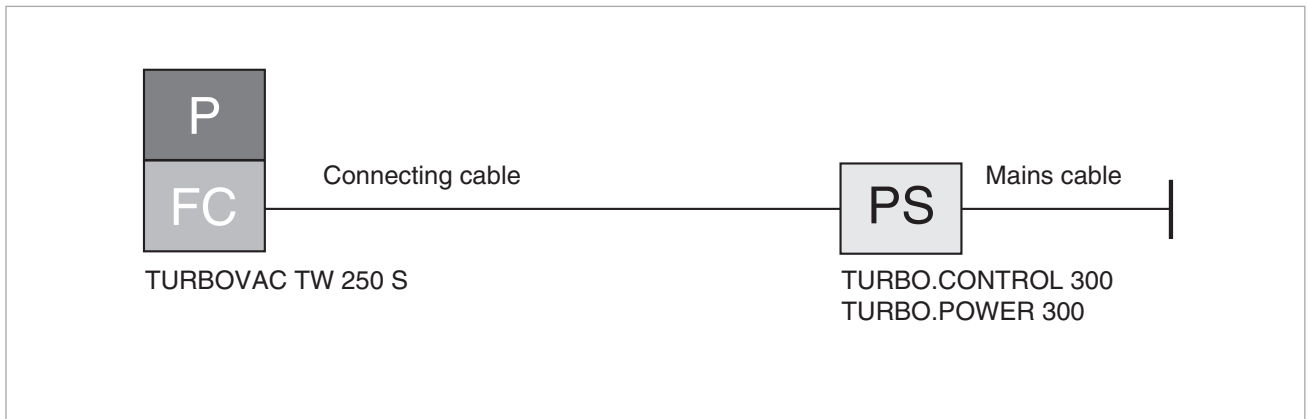

Ordering Information

TURBOVAC TW 250 S

Accessories, optional	P FC PS	Part No.
Flange heater DN 100 CF, 230 V, 50 Hz DN 100 CF, 115 V, 60 Hz		854 27 854 28
Inlet screen DN 100 ISO-K (coarse) DN 100 ISO-K (fine)		800132V0101 800132V0102
Vibration absorber DN 100 ISO-K DN 100 CF		800131V0100 500 071
Included in the Delivery of the Pump	P	
Centering ring with FPM sealing ring, clamping shoe with gasket		Foreline Flange
Sealing screw and a gasket ring		Vent Port
High vacuum connection elements are not part of the supplied equipment		


Mechanical Rotor Suspension without integrated Frequency Converter with Compound Stage

TURBOVAC TW 250 S



Typical Applications


- Analytical Instruments
- Coating
- R & D
- Transfer chambers

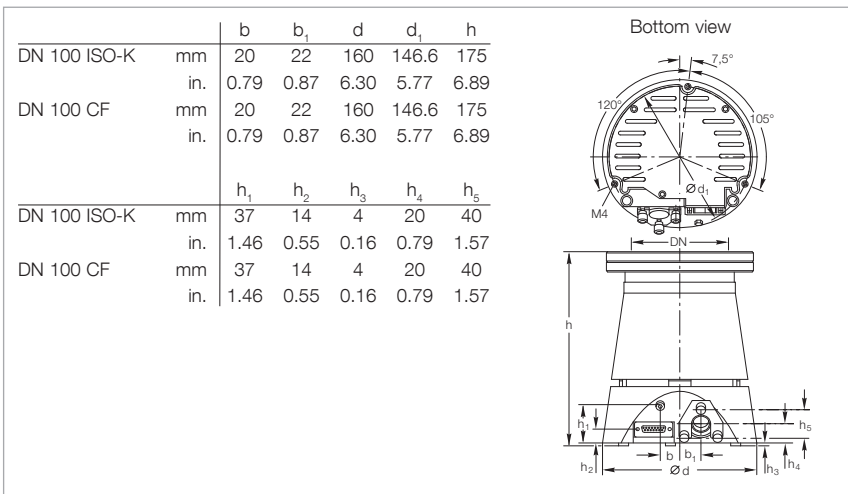

Technical Features

- High gas throughput
- Oil-free pump
- Insensitive to impact and movement due to the mechanical bearing concept
- Installation in any orientation
- Small footprint
- Integrated fan
- Purge gas/venting connection

Dimensional drawing for the TURBOVAC TW 250 S without frequency converter

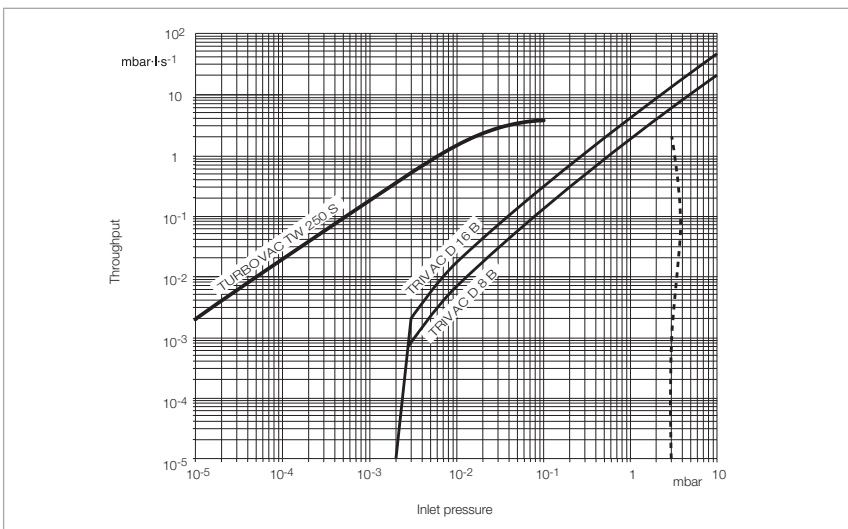

Operation diagram for nitrogen for TURBOVAC TW 250 S

Advantages to the User

- Highest throughput for N₂ and Ar
- Highest reliability in operation
- Space-saving
- High reliability due to self-monitoring
- Easy to integrate into complex vacuum systems

Technical Data**TURBOVAC TW 250 S**


Connection		
Inlet	DN	100 ISO-K
Outlet	DN	16 ISO-KF
Pumping speed		
N ₂	l x s ⁻¹	230
Ar	l x s ⁻¹	210
He	l x s ⁻¹	150
H ₂	l x s ⁻¹	80
Gas throughput		
N ₂	mbar · l x s ⁻¹	3.7
Ar	mbar · l x s ⁻¹	3.5
He	mbar · l x s ⁻¹	2.4
H ₂	mbar · l x s ⁻¹	1.1
Compression ratio		
N ₂		1 x 10 ⁸
Ar		1 x 10 ⁸
He		1 x 10 ⁴
H ₂		5 x 10 ²
Ultimate pressure	mbar (Torr)	< 2 x 10 ⁻⁹ (< 1.5 x 10 ⁻⁸)
Max. foreline pressure for N ₂	mbar (Torr)	3.0 (2.3)
Recommended forevacuum pump		TRIVAC D 2,5 E TRIVAC D 8 B (at purge gas operation)
diaphragm pump with an ultimate pressure < 3 mbar (< 2.3 Torr)		upon request
Nominal rotation speed	min ⁻¹ (rpm)	51 600
Run-up time, approx.	min	≈ 3
Max. power consumption	W	140
Power consumption at ultimate pressure	W	20
Admissible ambient temperature	°C (°F)	+15 to +40 (+59 to +104)
Cooling		
standard		Air
optional		Water
Cooling water connection		G 1/8", inside thread / 10 mm hose nozzle
Cooling water consumption	l x h ⁻¹	30 to 60
Permissible cooling water pressure	bar	3 to 7
Permissible cooling water temperature	°C (°F)	+20 to +40 (+68 to +104)
Weight	kg (lbs)	5 (11)

Technical Data**TURBO.DRIVE TD 400**


Mains connection	V DC	24
Max. current consumption	A	8
Max. power consumption	W	190
Max. output voltage	V	3 x 24
Interface		USB, RS 232 C, RS 485 C or Profibus
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	+5 to +45 (+41 to +113)
Dimensions (W x H x D)	mm (in.)	100 x 90 x 100 (3.9 x 3.5 x 3.9)
Weight, approx.	kg (lbs)	0.7 (1.6)

Ordering Information

TURBOVAC TW 250 S

TURBOVAC TW 250 S with Compound Stage	P	Part No.	
DN 100 ISO-K / DN 16 ISO-KF, air-cooled, inlet screen coarse DN 100 ISO-K / DN 16 ISO-KF, air-cooled, inlet screen coarse (with vibration absorber)		113 52 800150V0007	
Mandatory Accessories			
Electronic frequency converter TURBO.DRIVE TD 400 with USB interface RS 232 C interface RS 485 C interface	P FC PS	800073V0008 800073V0002 800073V0003	
Connecting cable pump - TURBO.DRIVE TD 400 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft)		152 47 864 40 864 50	
Power supply and control unit TURBO.CONTROL 300		800100V0001	
24 V connecting cable TURBO.DRIVE TD 400 - TURBO.CONTROL 300 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)		800091V0100 800091V0300 800091V0500 800091V1000 800091V2000	
Power supply TURBO.POWER 300		800100V0002	
24 V connecting cable TURBO.DRIVE TD 400 - TURBO.POWER 300 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)		800094V0100 800094V0300 800094V0500 800094V1000 800094V2000	
Mains cable 3 m (10.5 ft) - TURBO.CONTROL 300 / TURBO.POWER 300 with EURO plug with UK plug with US plug 5-15 P with US plug 115 V AC, 2 m (7.5 ft)		800102V0002 800102V0003 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V / 220-240 V, 50/60 Hz, without plug, (world version)		140 000 140 001	
TRIVAC D 8 B 1 phase EURO motor; 230 V, 50 Hz 1 phase dual voltage motor; 100-120 V / 200-240 V; 50/60 Hz		112 55 140 082 ¹⁾	
For further types, see Catalog Part "Oil Sealed Vacuum Pumps"			

¹⁾ The mains cord (Part No. 200 81 091) must be ordered additionally

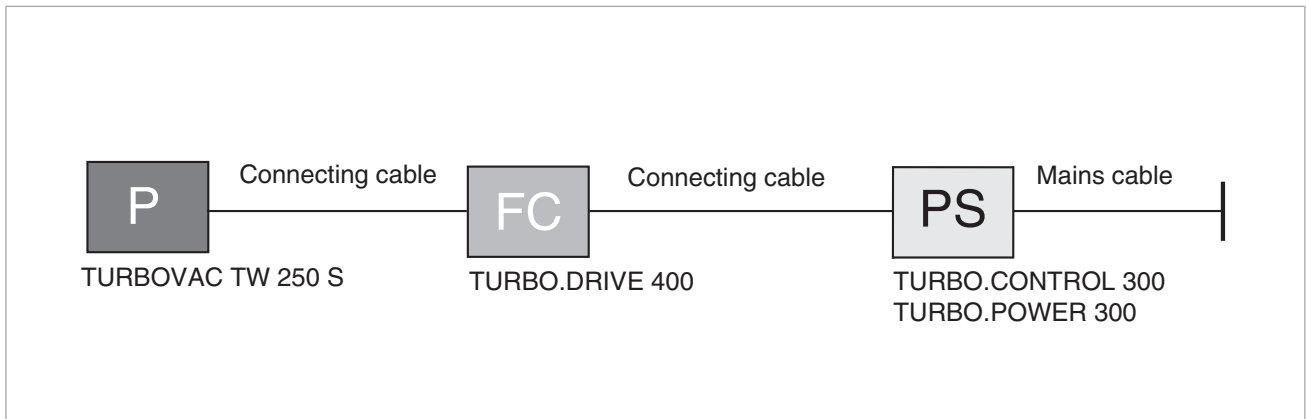

Ordering Information

TURBOVAC TW 250 S

Accessories, optional	P FC PS	Part No.
Inlet screen DN 100 ISO-K (coarse) DN 100 ISO-K (fine)		800132V0101 800132V0102
Vibration absorber DN 100 ISO-K DN 100 CF		800131V0100 500 071
Included in the Delivery of the Pump	P	
Centering ring with FPM sealing ring, blank flange with clamping shoe		Foreline Flange
Sealing screw and a gasket ring		Vent Port
DC coupling for the power supply is included		

MAG INTEGRA - Magnetic Rotor Suspension with integrated Frequency Converter, with Compound Stage

TURBOVAC MAG W 300/400 iP




Typical Applications


- Gas analysis systems
- Particle accelerators
- Electron microscopes
- Research
- Coating systems

Technical Features

- Installation in any orientation
- DN 100 or 160 ISO-K and/or CF high vacuum connection
- DN 16 ISO-KF with clamped fore vacuum connection
- Purge gas/venting connection DN 16 ISO-KF with clamped connection (purge/vent)
- Water or air cooling optional
- 2 slots for industrial communications modules
 - Standard 9 pin 24 V SPS PLC-IO in Control Slot
 - RS 232 C in Service Slot
 - further interfaces can be fitted: Profibus, RS 485 C, DeviceNet, EtherNet IP, EtherCat

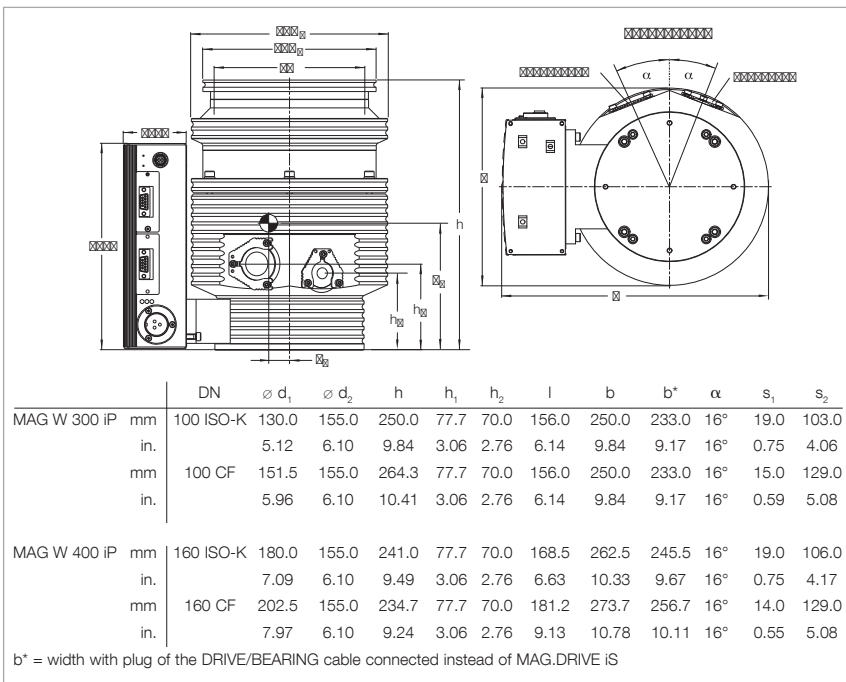

Dimensional drawing for the TURBOVAC MAG W 300/400 iP

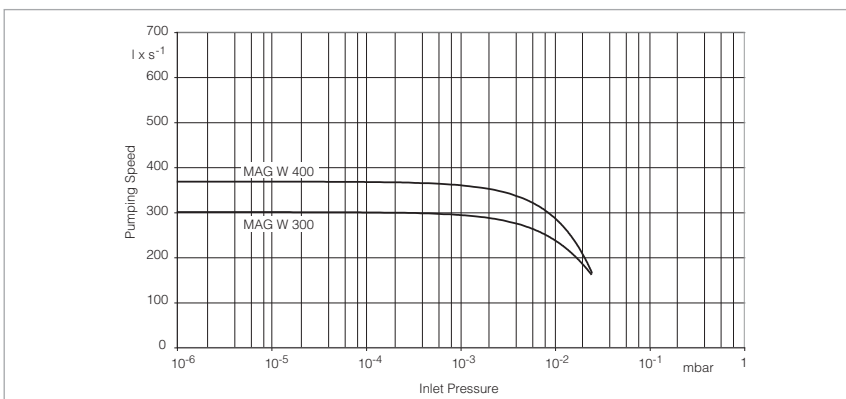

Pumping speed for N_2 of the TURBOVAC MAG W 300/400 iP as a function of the inlet pressure

Advantages to the User

- Highest pumping speed from the smallest possible size
- New standard regarding maintenance-free systems
- Suitability for vibration sensitive applications in the area of analytical engineering, thin-film technology, electron microscopes, research, development among others
- Flexibility due to the modular concept; the converter is optionally also available by way of a bench top unit

Technical Data

TURBOVAC MAG

W 300 iP

W 400 iP

Inlet flange	DN	100 ISO-K	100 CF	160 ISO-K	160 CF
Pumping speed					
N ₂	l x s ⁻¹	300	300	365	365
Ar	l x s ⁻¹	260	260	330	330
He	l x s ⁻¹	260	260	280	280
H ₂	l x s ⁻¹	190	190	200	200
Operating speed	min ⁻¹	58 800	58 800	58 800	58 800
Compression ratio					
N ₂		1.0 x 10 ¹⁰	1.0 x 10 ¹⁰	1.0 x 10 ¹⁰	1.0 x 10 ¹⁰
H ₂		3.2 x 10 ⁹	3.2 x 10 ⁹	3.2 x 10 ⁹	3.2 x 10 ⁹
He		9.2 x 10 ⁴	9.2 x 10 ⁴	9.2 x 10 ⁴	9.2 x 10 ⁴
Ultimate pressure	mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)
Max. degassing temperature	°C (°F)	–	80 (176)	–	80 (176)
Max. foreline pressure for N ₂	mbar (Torr)	8 (6)	8 (6)	8 (6)	8 (6)
Recommended backing pump		TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B
Run-up time	min	< 5	< 5	< 5	< 5
Foreline flange (clamped)	DN	16 ISO-KF	16 ISO-KF	16 ISO-KF	16 ISO-KF
Purge / vent port (clamped)	DN	16 ISO-KF	16 ISO-KF	16 ISO-KF	16 ISO-KF
Water cooling connection (optional)	G	1/8"	1/8"	1/8"	1/8"
Weight, approx.	kg (lbs)	12 (26)	12 (26)	12 (26)	12 (26)

Technical Data



Integrated Frequency Converter

TURBO.DRIVE iS


Power supply	V	48	48	48	48
Ripple	%	< 2	< 2	< 2	< 2
Power consumption					
maximum	W	400	400	400	400
at ultimate pressure	W	259	259	259	259
DC current consumption, max.	A	7.5 to 9.3	7.5 to 9.3	7.5 to 9.3	7.5 to 9.3
DC power supply voltage range	V	43 to 53	43 to 53	43 to 53	43 to 53
Length of the DC connection cable, max.					
at 3 x 1.5 mm ²	m (ft)	5 (17.5)	5 (17.5)	5 (17.5)	5 (17.5)
at 3 x 2.5 mm ²	m (ft)	20 (70.0)	20 (70.0)	20 (70.0)	20 (70.0)
Contact rating for the relays, max.		32 V; 0,5 A	32 V; 0,5 A	32 V; 0,5 A	32 V; 0,5 A
Permissible ambient temperature					
during operation	°C (°F)	+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)
during storage	°C (°F)	0 to +60 (0 to +140)	0 to +60 (0 to +140)	0 to +60 (0 to +140)	0 to +60 (0 to +140)
Relative humidity of the air, non-condensing	%	5 to 85	5 to 85	5 to 85	5 to 85
Protection class	IP	30	30	30	30
Overvoltage category		II	II	II	II
Pollution category		2	2	2	2

Ordering Information

TURBOVAC MAG W 300/400 iP

TURBOVAC MAG W 300 iP with Integrated Frequency Converter and Seal Gas Connection	Part No.	
DN 100 ISO-K DN 100 CF	410300V0505 410300V0506	
TURBOVAC MAG W 400 iP with Integrated Frequency Converter and Seal Gas Connection	410400V0505 410400V0506	
DN 160 ISO-K DN 160 CF	410400V0505 410400V0506	
Mandatory Accessories		
Power supply TURBO.POWER 500	410300V0221	
DC cable frequency converter - power supply 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)	410300V2001 410300V2003 410300V2005 410300V2010 410300V2020	
Mains cable, 3 m (10.5 ft) with EURO plug with US plug 5-15 P	800102V0002 800102V1002	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V, 50/60 Hz; NEMA plug, US version	140 000 140 002	
TRIVAC D 8 B 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz; 250/440 V, 60 Hz	112 55 112 56	

With integrated Frequency Converter

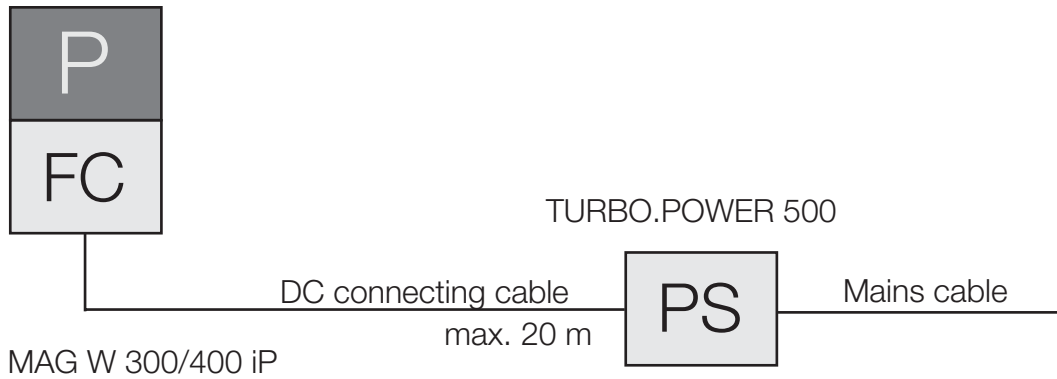

Ordering Information

TURBOVAC MAG W 300/400 iP

Accessories, optional	P	Part No.
Inlet screen		
DN 100 ISO-K		
coarse (3.2 x 3.2 mm (0.13 x 0.13 in.))		800132V0101
fine (1.6 x 1.6 mm (0.06 x 0.06 in.))		800132V0102
DN 100 CF		
coarse (3.2 x 3.2 mm (0.13 x 0.13 in.))		200 91 514
fine (1.6 x 1.6 mm (0.06 x 0.06 in.))		E 200 17 195
DN 160 ISO-K		E 200 00 307
DN 160 CF		E 200 17 247
Flange heater		
100 CF, 230 V, 50 Hz		854 27
100 CF, 115 V, 60 Hz		854 28
160 CF, 230 V, 50 Hz		854 37
160 CF, 115 V, 60 Hz		854 38
Water cooling unit		410300V0101
Air cooling unit		410300V0102
START/STOP switch for manual operation of the turbomolecular pump		152 48
DC plug		800 001 694
Solenoid venting valve, normally closed		
24 V DC, DN 16 ISO-KF		800120V0011
Power failure venting valve, normally open		800120V0021
Included in the Delivery of the Pump	P	
Flanges for forevacuum, venting and purge gas are blank-flanged		
Centering ring with FPM sealing ring and a clamping yoke		

MAG INTEGRA - Magnetic Rotor Suspension with integrated Frequency Converter, with Compound Stage

TURBOVAC MAG W 600/700 iP




Typical Applications

- Gas analysis systems
- Particle accelerators
- Electron microscopes
- Research
- Coating systems

Technical Features

- Installation in any orientation
- DN 160 or 200 ISO-K and/or CF high vacuum connection
- DN 25 ISO-KF with clamped fore-vacuum connection
- Purge gas/venting connection DN 16 ISO-KF with clamped connection (purge/vent)
- Water or air cooling optional
- 2 slots for industrial communications modules
- Standard 9 pin 24 V SPS PLC-IO in Control Slot
- RS 232 C in Service Slot
- further interfaces can be fitted: Profibus, RS 485 C, DeviceNet, EtherNet IP, EtherCat

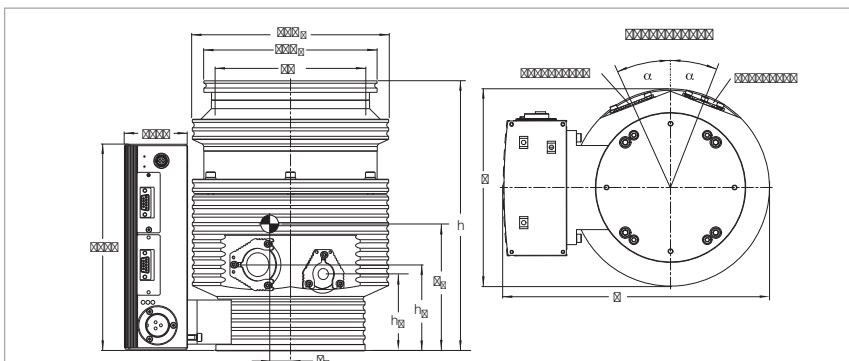


	DN	$\varnothing d_1$	$\varnothing d_2$	h	h_1	h_2	l	b	b^*	α	s_1	s_2
MAG W 600 iP	mm 160 ISO-K	180.0	204.0	281.5	90	80	204.0	274.5	257.5	21°	13.0	121.0
	in. 160 CF	7.09	8.03	11.08	3.54	3.15	8.03	10.81	10.14	21°	0.51	4.76
MAG W 700 iP	mm 200 ISO-K	240.0	204.0	280.5	90	80	240.0	292.5	275.5	21°	13.0	130.0
	in. 200 CF	9.45	8.03	11.04	3.54	3.15	9.45	11.52	10.85	21°	0.51	5.12
	mm 200 CF	253.0	204.0	275.0	90	80	253.0	299.0	282.0	21°	9.0	156.0
	in.	9.96	8.03	10.83	3.54	3.15	9.96	11.77	11.10	21°	0.35	6.14

b^* = width with plug of the DRIVE/BEARING cable connected instead of MAG.DRIVE IS

Dimensional drawing for the TURBOVAC MAG W 600/700 iP

Advantages to the User

- Highest pumping speed from the smallest possible size
- New standard regarding maintenance-free systems
- Suitability for vibration sensitive applications in the area of analytical engineering, thin-film technology, electron microscopes, research, development among others
- Flexibility due to the modular concept; the converter is optionally also available by way of a bench top unit

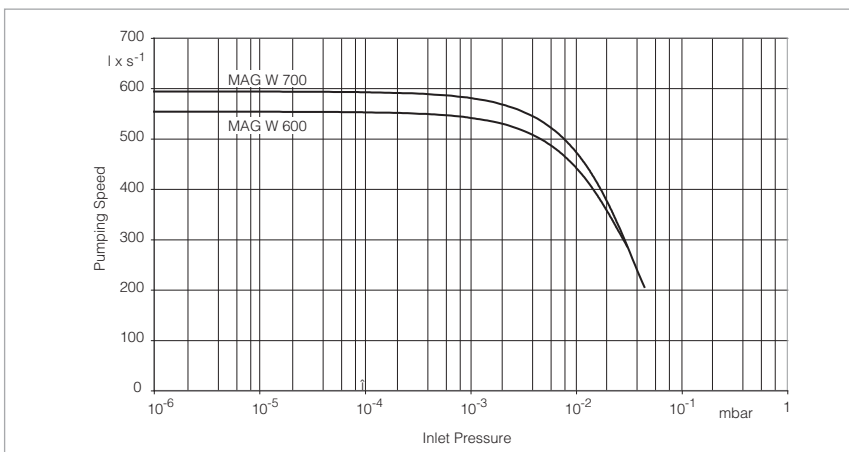

Pumping speed for N₂ of the TURBOVAC MAG W 600/700 iP as a function of the inlet pressure

Technical Data
TURBOVAC MAG
W 600 iP
W 700 iP



		DN	160 ISO-K	160 CF	200 ISO-K	200 CF
Inlet flange		DN	160 ISO-K	160 CF	200 ISO-K	200 CF
Pumping speed						
N ₂	l x s ⁻¹		550	550	590	590
Ar	l x s ⁻¹		520	520	540	540
He	l x s ⁻¹		570	570	600	600
H ₂	l x s ⁻¹		410	410	430	430
Operating speed		min ⁻¹	48 000	48 000	48 000	48 000
Compression ratio						
N ₂			1.6 x 10 ¹⁰	1.6 x 10 ¹⁰	1.6 x 10 ¹⁰	1.6 x 10 ¹⁰
H ₂			3.4 x 10 ⁴	3.4 x 10 ⁴	3.4 x 10 ⁴	3.4 x 10 ⁴
He			1.7 x 10 ⁶	1.7 x 10 ⁶	1.7 x 10 ⁶	1.7 x 10 ⁶
Ultimate pressure		mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)
Max. degassing temperature		°C (°F)	–	80 (176)	–	80 (176)
Max. foreline pressure for N₂		mbar (Torr)	6.0 (4.5)	6.0 (4.5)	6.0 (4.5)	6.0 (4.5)
Recommended backing pump			TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B
Run-up time		min	< 6	< 6	< 6	< 6
Foreline flange (clamped)		DN	25 ISO-KF	25 ISO-KF	25 ISO-KF	25 ISO-KF
Purge / vent port (clamped)		DN	16 ISO-KF	16 ISO-KF	16 ISO-KF	16 ISO-KF
Water cooling connection (optional)		G	1/8"	1/8"	1/8"	1/8"
Weight, approx.		kg (lbs)	17 (37.5)	17 (37.5)	17 (37.5)	17 (37.5)

Technical Data
Integrated Frequency Converter
TURBO.DRIVE iS


Power supply		V	48	48	48	48
Ripple		%	< 2	< 2	< 2	< 2
Power consumption						
maximum	W		400	400	400	400
at ultimate pressure	W		259	259	259	259
DC current consumption, max.		A	7.5 to 9.3	7.5 to 9.3	7.5 to 9.3	7.5 to 9.3
DC power supply voltage range		V	43 to 53	43 to 53	43 to 53	43 to 53
Length of the DC connection cable, max.						
at 3 x 1.5 mm ²	m (ft)		5 (17.5)	5 (17.5)	5 (17.5)	5 (17.5)
at 3 x 2.5 mm ²	m (ft)		20 (70.0)	20 (70.0)	20 (70.0)	20 (70.0)
Contact rating for the relays, max.			32 V; 0,5 A	32 V; 0,5 A	32 V; 0,5 A	32 V; 0,5 A
Permissible ambient temperature						
during operation	°C (°F)		+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)
during storage	°C (°F)		0 to +60 (0 to +140)	0 to +60 (0 to +140)	0 to +60 (0 to +140)	0 to +60 (0 to +140)
Relative humidity of the air, non-condensing		%	5 to 85	5 to 85	5 to 85	5 to 85
Protection class		IP	30	30	30	30
Overvoltage category			II	II	II	II
Pollution category			2	2	2	2

Ordering Information

TURBOVAC MAG W 600/700 iP

TURBOVAC MAG W 600 iP with Integrated Frequency Converter and Seal Gas Connection	Part No.	
DN 160 ISO-K DN 160 CF	410600V0505 410600V0506	
TURBOVAC MAG W 700 iP with Integrated Frequency Converter and Seal Gas Connection	410700V0505 410700V0506	
DN 200 ISO-K DN 200 CF	410700V0505 410700V0506	
Mandatory Accessories		
Power supply TURBO.POWER 500	410300V0221	
DC cable frequency converter - power supply 1 m (3.5 ft) 3 m (10.5 ft) 5 m (17.5 ft) 10 m (35.0 ft) 20 m (70.0 ft)	410300V2001 410300V2003 410300V2005 410300V2010 410300V2020	
Mains cable, 3 m (10.5 ft) with EURO plug with US plug 5-15 P	800102V0002 800102V1002	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V, 50/60 Hz; NEMA plug, US version	140 000 140 002	
TRIVAC D 8 B 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz; 250/440 V, 60 Hz	112 55 112 56	

With integrated Frequency Converter

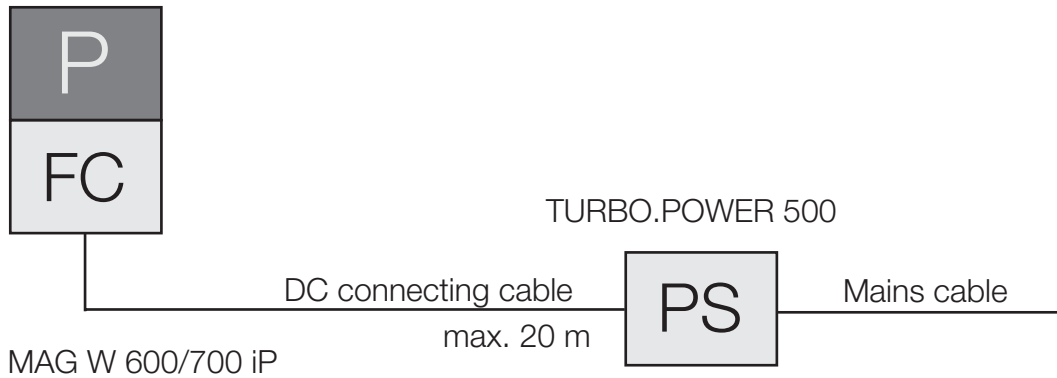

Ordering Information

TURBOVAC MAG W 600/700 iP

Accessories, optional	P	Part No.
Inlet screen		
DN 160 ISO-K		E 200 00 307
DN 160 CF		E 200 17 247
DN 200 ISO-K		200 91 639
DN 200 CF		400 001 515
Flange heater		
160 CF, 230 V, 50 Hz		854 37
160 CF, 115 V, 60 Hz		854 38
Water cooling unit		410600V0101
Air cooling unit		410600V0102
START/STOP switch for manual operation of the turbomolecular pump		152 48
DC plug		800 001 694
Solenoid venting valve, normally closed 24 V DC, DN 16 ISO-KF		800120V0011
Power failure venting valve, normally open		800120V0021
Included in the Delivery of the Pump	P	
Flanges for forevacuum, venting and purge gas are blank-flanged		
Centering ring with FPM sealing ring and a clamping yoke		

MAG INTEGRA - Magnetic Rotor Suspension with integrated Frequency Converter, with Compound Stage

TURBOVAC MAG W 1300 iP(L) to 2200 iP(L)




Typical Applications

- PVD coatings systems
- Coating of architectural glass
- Optical coatings
- LC displays
- Flat panels
- Research
- Analytical systems

Technical Features

- Installation in any orientation
- DN 200 and/or 250 in ISO-F and/or CF high vacuum connection
- DN 40 KF forevacuum connection
- Purge gas/venting connection DN 16 KF with clamped connection (purge/vent)
- Water cooling
- Protection class IP 54
- 2 slots for industrial communications modules
- Standard ProfiBus
- RS 232 C in Service Slot
- further interfaces can be fitted: RS 485 C, 9 pin 24 V PLC, DeviceNet, EtherNet IP, EtherCat

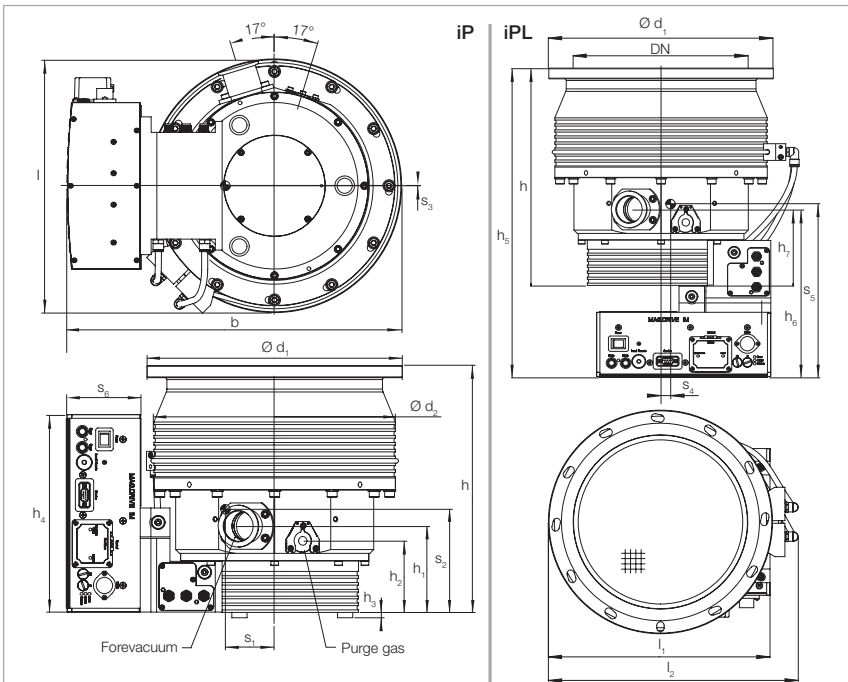

Type	DN		b	d ₁	d ₂	h	h ₁	h ₂	h ₃	h ₄	h ₅	h ₆
MAG W 1300	200 ISO-F	mm	420 ¹⁾	285	285	305	114	94	7	260	442	251
		in.	16.54 ¹⁾	11.22	11.22	12.01	4.49	3.70	0.38	10.24	17.40	9.88
	200 CF	mm	416	254	285	335	114	94	7	260	472	251
		in.	16.38	10.00	11.22	13.19	4.49	3.70	0.38	10.24	18.58	9.88
MAG W 1600/1700	250 ISO-F	mm	442	335	317	325	114	94	7	260	463	251
		in.	17.40	13.19	12.48	12.80	4.49	3.70	0.38	10.24	18.23	9.88
	250 CF	mm	432	305	317	330	114	94	7	260	467	251
		in.	17.01	12.01	12.48	12.99	4.49	3.70	0.38	10.24	18.39	9.88
MAG W 2200	250 ISO-F	mm	450	335	349	355	114	94	7	260	492	251
		in.	17.18	13.19	13.74	13.19	4.49	3.70	0.38	10.24	19.37	9.88
	250 CF	mm	446	305	349	372	114	94	7	260	506	251
		in.	17.56	12.01	13.74	14.65	4.49	3.70	0.38	10.24	19.92	9.88
			h ₇	l	l ₁	l ₂	s ₁	s ₂	s ₃	s ₄	s ₅	s ₆
MAG W 1300	200 ISO-F	mm	114	311 ¹⁾	311 ¹⁾	332 ¹⁾	42	140	0	15	241	98
		in.	4.49	12.24 ¹⁾	12.24 ¹⁾	13.07 ¹⁾	1.65	5.51	0	0.59	9.49	3.86
	200 CF	mm	114	307	307	-	32	164	0	-	-	98
		in.	4.49	12.09	12.09	-	1.26	6.46	0	-	-	3.86
MAG W 1600/1700	250 ISO-F	mm	114	335	331	374	39	154	0	14	259	98
		in.	4.49	13.19	12.24	14.72	1.54	6.06	0	0.55	10.20	3.86
	250 CF	mm	114	335	322	-	29	173	0	9	285	98
		in.	4.49	13.19	12.68	-	1.14	6.81	0	0.35	11.22	3.86
MAG W 2200	250 ISO-F	mm	114	343	340	392	34	165	0	12	272	98
		in.	4.49	13.50	13.39	15.43	1.34	6.50	0	0.47	10.71	3.86
	250 CF	mm	114	339	340	-	26	187	0	8	302	98
		in.	4.49	13.35	13.39	-	1.02	7.36	0	0.32	11.89	3.86

¹⁾ 4 mm (0.16 in.) for cooling coil

Dimensional drawing for the MAG INTEGRA, dimensions in mm

Advantages to the User

- Highest pumping speed and gas throughput from a very small size
- Rugged and reliable operation in industrial applications
- Sets new benchmarks for maintenance-free systems
- Suited for vibration sensitive applications in the areas of analytical, thin-film, electron microscopy, research and development among others.
- Flexibility through the modular concept; the converter is either attached to the side or under the pump

Technical Data

TURBOVAC MAG W

		1300 iP(L)	1600 iP(L) Booster	1700 iP(L)	2200 iP(L)
Inlet flange	DN	200 ISO-F 200 CF	250 ISO-F	250 ISO-F 250 CF	250 ISO-F 250 CF
Pumping speed					
N ₂	l x s ⁻¹	1100	1600	1610	2100
Ar	l x s ⁻¹	1050	1470	1480	1900
He	l x s ⁻¹	1220	1770	1710	2050
H ₂	l x s ⁻¹	1130	1570	1660	1750
Operating speed	min ⁻¹	37 800	33 000	33 000	30 600
standby speed adjustable from to nominal speed	min ⁻¹	13 800 (230 Hz)	13 800 (230 Hz)	13 800 (230 Hz)	13 800 (230 Hz)
Max. compression ratio					
N ₂		> 10 ⁸	> 10 ⁷	> 10 ⁸	> 10 ⁸
Ar		> 10 ⁸	> 10 ⁷	> 10 ⁸	> 10 ⁸
He at 1 sccm		2.0 x 10 ⁵	6.0 x 10 ⁴	2.0 x 10 ⁵	5.0 x 10 ⁴
H ₂ at 1 sccm		8.0 x 10 ³	1.0 x 10 ³	4.0 x 10 ³	5.0 x 10 ³
Max. gas throughput					
N ₂ briefly, e.g. during pumpdown	mbar x l x s ⁻¹	30	60	30	30
N ₂ in continuous operation	mbar x l x s ⁻¹	20	30	20	17
Ar briefly, e.g. during pumpdown	mbar x l x s ⁻¹	20	30	20	20
Ar in continuous operation	mbar x l x s ⁻¹	15	20	15	12
Ultimate pressure					
ISO-F flange	mbar (Torr)	< 10 ⁻⁸ (< 7.5 x 10 ⁻⁹)	< 10 ⁻⁸ (< 7.5 x 10 ⁻⁹)	< 10 ⁻⁸ (< 7.5 x 10 ⁻⁹)	< 10 ⁻⁸ (< 7.5 x 10 ⁻⁹)
CF flange	mbar (Torr)	< 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)	–	< 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)	< 10 ⁻¹⁰ (< 7.5 x 10 ⁻¹¹)
Max. degassing temperature	°C (°F)	80 (176)	80 (176)	80 (176)	80 (176)
Max. foreline pressure					
N ₂	mbar (Torr)	4.0 (3.00)	1.0 (0.75)	4.0 (3.00)	2.5 (1.9)
Ar	mbar (Torr)	0.6 (0.45)	1.0 (0.75)	0.6 (0.45)	2.5 (1.9)
Recommended backing pump		TRIVAC B or dry compressing pumps			
Run-up time	min	< 5	< 7	< 7	< 10
Foreline flange	DN	40 KF	40 KF	40 KF	40 KF
Purge / vent port (clamped)	DN	16 KF	16 KF	16 KF	16 KF
Water cooling connection	G	1/8"	1/8"	1/8"	1/8"
Weight, approx.	kg (lbs)	40 (88)	45 (99)	45 (99)	50 (110)
Noise level acc. ISO 3744	dB(A)	< 41	< 41	< 41	< 41
Vibration level at high vacuum flange at max. speed	µm	0.01	0.01	0.01	0.01

Technical Data


Integrated Frequency Converter

MAG.DRIVE iM

Power supply	V	200 - 240 ±10%
Mains frequency	Hz	50 / 60
Power consumption		
maximum	W	750
at ultimate pressure	W	150
Contact rating for the relays, max.		32 V, 0.5 A
Permissible ambient temperature		
during operation	°C (°F)	+10 to +45 (+50 to +113)
during storage	°C (°F)	-10 to +60 (+14 to +140)
Relative humidity of the air, non-condensing	%	5 to 85
Protection class	IP	54
Overvoltage category		II
Pollution category		2

Ordering Information

TURBOVAC MAG W 1300/1600/1700/2200 iP(L)

TURBOVAC MAG W 1300 with Integrated Frequency Converter and Purge Gas Connection	P FC PS	Part No.	
MAG W 1300 iP, DN 200 ISO-F, Profibus		411300V0504	
MAG W 1300 iP, DN 200 ISO-F, 24 V SPS interface		411300V0514	
MAG W 1300 iP, DN 200 CF, Profibus		411300V0506	
MAG W 1300 iP, DN 200 CF, 24 V SPS interface		411300V0516	
MAG W 1300 iPL, DN 200 ISO-F, Profibus		411300V0704	
MAG W 1300 iPL, DN 200 ISO-F, 24 V SPS interface		411300V0714	
MAG W 1300 iPL, DN 200 CF, Profibus		411300V0706	
MAG W 1300 iPL, DN 200 CF 24 V SPS interface		411300V0716	
TURBOVAC MAG W 1600 Booster with Integrated Frequency Converter and Purge Gas Connection	P FC PS		
MAG W 1600 iP Booster, DN 250 ISO-F, Profibus		411600V0504	
MAG W 1600 iP Booster, DN 250 ISO-F, 24 V SPS interface		411600V0514	
MAG W 1600 iPL Booster, DN 250 ISO-F, Profibus		411600V0704	
MAG W 1600 iPL Booster, DN 250 ISO-F, 24 V SPS interface		411600V0714	
TURBOVAC MAG W 1700 with Integrated Frequency Converter and Purge Gas Connection	P FC PS		
MAG W 1700 iP, DN 250 ISO-F, Profibus		411700V0504	
MAG W 1700 iP, DN 250 ISO-F, 24 V SPS interface		411700V0514	
MAG W 1700 iP, DN 250 CF, Profibus		411700V0506	
MAG W 1700 iP, DN 250 CF, 24 V SPS interface		411700V0516	
MAG W 1700 iPL, DN 250 ISO-F, Profibus		411700V0704	
MAG W 1700 iPL, DN 250 ISO-F, 24 V SPS interface		411700V0714	
MAG W 1700 iPL, DN 250 CF, Profibus		411700V0706	
MAG W 1700 iPL, DN 250 CF, 24 V SPS interface		411700V0716	
TURBOVAC MAG W 2200 with Integrated Frequency Converter and Purge Gas Connection	P FC PS		
MAG W 2200 iP, DN 250 ISO-F, Profibus		412200V0504	
MAG W 2200 iP, DN 250 ISO-F, 24 V SPS interface		412200V0514	
MAG W 2200 iP, DN 250 CF, Profibus		412200V0506	
MAG W 2200 iP, DN 250 CF, 24 V SPS interface		412200V0516	
MAG W 2200 iPL, DN 250 ISO-F, Profibus		412200V0704	
MAG W 2200 iPL, DN 250 ISO-F, 24 V SPS interface		412200V0714	
MAG W 2200 iPL, DN 250 CF, Profibus		412200V0706	
MAG W 2200 iPL, DN 250 CF, 24 V SPS interface		412200V0716	
Other interfaces upon request			

With integrated Frequency Converter and Power Supply




MAG W 1300 iP(L),
 MAG W 1600 iP(L) Booster,
 MAG W 1700 iP(L),
 MAG W 2200 iP(L)

Ordering Information

TURBOVAC MAG W 1300/1600/1700/2200 iP(L)

Mandatory Accessories	P	Part No.
Set of bolts, nuts and washers for ISO-F flange (12 each) Bolts M 10 x 50 Bolts M 10 x 35		400153V0012 400153V0010
Centering with O-ring Al/FPM DN 200 DN 250 Stainless steel/FPM DN 200 DN 250		268 44 268 45 887 02 887 08
Set of bolts, nuts and washers for CF flange (8 each) Bolts M 8 x 40 (For DN 200, 3 sets are required; for DN 250, 4 sets)		400153V0016
Copper gasket rings for CF flange DN 200 (Set of 10 pieces) DN 250 (Set of 5 pieces)		839 47 839 48
Set of hex. bolts with nuts, bolts and washers for CF flange DN 200 DN 250 (2 sets required)		839 07 839 07
Accessories, optional	P FC PS	
Mains cable, 2.5 m (8.75 ft) with EURO plug with US plug		411310V03 411320V03
Seal Kit DN 250 Metal		200 07 901
Seal kit, metal, for other flanges		upon request
Purge gas and venting valve 24 V DC 0.6 mbar-l/s at 1.5 to 6 bar 0.6 mbar-l/s at 1 to 1.5 bar Cable set (2 pieces) for connection to the pump		121 33 800152V0010 411300V01
Cooling water valve kit		411300V02
Spare Parts Inlet screen DN 200 ISO-F and DN 200 CF DN 250 ISO-F and DN 250 CF		E 200 04 558 E 200 04 557
Included in the Delivery of the Pump	P	
Flanges for forevacuum, venting and purge gas are blank-flanged		
Converter-side mains plug (IP 54)		
Inlet screen		

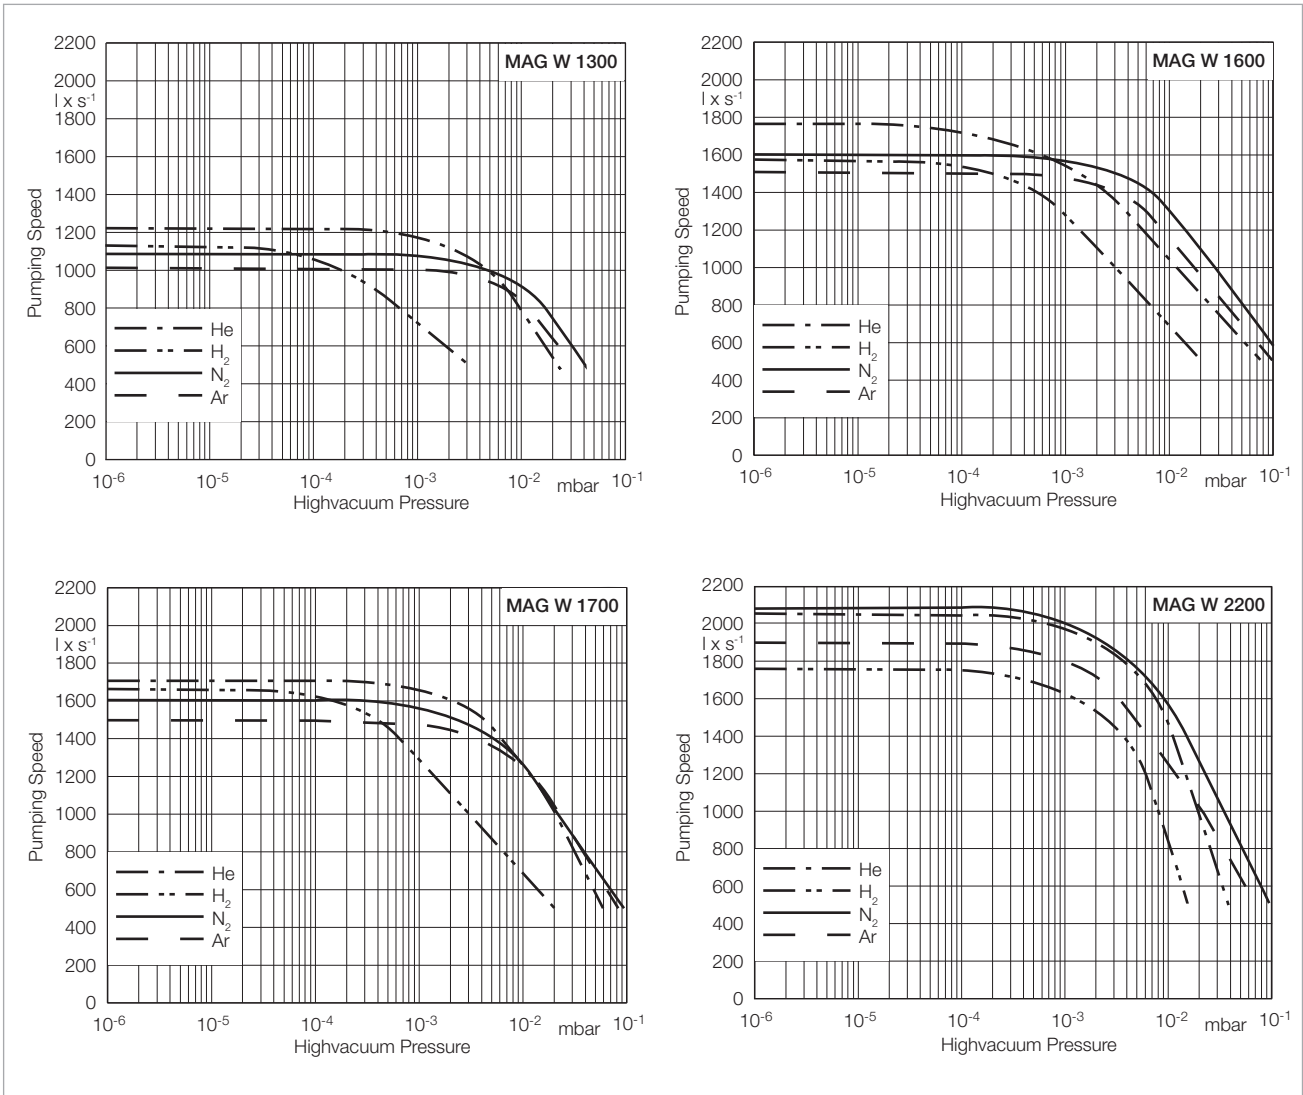

Pumping speed curves of the MAG W 1300, W 1600, W 1700 and W 2200

MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter, with Compound Stage

TURBOVAC MAG W 300/400 P



Typical Applications


- Gas analysis systems
- Particle accelerators
- Electron microscopes
- Research
- Coating systems

Technical Features


- Installation in any orientation
- DN 100 or 160 ISO-K and/or CF high vacuum connection
- DN 16 ISO-KF with clamped forevacuum connection
- Purge gas/venting connection DN 16 ISO-KF with clamped connection (purge/vent)
- Water or air cooling optional

Advantages to the User

- Highest pumping speed from the smallest possible size
- New standard regarding maintenance-free systems
- Suitability for vibration sensitive applications in the area of analytical engineering, thin-film technology, electron microscopes, research, development among others
- Flexibility due to the modular concept; alternatively the pump is available also with an integrated frequency converter

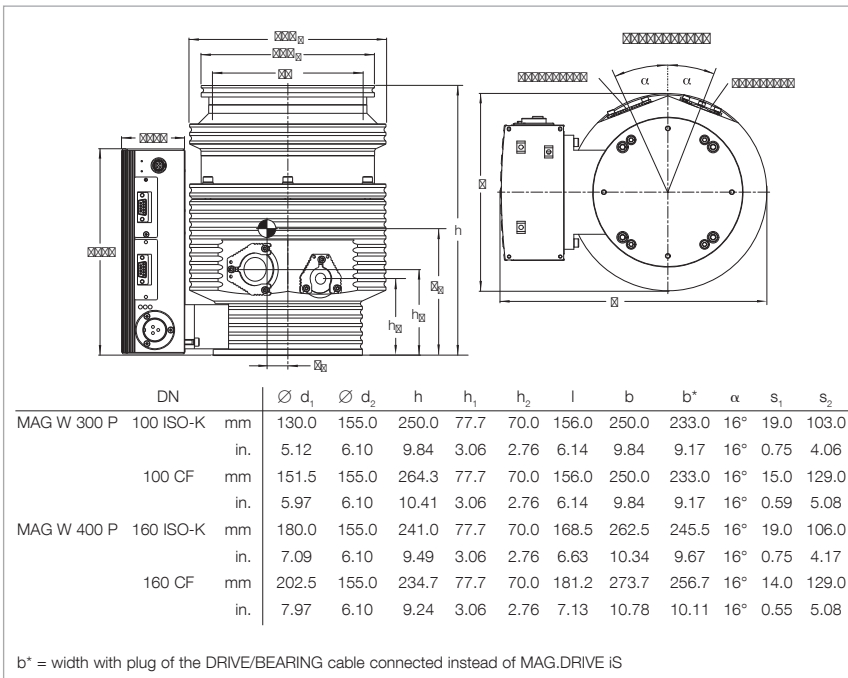

Dimensional drawing for the TURBOVAC MAG W 300/400 P

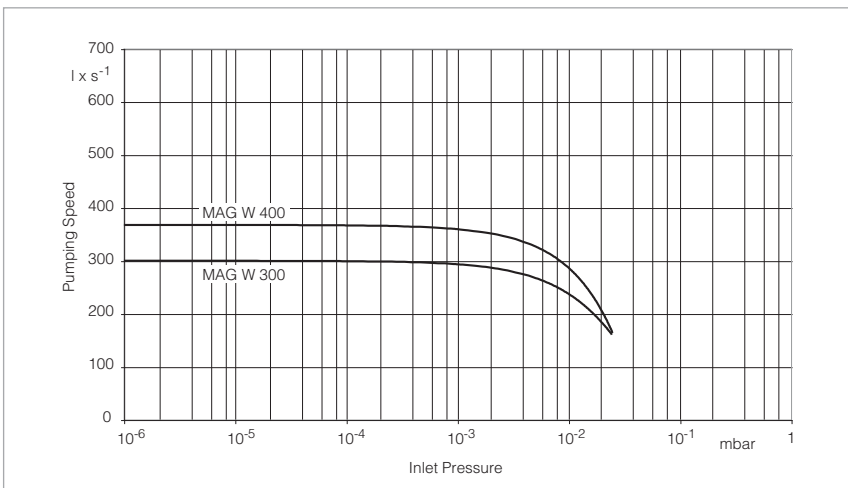

Pumping speed for N_2 of the TURBOVAC MAG W 300/400 P as a function of the inlet pressure

Technical Data

TURBOVAC MAG

W 300 P

W 400 P

Inlet flange	DN	100 ISO-K	100 CF	160 ISO-K	160 CF
Pumping speed					
N ₂	l x s ⁻¹	300	300	365	365
Ar	l x s ⁻¹	260	260	330	330
He	l x s ⁻¹	260	260	280	280
H ₂	l x s ⁻¹	190	190	200	200
Operating speed	min ⁻¹	58 800	58 800	58 800	58 800
Compression ratio					
N ₂		1.0 x 10 ¹⁰	1.0 x 10 ¹⁰	1.0 x 10 ¹⁰	1.0 x 10 ¹⁰
H ₂		3.2 x 10 ³	3.2 x 10 ³	3.2 x 10 ³	3.2 x 10 ³
He		9.2 x 10 ⁴	9.2 x 10 ⁴	9.2 x 10 ⁴	9.2 x 10 ⁴
Ultimate pressure	mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)
Max. degassing temperature	°C (°F)	–	80 (176)	–	80 (176)
Max. foreline pressure for N ₂	mbar (Torr)	8 (6)	8 (6)	8 (6)	8 (6)
Recommended backing pump		TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B
Run-up time	min	< 5	< 5	< 5	< 5
Foreline flange (clamped)	DN	16 ISO-KF	16 ISO-KF	16 ISO-KF	16 ISO-KF
Purge / vent port (clamped)	DN	16 ISO-KF	16 ISO-KF	16 ISO-KF	16 ISO-KF
Water cooling connection (optional)	G	1/8"	1/8"	1/8"	1/8"
Weight, approx.	kg (lbs)	12 (26)	12 (26)	12 (26)	12 (26)



Technical Data

MAG.DRIVE S


Voltage range	V	100 - 240, ±10 %
Nominal frequency	Hz	50 / 60
Power consumption		
stand-by	W	100
maximum	W	400
Max. motor voltage	V	48
Max. pump current	A	6
Fuses F1, F2 5 x 20 mm		10 A fast blow high breaking capacity 250 V
System fuse		L or G characteristic
Max. frequency	Hz	0 to 2000
Load capability, relay output X1	V / A	32 / 0,5
Temperature		
during operation	°C (°F)	0 to +45 (+32 to +113)
during storage	°C (°F)	-10 to +60 (+14 to +140)
Relative humidity of the air	%	95 (non-condensing)

Ordering Information

TURBOVAC MAG W 300/400 P

TURBOVAC MAG W 300 P with separate Frequency Converter and Compound Stage	P	Part No.	
DN 100 ISO-K DN 100 CF		410300V0005 410300V0006	
TURBOVAC MAG W 400 P with separate Frequency Converter and Compound Stage	P		
DN 160 ISO-K DN 160 CF		410400V0005 410400V0006	
Mandatory Accessories	P FC		
Electronic frequency converter MAG.DRIVE S MAG.DRIVE S with display		410300V0202 410300V0212	
Connecting cable DRIVE/BEARING (connection between pump and MAG.DRIVE S) 3.0 m (10.5 ft) 5.0 m (17.5 ft) 10.0 m (35.0 ft) 20.0 m (70.0 ft)		410300V4003 410300V4005 410300V4010 410300V4020	
Mains cable 3.0 m (10.5 ft) EURO plug US plug 5-15 P 2.0 m (7.5 ft) US plug 115 V AC		800102V0002 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V, 50/60 Hz; NEMA plug, US version		140 000 140 002	
TRIVAC D 8 B 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz; 250/440 V, 60 Hz		112 55 112 56	

With separate Frequency Converter

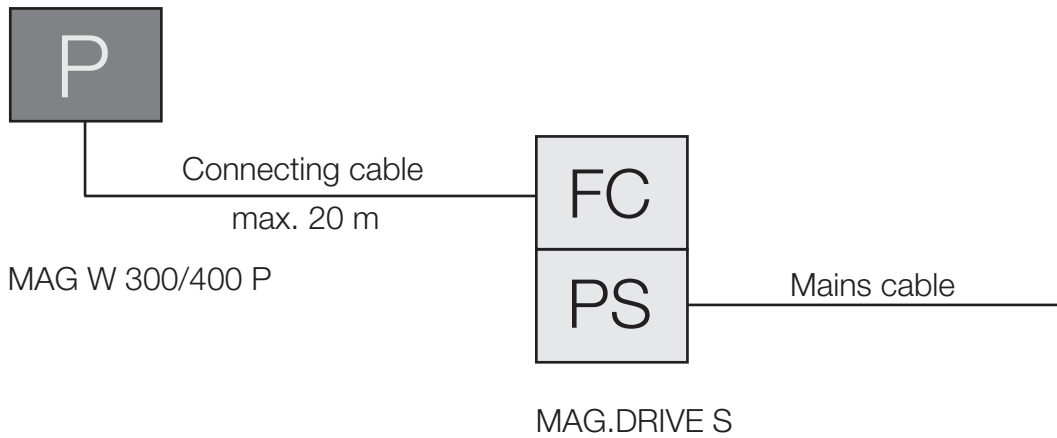

Ordering Information

TURBOVAC MAG W 300/400 P

Accessories, optional	P	Part No.
Inlet screen		
DN 100 ISO-K		
coarse (3.2 x 3.2 mm (0.13 x 0.13 in.))		800132V0101
fine (1.6 x 1.6 mm (0.06 x 0.06 in.))		800132V0102
DN 100 CF		
coarse (3.2 x 3.2 mm (0.13 x 0.13 in.))		200 91 514
fine (1.6 x 1.6 mm (0.06 x 0.06 in.))		E 200 17 195
DN 160 ISO-K		E 200 00 307
DN 160 CF		E 200 17 247
Flange heater		
100 CF, 230 V, 50 Hz		854 27
100 CF, 115 V, 60 Hz		854 28
160 CF, 230 V, 50 Hz		854 37
160 CF, 115 V, 60 Hz		854 38
Water cooling unit		410300V0101
Air cooling unit		410300V0102
Solenoid venting valve, normally closed		
24 V DC, DN 16 ISO-KF		800120V0011
Power failure venting valve, normally open		800120V0021
Included in the Delivery of the Pump	P	
Flanges for forevacuum, venting and purge gas are blank-flanged		
Centering ring with FPM sealing ring and a clamping yoke		

MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter, with Compound Stage

TURBOVAC MAG W 600/700 P



Typical Applications


- Gas analysis systems
- Particle accelerators
- Electron microscopes
- Research
- Coating systems

Technical Features

- Installation in any orientation
- DN 160 or 200 ISO-K and/or CF high vacuum connection
- DN 25 ISO-KF with clamped forevacuum connection
- Purge gas/venting connection DN 16 ISO-KF with clamped connection (purge/vent)
- Water or air cooling optional

Advantages to the User


- Highest pumping speed from the smallest possible size
- New standard regarding maintenance-free systems
- Suitability for vibration sensitive applications in the area of analytical engineering, thin-film technology, electron microscopes, research, development among others
- Flexibility due to the modular concept; alternatively the pump is available also with an integrated frequency converter

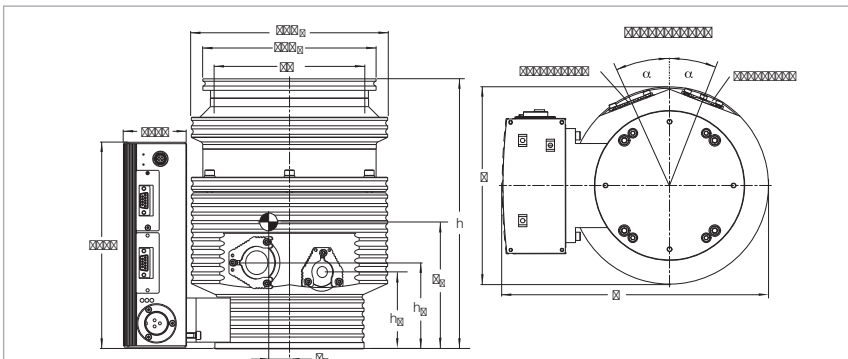

		DN	ø d ₁	ø d ₂	h	h ₁	h ₂	l	b	b*	α	s ₁	s ₂
MAG W 600 P	mm	160 ISO-K	180.0	204.0	281.5	90	80	204.0	274.5	257.5	21°	13.0	121.0
	in.		7.09	8.03	11.08	3.54	3.15	8.03	10.81	10.14	21°	0.51	4.76
MAG W 600 P	mm	160 CF	202.5	204.0	294.0	90	80	204.0	274.5	257.5	21°	10.0	150.0
	in.		7.97	8.03	11.57	3.54	3.15	8.03	10.81	10.14	21°	0.39	5.91
MAG W 700 P	mm	200 ISO-K	240.0	204.0	280.5	90	80	240.0	292.5	275.5	21°	13.0	130.0
	in.		9.45	8.03	11.04	3.54	3.15	9.45	11.52	10.85	21°	0.51	5.12
MAG W 700 P	mm	200 CF	253.0	204.0	275.0	90	80	253.0	299.0	282.0	21°	9.0	156.0
	in.		9.96	8.03	10.83	3.54	3.15	9.96	11.77	11.10	21°	0.35	6.14

b* = width with plug of the DRIVE/BEARING cable connected instead of MAG.DRIVE iS

Dimensional drawing for the TURBOVAC MAG W 600/700 P

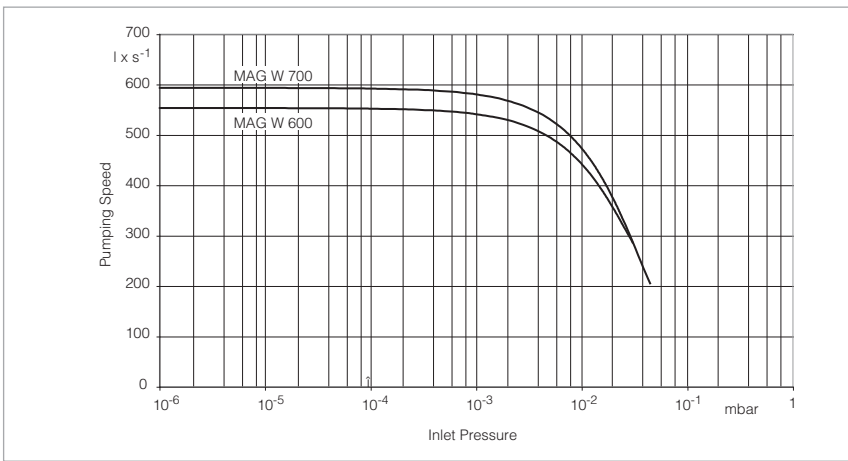

Pumping speed for N₂ of the TURBOVAC MAG W 600/700 P as a function of the inlet pressure

Technical Data

TURBOVAC MAG

W 600 P

W 700 P

Inlet flange	DN	160 ISO-K	160 CF	200 ISO-K	200 CF
Pumping speed					
N ₂	l x s ⁻¹	550	550	590	590
Ar	l x s ⁻¹	520	520	540	540
He	l x s ⁻¹	570	570	600	600
H ₂	l x s ⁻¹	410	410	430	430
Operating speed	min ⁻¹	48 000	48 000	48 000	48 000
Compression ratio					
N ₂		1.6 x 10 ¹⁰	1.6 x 10 ¹⁰	1.6 x 10 ¹⁰	1.6 x 10 ¹⁰
H ₂		3.4 x 10 ⁴	3.4 x 10 ⁴	3.4 x 10 ⁴	3.4 x 10 ⁴
He		1.7 x 10 ⁶	1.7 x 10 ⁶	1.7 x 10 ⁶	1.7 x 10 ⁶
Ultimate pressure	mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)
Max. degassing temperature	°C (°F)	–	80 (176)	–	80 (176)
Max. foreline pressure for N ₂	mbar (Torr)	6.0 (4.5)	6.0 (4.5)	6.0 (4.5)	6.0 (4.5)
Recommended backing pump		TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B	TRIVAC D 2,5 E TRIVAC D 8 B
Run-up time	min	< 6	< 6	< 6	< 6
Foreline flange (clamped)	DN	25 ISO-KF	25 ISO-KF	25 ISO-KF	25 ISO-KF
Purge / vent port (clamped)	DN	16 ISO-KF	16 ISO-KF	16 ISO-KF	16 ISO-KF
Water cooling connection (optional)	G	1/8"	1/8"	1/8"	1/8"
Weight, approx.	kg (lbs)	17 (37.5)	17 (37.5)	17 (37.5)	17 (37.5)



Technical Data

MAG.DRIVE S


Voltage range	V	100 - 240, ±10 %
Nominal frequency	Hz	50 / 60
Power consumption		
stand-by	W	100
maximum	W	400
Max. motor voltage	V	48
Max. pump current	A	6
Fuses F1, F2 5 x 20 mm		10 A fast blow high breaking capacity 250 V
System fuse		L or G characteristic
Max. frequency	Hz	0 to 2000
Load capability, relay output X1	V / A	32 / 0,5
Temperature		
during operation	°C (°F)	0 to +45 (+32 to +113)
during storage	°C (°F)	-10 to +60 (+14 to +140)
Relative humidity of the air	%	95 (non-condensing)

Ordering Information

TURBOVAC MAG W 600/700 P

TURBOVAC MAG W 600 P with separate Frequency Converter and Compound Stage	P	Part No.	
DN 160 ISO-K DN 160 CF		410600V0005 410600V0006	
TURBOVAC MAG W 700 P with separate Frequency Converter and Compound Stage	P		
DN 200 ISO-K DN 200 CF		410700V0005 410700V0006	
Mandatory Accessories	P FC		
Electronic frequency converter MAG.DRIVE S MAG.DRIVE S with display		410300V0202 410300V0212	
Connecting cable DRIVE/BEARING (connection between pump and MAG.DRIVE S) 3.0 m (10.5 ft) 5.0 m (17.5 ft) 10.0 m (35.0 ft) 20.0 m (70.0 ft)		410300V4003 410300V4005 410300V4010 410300V4020	
Mains cable 3.0 m (10.5 ft) EURO plug US plug 5-15 P 2.0 m (7.5 ft) US plug 115 V AC		800102V0002 800102V1002 992 76 513	
Forevacuum pump TRIVAC D 2,5 E 220-240 V, 50 Hz; 230 V, 60 Hz; Schuko plug, EURO version 110-120 V, 50/60 Hz; NEMA plug, US version		140 000 140 002	
TRIVAC D 8 B 1 phase motor; 230 V, 50/60 Hz 3 phase motor; 230/400 V, 50 Hz; 250/440 V, 60 Hz		112 55 112 56	

With separate Frequency Converter

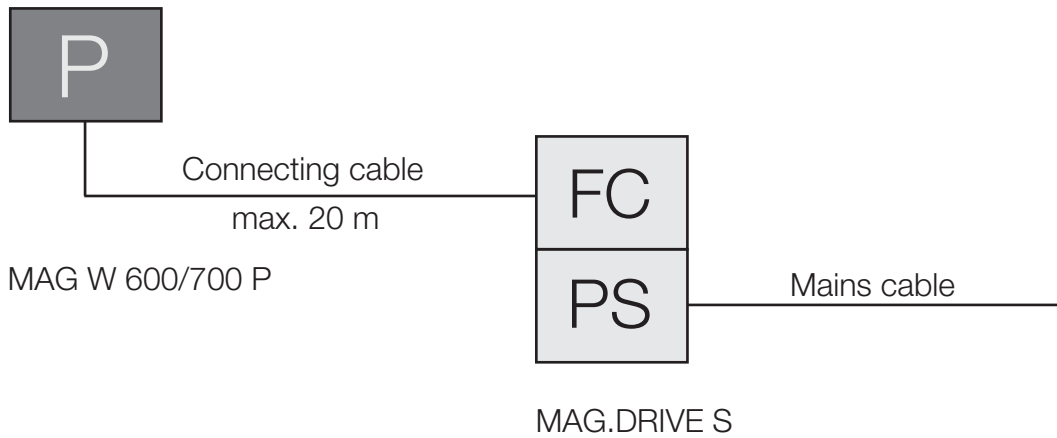

Ordering Information

TURBOVAC MAG W 600/700 P

Accessories, optional	P	Part No.
Inlet screen		
DN 160 ISO-K		E 200 00 307
DN 160 CF		E 200 17 247
DN 200 ISO-K		200 91 639
DN 200 CF		400 001 515
Flange heater		
160 CF, 230 V, 50 Hz		854 37
160 CF, 115 V, 60 Hz		854 38
Water cooling unit		410600V0101
Air cooling unit		410600V0102
Solenoid venting valve, normally closed		
24 V DC, DN 16 ISO-KF		800120V0011
Power failure venting valve, normally open		800120V0021
Included in the Delivery of the Pump	P	
Flanges for forevacuum, venting and purge gas are blank-flanged		
Centering ring with FPM sealing ring and a clamping yoke		


MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter, with Compound Stage

TURBOVAC MAG W 830/1300 C



Typical Applications

- Semiconductor processes, like PVD and ion implantation
- Transfer chambers
- Particle accelerators
- Research
- Coating systems

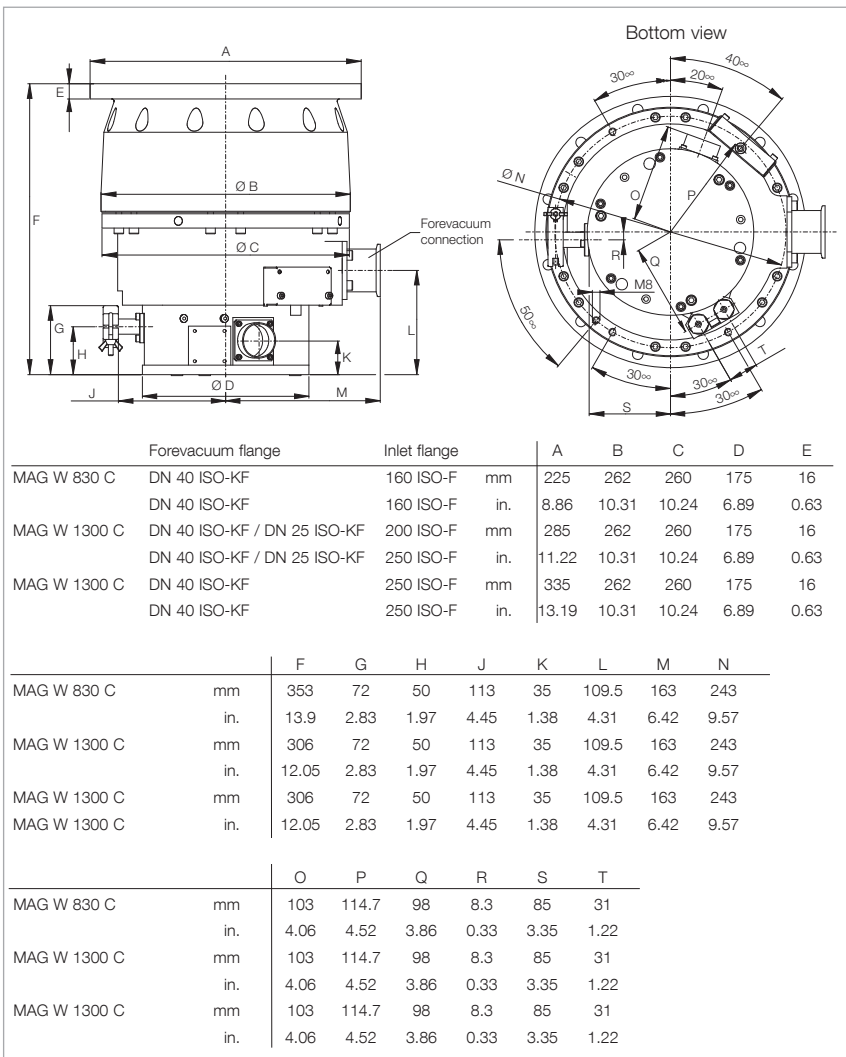

Dimensional drawing for the TURBOVAC MAG W 830/1300 C

Technical Features

- Active 5-axis magnetic bearing system
- Digital monitoring of the bearing system
- Low noise and vibration levels
- Installation in any orientation
- Advanced rotor design for high throughput
- Purge gas connection
- Intelligent power control system

Advantages to the User

- Maintenance-free
- High throughput for all process gases
- High pumping speed at low pressure
- High foreline pressure tolerance: up to 2 mbar (1.5 Torr)
- Lowest weight and size in its class
- Application specific design

Technical Data

TURBOVAC MAG

		W 830	W 830 C	W 1300	W 1300 C	
Inlet flange	DN	160 CF	160 ISO-F	200 CF	200 ISO-F	250 ISO-F
Pumping speed according to PNEUROP						
N ₂	l x s ⁻¹	900	700	1170	1100	1220
Ar	l x s ⁻¹	750	650	1100	1050	1180
He	l x s ⁻¹	900	500	1150	1100	1200
H ₂	l x s ⁻¹	740	350	920	920	1020
Operating speed	min ⁻¹	36 000	24 000	36 000	36 000	36 000
Compression ratio						
N ₂		1.5 x 10 ⁸	> 5 x 10 ⁷	1.5 x 10 ⁸	> 10 ⁸	> 10 ⁸
Ultimate pressure according to DIN 28 400						
	mbar (Torr)	< 1 x 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁹ (< 0.75 x 10 ⁻⁹)	< 1 x 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)
Max. foreline pressure for N ₂						
with convection cooling	mbar (Torr)	0.2 (0.15)	–	0.2 (0.15)	–	–
with water cooling	mbar (Torr)	2.0 (1.5)	2.0 (1.5)	2.0 (1.5)	2.0 (1.5)	2.0 (1.5)
Recommended backing pump						
Rotary vane pump		TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS
or dry compressing pump offering a pumping speed of 100 m ³ /h						
Run-up time	min	< 6	< 4	< 6	< 6	< 6
Foreline flange	DN	40 ISO-KF	40 ISO-KF	40 ISO-KF	40 ISO-KF	40 ISO-KF
Purge and vent port	DN	10 ISO-KF/ 16 ISO-KF	10 ISO-KF/ 16 ISO-KF	10 ISO-KF/ 16 ISO-KF	10 ISO-KF/ 16 ISO-KF	10 ISO-KF/ 16 ISO-KF
Cooling water connection (OD of tube)						
	mm (in.)	1/4"	1/4"	1/4"	6	6
Weight, approx.	kg (lbs)	35 (77.3)	32 (70.6)	35 (77.3)	32 (70.6)	32 (70.6)



Technical Data

MAG.DRIVE digital

Mains connection, 50/60 Hz	V	200 - 240, +10 %/-15 %
Current for connected consumers max.	A	20
Max. motor voltage	V	60
Nominal frequency	Hz	50/60
Permissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	483 x 213 x 1/2 19" (19.02 x 8.39 x 1/2 19")
Weight, approx.	kg (lbs)	10 (22)


Ordering Information

TURBOVAC MAG W 830 (C) / W 1300 (C)

TURBOVAC MAG W 830 (C) with separate Frequency Converter and Compound Stage	P	Part No.	
DN 160 CF (MAG W 830) DN 160 ISO-F (MAG W 830 C)		400100V0041 400100V0005	
TURBOVAC MAG W 1300 (C) with separate Frequency Converter and Compound Stage	P		
DN 200 CF (MAG W 1300) DN 200 ISO-F (MAG W 1300 C) DN 250 ISO-F (MAG W 1300 C)		400110V0051 400110V0011 400110V0021	
Mandatory Accessories		P FC	
Electronic frequency converter ¹⁾ MAG.DRIVE digital MAG.DRIVE digital, Profibus MAG.DRIVE digital, RS 232 C interface		400035V0011 400035V0013 400035V0014	
Plug-in control		121 36	
Connecting cable converter – pump ²⁾ 1.5 m (5.25 ft) DRIVE/BEARING 3.0 m (10.5 ft) DRIVE/BEARING 5.0 m (17.5 ft) DRIVE/BEARING 10.0 m (35.0 ft) DRIVE/BEARING 20.0 m (70.0 ft) DRIVE/BEARING		400036V0001 400036V0008 400036V0004 400036V0002 400036V0003	
Forevacuum pump TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 208-23/460 V, 60 Hz / 200-220/380 V, 60 Hz		113 98 913 98-2	
For further types, see Catalog Part “Oil Sealed Vacuum Pumps”			


¹⁾ Included are 2 mains cords. One with EURO plug and one with US plug (220 V AC).
Replacement mains cord are Part Numbers 180 097 or 180 096 respectively

²⁾ Further connecting cables can be found under MAG.DRIVE digital in the chapter
“Turbomolecular Pumps with Magnetic Rotor Suspension”,
para. “Electronic Frequency Converters”

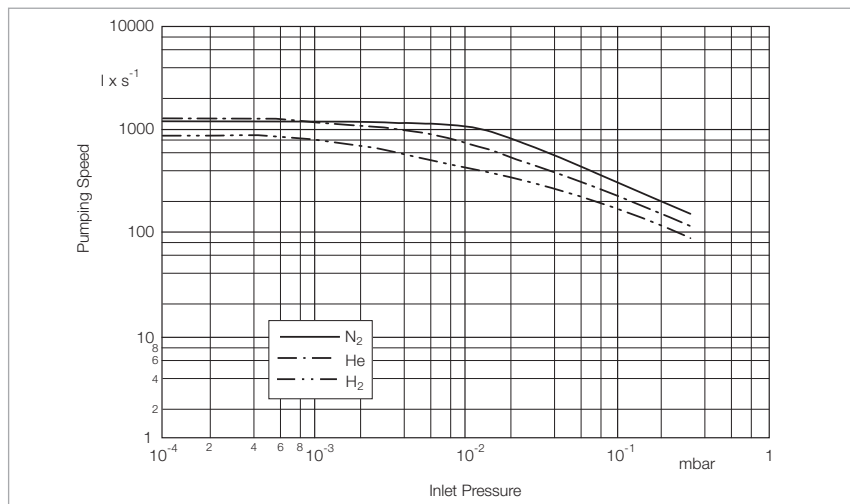

Pumping speed of the TURBOVAC MAG W 1300 C (DN 250) as a function of the inlet pressure

With separate Frequency Converter

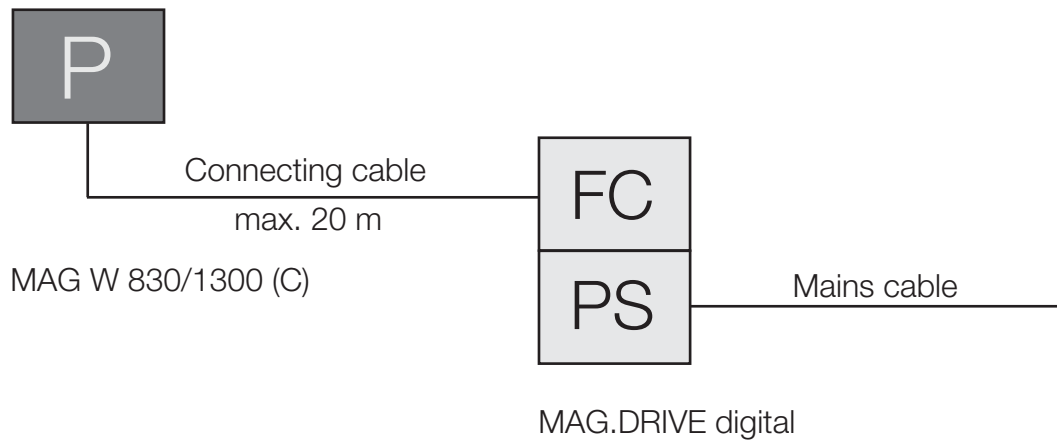

Ordering Information

TURBOVAC MAG W 830 (C) / W 1300 (C)

Accessories, optional	P	Part No.
Purge gas and venting valve		121 33
Connecting cable for optional purge gas valve (pump/converter)		
1.5 m (5.25 ft)		400038V0007
3.0 m (10.5 ft)		400038V0006
10.0 m (35.0 ft)		400038V0002
20.0 m (70.0 ft)		400038V0009
Included in the Delivery of the Pump	P	
Inlet screen		
DN 160 ISO-F		E 200 00 307
DN 160 CF		E 200 17 247
DN 200 ISO-F		200 91 470
DN 200 CF		E 200 17 248
DN 250 ISO-F		200 91 471

MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter, with Compound Stage

TURBOVAC MAG W 1500 CT




Typical Applications

- All major semiconductor processes such as Etch, CVD, PVD and Ion Implantation

Technical Features

- Active 5-axis magnetic bearing system
- Bearing and temperature system are controlled digitally
- Corrosion resistant
- Low noise and vibration levels
- Installation in any orientation
- Advanced rotor design for high pump speeds and forevacuum pressures
- Integrated purge gas system
- Integrated temperature management system (TMS)
- Intelligent power control system

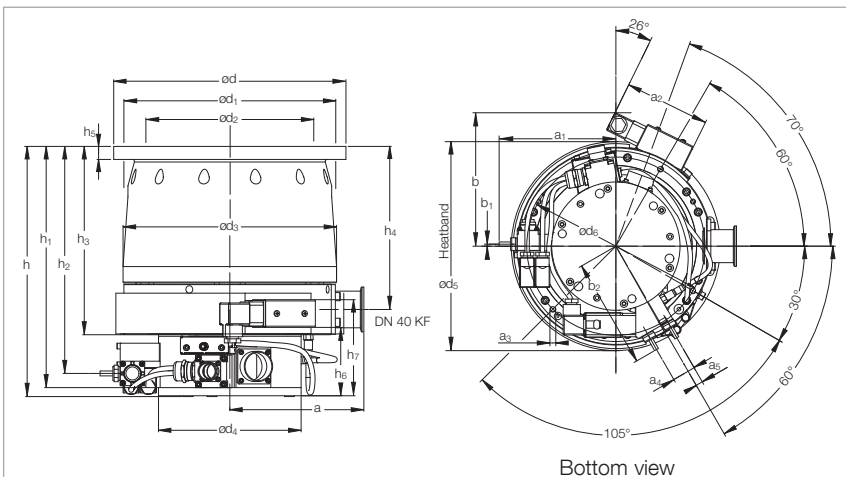

		a	a ₁	a ₂	a ₃	a ₄	a ₅	b	b ₁	b ₂	d	d ₁	d ₂
200 ISO-F	mm	164.5	159	116.5	M8 x 15	32	9	182	3	150	285	260	213
	in.	6.48	6.26	4.59	M8 x 0.6	1.26	0.35	7.17	0.12	5.91	11.22	10.24	8.39
250 ISO-F	mm	164.5	159	116.5	M8 x 15	32	9	182	3	150	335	310	261
	in.	6.48	6.26	4.59	M8 x 0.6	1.26	0.35	7.17	0.12	5.91	11.22	12.20	10.28

		d ₃	d ₄	d ₅	d ₆	h	h ₁	h ₂	h ₃	h ₄	h ₅	h ₆	h ₇
200 ISO-F	mm	262	175	285	243	307	296	279	231	200	16	84	118
	in.	10.31	6.89	11.22	9.57	12.09	11.65	10.98	9.09	7.87	0.63	3.31	4.65
250 ISO-F	mm	262	175	285	243	307	296	279	231	200	16	84	118
	in.	10.31	6.89	11.22	9.57	12.09	11.65	10.98	9.09	7.87	0.63	3.31	4.65

Dimensional drawing for the TURBOVAC MAG W 1500 CT

Advantages to the User

- Maintenance-free
- High throughput for all process gases
- High pumping speed at low pressure
- High foreline pressure tolerance: up to 2.6 mbar (1.95 Torr)
- High resistance against corrosive gases
- Robust against particles and deposits
- Temperature control up to 90 °C (194 °F) to avoid condensation
- Lowest weight and size in its class
- Application specific design

Technical Data

TURBOVAC MAG W 1500 CT

Inlet flange	DN	200 ISO-F	250 ISO-F	200 CF
Pumping speed according to PNEUROP				
N ₂	l x s ⁻¹	1100	1220	1100
Ar	l x s ⁻¹	1050	1180	1050
He	l x s ⁻¹	1100	1200	1100
H ₂	l x s ⁻¹	920	1020	920
Operating speed	min ⁻¹	36 000	36 000	36 000
Compression ratio				
N ₂		> 10 ⁸	> 10 ⁸	> 10 ⁸
Ultimate pressure according to DIN 28 400	mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 10 ⁻¹⁰ (< 0.75 10 ⁻¹⁰)
Max. foreline pressure for N ₂	mbar (Torr)	2.6 (1.95)	2.6 (1.95)	2.6 (1.95)
Recommended backing pump				
Rotary vane pump or dry compressing pump offering a pumping speed of 100 m ³ /h		TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS
Run-up time at 95% of nominal speed	min	< 6	< 6	< 6
Foreline flange	DN	40 ISO-KF	40 ISO-KF	40 ISO-KF
Purge and vent port	VCR	1/4"	1/4"	1/4"
Cooling water connection (OD of tube)	mm (in.)	6.4 (0.25)	6.4 (0.25)	6.4 (0.25)
Weight, approx.	kg (lbs)	32 (70.6)	32 (70.6)	32 (70.6)



Technical Data

MAG.DRIVE digital

Mains connection, 50/60 Hz	V	200 - 240, +10 %/-15 %
Current for connected consumers max.	A	20
Max. motor voltage	V	60
Nominal frequency	Hz	50/60
Permissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	483 x 213 x 1/2 19" (19.02 x 8.39 x 1/2 19")
Weight, approx.	kg (lbs)	10 (22)

Ordering Information


TURBOVAC MAG W 1500 CT

TURBOVAC MAG W 1500 CT with separate Frequency Converter and Compound Stage	Part No.	
DN 200 ISO-F DN 250 ISO-F DN 200 CF	400026V0002 400027V0002 400030V0002	
Mandatory Accessories		
Electronic frequency converter ¹⁾ MAG.DRIVE digital MAG.DRIVE digital, Profibus MAG.DRIVE digital, RS 232 C interface	400035V0011 400035V0013 400035V0014	
Connecting cable converter – pump ²⁾ 1.5 m (5.25 ft) DRIVE/BEARING 1.5 m (5.25 ft) TMS 3.0 m (10.5 ft) DRIVE/BEARING 3.0 m (10.5 ft) TMS 5.0 m (17.5 ft) DRIVE/BEARING 5.0 m (17.5 ft) TMS 10.0 m (35.0 ft) DRIVE/BEARING 10.0 m (35.0 ft) TMS 20.0 m (70.0 ft) DRIVE/BEARING 20.0 m (70.0 ft) TMS	400036V0001 400037V0001 400036V0008 400037V0008 400036V0004 400037V0004 400036V0002 400037V0002 400036V0003 400037V0003	
Plug-in control	121 36	
Forevacuum pump TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 208-23/460 V, 60 Hz / 200-220/380 V, 60 Hz	113 98 913 98-2	
For further types, see Catalog Part "Oil Sealed Vacuum Pumps"		

¹⁾ Included are 2 mains cords. One with EURO plug and one with US plug (220 V AC).
 Replacement mains cord are Part Numbers 180 097 or 180 096 respectively

²⁾ Further connecting cables can be found under MAG.DRIVE digital in the chapter
 "Turbomolecular Pumps with Magnetic Rotor Suspension",
 para. "Electronic Frequency Converters"


With separate Frequency Converter

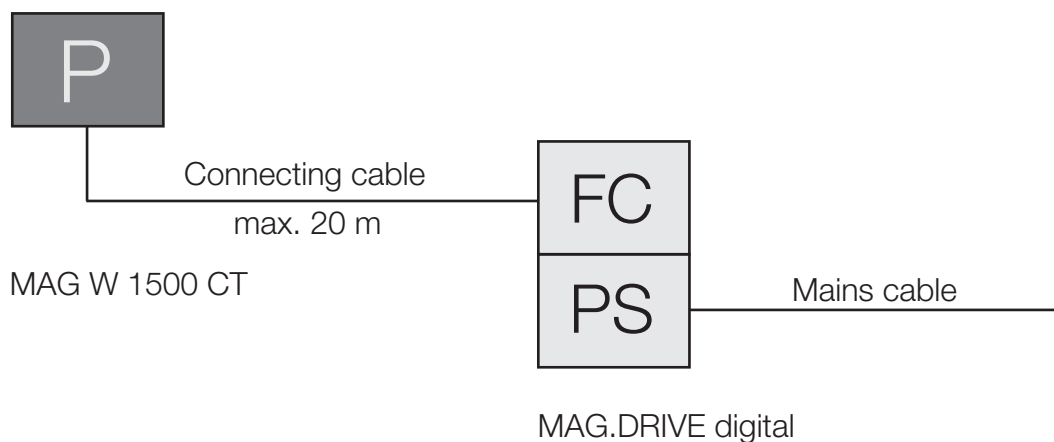

Ordering Information

TURBOVAC MAG W 1500 CT

Accessories, optional	P	Part No.
Seal kit DN 250 metal		200 07 901
Included in the Delivery of the Pump	P	
Inlet screen DN 200 ISO-F DN 250 ISO-F DN 250 CF		200 91 470 200 91 471 200 91 638
Integrated purge gas system VRC nut 1/4"		
Integrated temperature management system		
Cooling water connection Swagelock 1/4" tube		
Included in the Delivery of the Frequency Converter	FC	
Mains cord, 3 m (10.5 ft.) long, approx. with EURO or US plug		

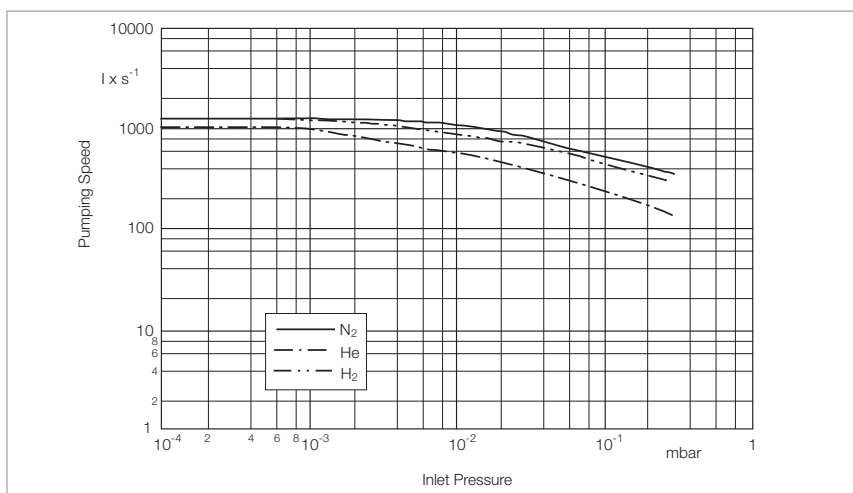

Pumping speed of the TURBOVAC MAG W 1500 CT (DN 250) as a function of the inlet pressure

MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter with Compound Stage

TURBOVAC MAG W 2000 C/CT



Typical Applications


- All major semiconductor processes such as Etch, CVD, PVD and Ion Implantation

Technical Features


- Active 5-axis magnetic bearing system
- Patented KEPLA-COAT® for rotor and stator to prevent corrosion
- Low noise and vibration levels
- Installation in any orientation
- Advanced rotor design for high pump speeds and forevacuum pressures
- Integrated purge gas system
- CT versions: Integrated temperature management system (TMS)

Advantages to the User

- Maintenance-free
- High throughput for all etch gases
- High pumping speed at low pressure
- High foreline pressure tolerance: up to 5.3 mbar (4 Torr)
- High resistance against corrosive gases
- Robust against particles and deposits
- Temperature management system (TMS) to avoid condensation
- Application specific design

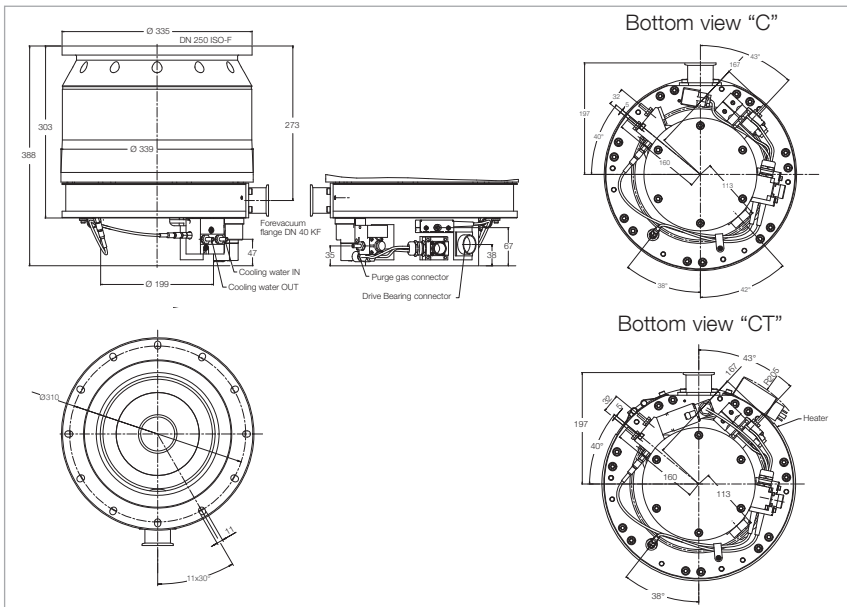

Dimensional drawing for the TURBOVAC MAG W 2000 C/CT

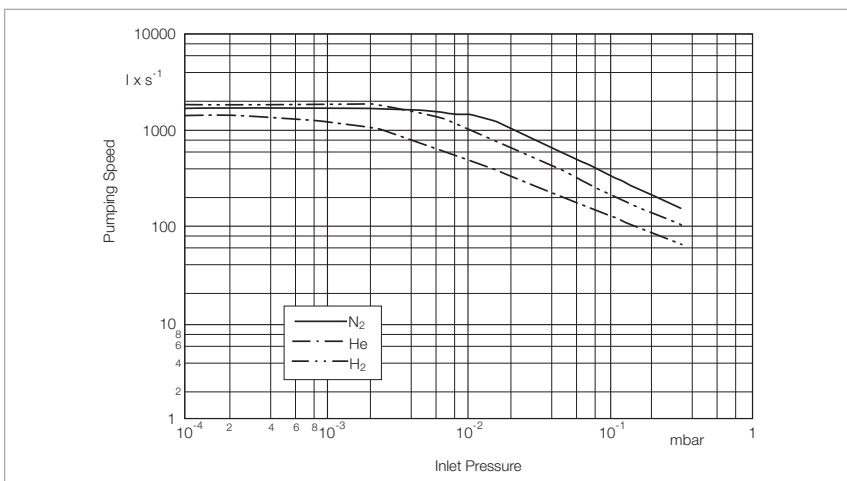

Pumping speed of the TURBOVAC MAG W 2000 CT (DN 250) as a function of the inlet pressure

Technical Data**TURBOVAC MAG****W 2000 C****W 2000 CT**



Inlet flange	DN	250 ISO-F	250 ISO-F
Pumping speed according to PNEUROP			
N ₂	l x s ⁻¹	1760	1760
Ar	l x s ⁻¹	1650	1650
He	l x s ⁻¹	1800	1800
H ₂	l x s ⁻¹	1500	1500
Operating speed	min ⁻¹	28 800	28 800
Compression ratio			
N ₂		> 10 ⁸	> 10 ⁸
Ultimate pressure according to DIN 28 400			
	mbar (Torr)	< 10 ⁻⁹ (< 0.75 x 10 ⁻⁹)	< 10 ⁻⁹ (< 0.75 x 10 ⁻⁹)
Max. foreline pressure for N ₂	mbar (Torr)	3.5 (2.63)	3.5 (2.63)
Recommended backing pump			
Rotary vane pump or dry compressing pump offering a pumping speed of 100 m ³ /h		TRIVAC D 65 BCS	TRIVAC D 65 BCS
Run-up time	min	< 8	< 8
Foreline flange	DN	40 ISO-KF	40 ISO-KF
Purge and vent port	VCR	1/4"	1/4"
Cooling water connection			
(OD of tube)	mm (in.)	6.4 (0.25)	6.4 (0.25)
Weight, approx.	kg (lbs)	68 (150)	68 (150)

Technical Data**MAG.DRIVE digital**

Mains connection, 50/60 Hz	V	200 - 240, +10 %/-15 %
Current for connected consumers max.	A	20
Max. motor voltage	V	60
Nominal frequency	Hz	50/60
Permissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	483 x 213 x 1/2 19" (19.02 x 8.39 x 1/2 19")
Weight, approx.	kg (lbs)	10 (22)

Ordering Information


TURBOVAC MAG W 2000 C/CT

TURBOVAC MAG W 2000 C/CT with separate Frequency Converter and Compound Stage	P	Part No.	
DN 250 ISO-F (MAG W 2000 C) DN 250 ISO-F (MAG W 2000 CT)		400047V0001 400047V0002	
Mandatory Accessories		P	FC
Electronic frequency converter ¹⁾ MAG.DRIVE digital MAG.DRIVE digital, Profibus MAG.DRIVE digital, RS 232 C interface		400035V0011 400035V0013 400035V0014	
Connecting cable converter – pump ²⁾ 1.5 m (5.25 ft) DRIVE/BEARING 1.5 m (5.25 ft) TMS 3.0 m (10.5 ft) DRIVE/BEARING 3.0 m (10.5 ft) TMS 5.0 m (17.5 ft) DRIVE/BEARING 5.0 m (17.5 ft) TMS 10.0 m (35.0 ft) DRIVE/BEARING 10.0 m (35.0 ft) TMS 20.0 m (70.0 ft) DRIVE/BEARING 20.0 m (70.0 ft) TMS		400036V0001 400037V0001 400036V0008 400037V0008 400036V0004 400037V0004 400036V0002 400037V0002 400036V0003 400037V0003	
Plug-in control		121 36	
Forevacuum pump TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 208-23/460 V, 60 Hz / 200-220/380 V, 60 Hz		113 98 913 98-2	
For further types, see Catalog Part “Oil Sealed Vacuum Pumps”			

¹⁾ Included are 2 mains cords. One with EURO plug and one with US plug (220 V AC).
 Replacement mains cord are Part Numbers 180 097 or 180 096 respectively

²⁾ Further connecting cables can be found under MAG.DRIVE digital in the chapter
 “Turbomolecular Pumps with Magnetic Rotor Suspension”,
 para. “Electronic Frequency Converters”

With separate Frequency Converter

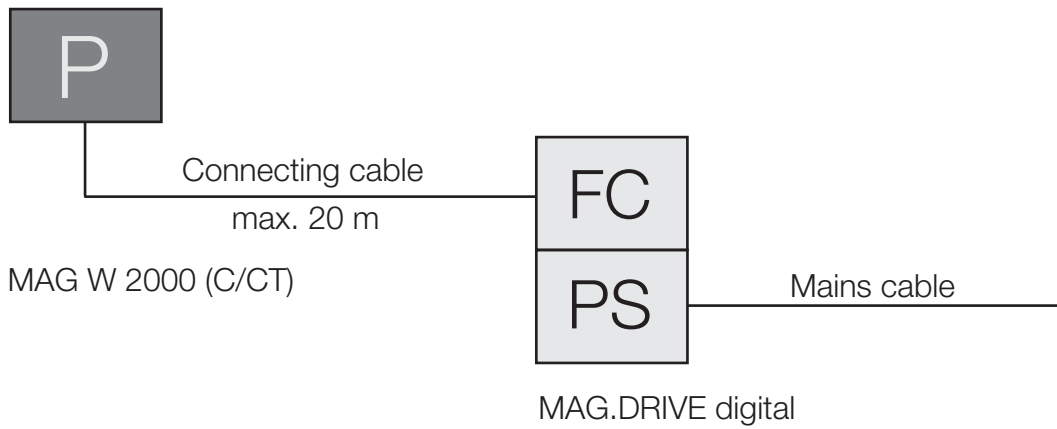

Ordering Information

TURBOVAC MAG W 2000 C/CT

Included in the Delivery of the Pump	P	Part No.
Inlet screen DN 250 ISO-F		200 91 471
Integrated purge gas system VRC nut 1/4"		
Integrated temperature management system (only CT version)		
Cooling water connection Swagelock 1/4" tube		
Included in the Delivery of the Frequency Converter	FC	
Mains cord, 3 m (10.5 ft.) long, approx. with EURO or US plug		

MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter, with Compound Stage

TURBOVAC MAG W 2200 C/CT



Typical Applications


- All major semiconductor processes such as Etch, CVD, PVD and Ion Implantation
- Coating systems

Versions with CF high vacuum connection

- Particle accelerators
- Research

Technical Features

- Active 5-axis magnetic bearing system
- Digital monitoring of the bearing system
- Low noise and vibration levels
- Installation in any orientation
- Advanced rotor design for high pump speeds and forevacuum pressures
- Purge gas connection
- Intelligent power control system
- Integrated temperature management System (TMS) ("CT" version only)

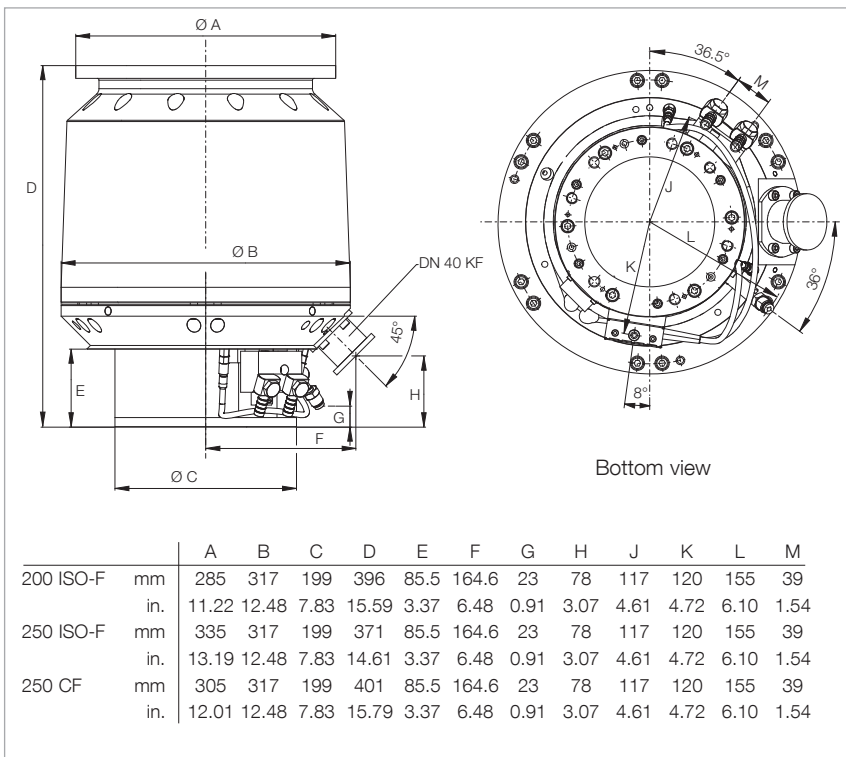

Dimensional drawing for the TURBOVAC MAG W 2200 C

Advantages to the User

- Maintenance-free
- High throughput for all process gases
- High pumping speed at low pressure
- High foreline pressure tolerance: up to 2 mbar (1.5 Torr)
- Lowest weight and size in its class
- Application specific design

Technical Data

TURBOVAC MAG

W 2200 C/CT

W 2200

Inlet flange	DN	200 ISO-F	250 ISO-F	250 CF
Pumping speed according to PNEUROP				
N ₂	l x s ⁻¹	1600	2000	1800
Ar	l x s ⁻¹	1450	1900	1700
He	l x s ⁻¹	1780	1980	1980
H ₂	l x s ⁻¹	1720	1930	1930
Operating speed	min ⁻¹	29 400	29 400	29 400
Compression ratio				
N ₂		> 1 x 10 ⁸	> 1 x 10 ⁸	1 x 10 ⁸
Ultimate pressure according to DIN 28 400				
	mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)	< 1 x 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)
Max. foreline pressure for N ₂				
with convection cooling	mbar (Torr)	-	-	0.1 (0.075)
with water cooling	mbar (Torr)	2 (1.5)	2 (1.5)	1 (0.75)
Recommended backing pump				
Rotary vane pump		TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS
or dry compressing pump				
offering a pumping speed of 100 m ³ /h				
Run-up time				
at 95% of nominal speed	min	< 8	< 8	< 8
Foreline flange	DN	40 ISO-KF	40 ISO-KF	40 ISO-KF
Purge and vent port		1/4" VCR	1/4" VCR	DN 10/16
Cooling water connection				
(OD of tube)		1/2"	1/2"	Swagelok tube 1/4"
Weight, approx.	kg (lbs)	48 (106)	48 (106)	60 (132)

High Vacuum Pumps



Technical Data

MAG.DRIVE digital

Mains connection, 50/60 Hz	V	200 - 240, +10 %/-15 %
Current for connected consumers max.	A	20
Max. motor voltage	V	60
Nominal frequency	Hz	50/60
Permissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	483 x 213 x 1/2 19" (19.02 x 8.39 x 1/2 19")
Weight, approx.	kg (lbs)	10 (22)

Ordering Information

TURBOVAC MAG W 2200 C/CT


TURBOVAC MAG W 2200 C/CT with separate Frequency Converter and Compound Stage	P	Part No.	
DN 200 ISO-F (MAG W 2200 C) DN 250 ISO-F (MAG W 2200 C) DN 250 CF (MAG W 2200) DN 200 ISO-F (MAG W 2200 CT) DN 250 ISO-F (MAG W 2200 CT)		400081V0011 400081V0021 400081V0061 400081V0013 400081V0023	
Mandatory Accessories		P FC	
Electronic frequency converter ¹⁾ MAG.DRIVE digital MAG.DRIVE digital, Profibus MAG.DRIVE digital, RS 232 C interface		400035V0011 400035V0013 400035V0014	
Connecting cable converter – pump ²⁾ 1.5 m (5.25 ft) DRIVE/BEARING 1.5 m (5.25 ft) TMS ³⁾ 3.0 m (10.5 ft) DRIVE/BEARING 3.0 m (10.5 ft) TMS ³⁾ 5.0 m (17.5 ft) DRIVE/BEARING 5.0 m (17.5 ft) TMS ³⁾ 10.0 m (35.0 ft) DRIVE/BEARING 10.0 m (35.0 ft) TMS ³⁾ 20.0 m (70.0 ft) DRIVE/BEARING 20.0 m (70.0 ft) TMS ³⁾		400036V0001 400037V0001 400036V0008 400037V0008 400036V0004 400037V0004 400036V0002 400037V0002 400036V0003 400037V0003	
Plug-in control		121 36	
Forevacuum pump TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 208-23/460 V, 60 Hz / 200-220/380 V, 60 Hz		113 98 913 98-2	
For further types, see Catalog Part “Oil Sealed Vacuum Pumps”			

¹⁾ Included are 2 mains cords. One with EURO plug and one with US plug (220 V AC).
Replacement mains cord are Part Numbers 180 097 or 180 096 respectively

²⁾ Further connecting cables can be found under MAG.DRIVE digital in the chapter
“Turbomolecular Pumps with Magnetic Rotor Suspension”,
para. “Electronic Frequency Converters”

³⁾ TMS connecting cables are only needed for the “CT” version of the TURBOVAC MAG W 2200


With separate Frequency Converter

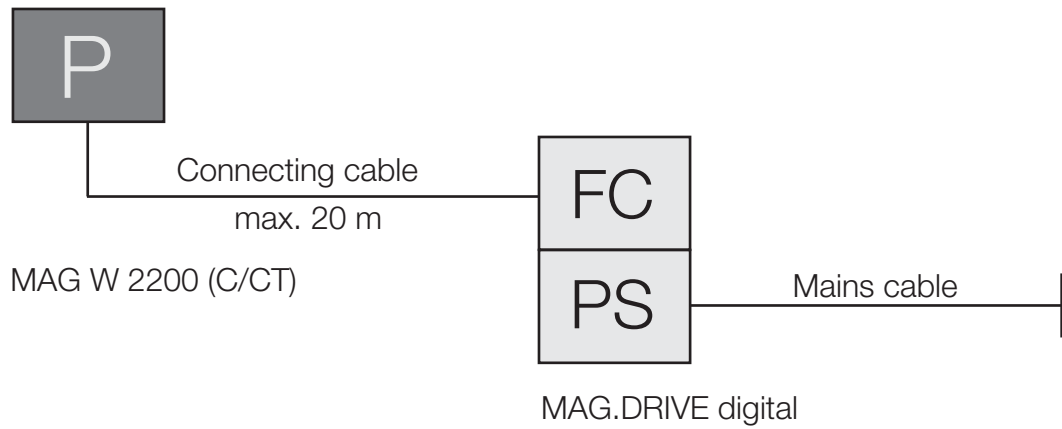

Ordering Information

TURBOVAC MAG W 2200 C/CT

Accessories, optional	P	Part No.
Purge gas and venting valve		121 33
Connection cable for optional seal gas valve (pump/converter)		
1.5 m (5.25 ft)		400038V0007
3.0 m (10.5 ft)		400038V0006
10.0 m (35.0 ft)		400038V0002
20.0 m (70.0 ft)		400038V0009
Seal kit		
DN 250 metal		200 07 901
Included in the Delivery of the Pump	P	
Inlet screen		
DN 200 ISO-F		E 400 000 096
DN 250 ISO-F		E 400 000 100
DN 250 CF		E 200 15 157
Included in the Delivery of the Frequency Converter	FC	
Mains cord, 3 m (10.5 ft.) long, approx. with EURO or US plug		

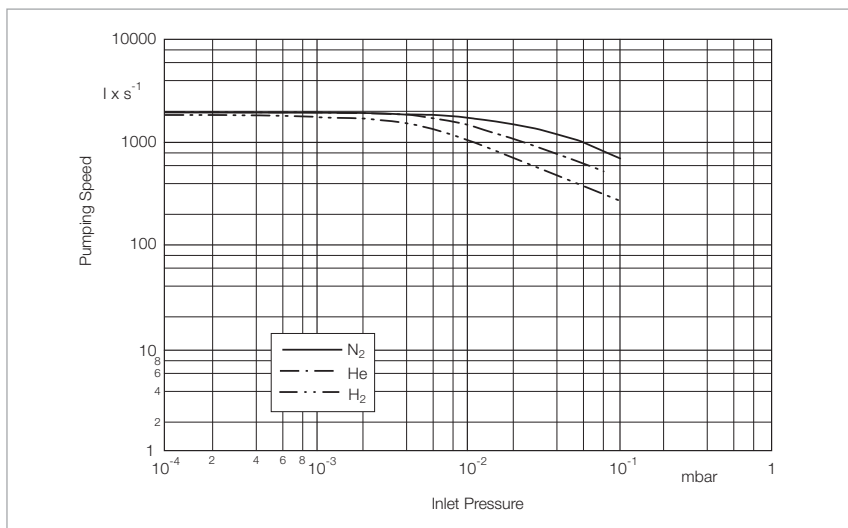


Pumping speed of the TURBOVAC MAG W 2200 C (DN 250) as a function of the inlet pressure

MAG DIGITAL - Magnetic Rotor Suspension with separate Frequency Converter, with Compound Stage

TURBOVAC MAG W 2800/3200 C/CT



TURBOVAC MAG W 2800 CT (left) and TURBOVAC MAG W 3200 CT (right)

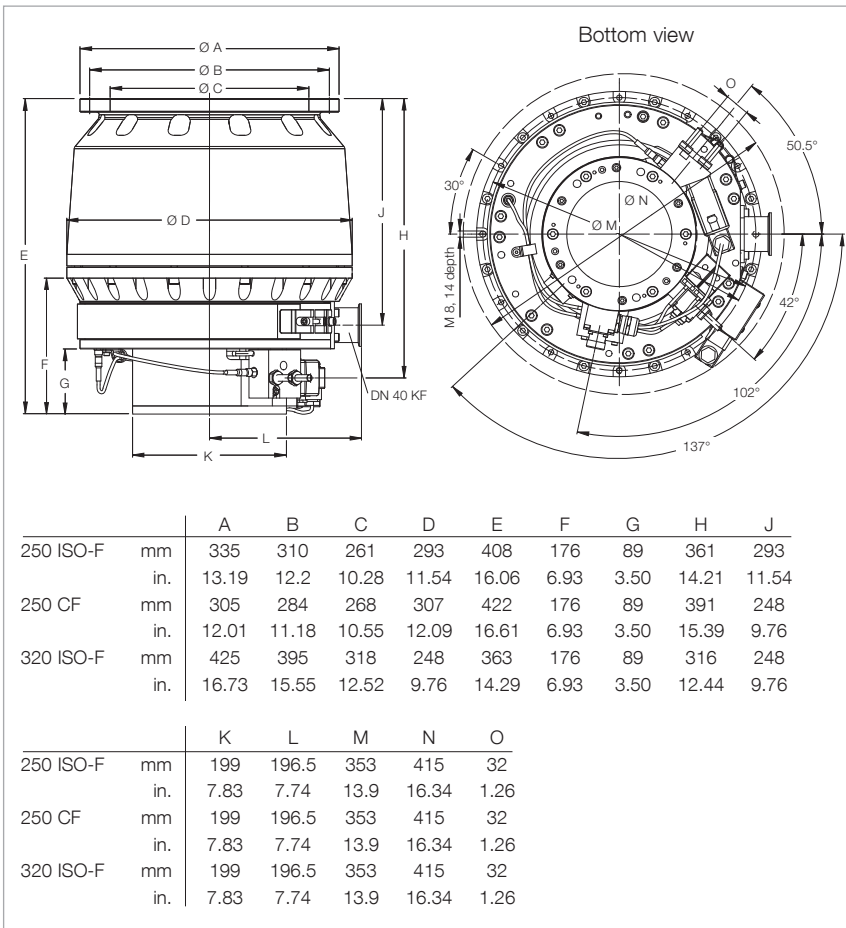

Dimensional drawing for the TURBOVAC MAG W 2800/3200 C/CT

Typical Applications

- All major semiconductor processes such as Etch, CVD, PVD and Ion Implantation

Versions with CF high vacuum connection

- Particle accelerators
- Research

Technical Features

- Active 5-axis magnetic bearing system
- Bearing and temperature system are controlled digitally
- Corrosion resistant
- Low noise and vibration levels
- Installation in any orientation
- Advanced rotor design for high pump speeds and forevacuum pressures
- Integrated purge gas system
- CT versions: Integrated temperature management system (TMS)
- Intelligent power control system

Advantages to the User

- Maintenance-free
- High throughput for all process gases
- High pumping speed at low pressure
- High foreline pressure tolerance: up to 2 mbar (1.5 Torr)
- High resistance against corrosive gases
- Robust against particles and deposits
- Temperature control up to 90 °C (194 °F) to avoid condensation
- Lowest weight and size in its class
- Application specific design

Technical Data**TURBOVAC MAG**




		W 2800 C	W 2800 CT	W 2800	W 3200 CT
Inlet flange	DN	250 ISO-F	250 ISO-F	250 CF	320 ISO-F
Pumping speed according to PNEUROP					
N ₂	l x s ⁻¹	2650	2650	2650	3200
Ar	l x s ⁻¹	2450	2450	2450	3000
He	l x s ⁻¹	2650	2650	2650	3000
H ₂	l x s ⁻¹	2100	2100	2100	2250
Operating speed	min ⁻¹	28 800	28 800	28 800	28 800
Compression ratio					
N ₂		1 x 10 ⁸	1 x 10 ⁸	1 x 10 ⁹	1 x 10 ⁸
Ultimate pressure according to DIN 28 400					
	mbar (Torr)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)	< 1 x 10 ⁻¹⁰ (< 0.75 x 10 ⁻¹⁰)	< 10 ⁻⁸ (< 0.75 x 10 ⁻⁹)
Max. foreline pressure for N₂					
with convection cooling	mbar (Torr)	–	–	0.3 (0.23)	–
with water cooling	mbar (Torr)	2.0 (1.5)	2.0 (1.5)	3.0 (2.3)	2.0 (1.5)
Recommended backing pump					
Rotary vane pump or dry compressing pump offering a pumping speed of 100 m ³ /h		TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS	TRIVAC D 65 BCS
Run-up time	min	< 10	< 10	< 10	< 10
Foreline flange	DN	40 ISO-KF	40 ISO-KF	40 ISO-KF	40 ISO-KF
Purge / vent port		1/4" VCR	1/4" VCR	DN 10/16	1/4" VCR
Cooling water connection	Swagelok tube	1/4"	1/4"	1/4"	1/4"
Weight, approx.	kg (lbs)	64 (141.3)	64 (141.3)	75 (165.6)	65 (143.5)

Technical Data**MAG.DRIVE digital**

Mains connection, 50/60 Hz	V	200 - 240, +10 %/-15 %
Current for connected consumers, max.	A	20
Max. motor voltage	V	60
Nominal frequency	Hz	50/60
Permissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	483 x 213 x 1/2 19" (19.02 x 8.39 x 1/2 19")
Weight, approx.	kg (lbs)	10 (22)

Ordering Information


TURBOVAC MAG W 2800 / 3200 C/CT

TURBOVAC MAG W 2800 (C/CT) with separate Frequency Converter and Compound Stage	P	Part No.	
DN 250 CF (MAG W 2800) DN 250 ISO-F (MAG W 2800 C) DN 250 ISO-F (MAG W 2800 CT)		400006V0071 400000V0001 400000V0002	
TURBOVAC MAG W 3200 (C/CT) with separate Frequency Converter and Compound Stage	P		
DN 320 ISO-F (MAG W 3200) DN 320 ISO-F (MAG W 3200 C) DN 320 ISO-F (MAG W 3200 CT)		400003V0003 400003V0001 400003V0002	
Mandatory Accessories	P FC		
Electronic frequency converter ¹⁾ MAG.DRIVE digital MAG.DRIVE digital, Profibus MAG.DRIVE digital, RS 232 C interface		400035V0011 400035V0013 400035V0014	
Plug-in control		121 36	
Connecting cable converter – pump ²⁾ 1.5 m (5.25 ft) DRIVE/BEARING 1.5 m (5.25 ft) TMS 3.0 m (10.5 ft) DRIVE/BEARING 3.0 m (10.5 ft) TMS 5.0 m (17.5 ft) DRIVE/BEARING 5.0 m (17.5 ft) TMS 10.0 m (35.0 ft) DRIVE/BEARING 10.0 m (35.0 ft) TMS 20.0 m (70.0 ft) DRIVE/BEARING 20.0 m (70.0 ft) TMS		400036V0001 400037V0001 400036V0008 400037V0008 400036V0004 400037V0004 400036V0002 400037V0002 400036V0003 400037V0003	
Forevacuum pump TRIVAC D 65 B 3 phase motor; 230/400 V, 50 Hz / 250/440 V, 60 Hz 3 phase motor; 208-23/460 V, 60 Hz / 200-220/380 V, 60 Hz		112 96 912 96-2	
For further types, see Catalog Part “Oil Sealed Vacuum Pumps”			

¹⁾ Included are 2 mains cords. One with EURO plug and one with US plug (220 V AC).
Replacement mains cord are Part Numbers 180 097 or 180 096 respectively

²⁾ Further connecting cables can be found under MAG.DRIVE digital in the chapter
“Turbomolecular Pumps with Magnetic Rotor Suspension”,
para. “Electronic Frequency Converters”


With separate Frequency Converter

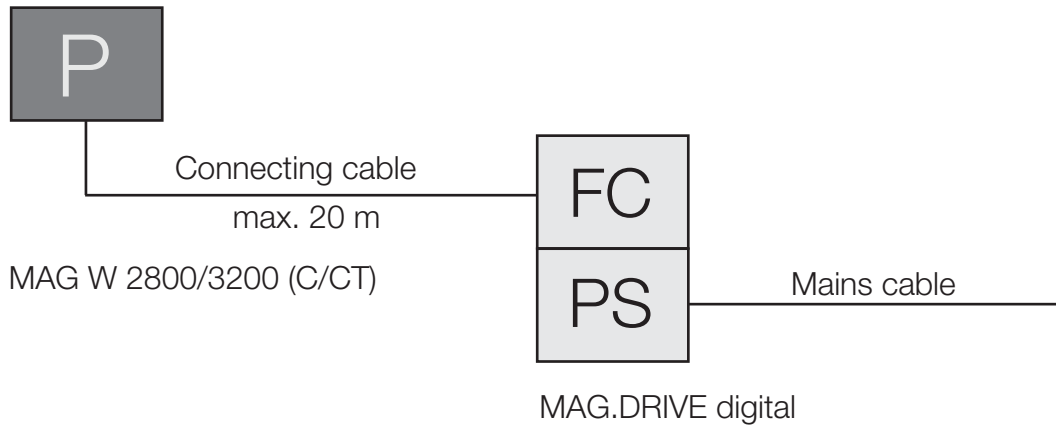

Ordering Information

TURBOVAC MAG W 2800 C/CT / 3200 CT

Accessories, optional	P	Part No.
Purge gas and venting valve		121 33
Seal kit DN 250 metal		200 07 901
Included in the Delivery of the Pump	P	
Inlet screen DN 250 ISO-F		E 400 000 100
DN 250 CF		200 15 157
DN 320 ISO-F		E 400 000 134
Included in the Delivery of the Frequency Converter	FC	
Mains cord, 3 m (10.5 ft.) long, approx. with EURO or US plug		

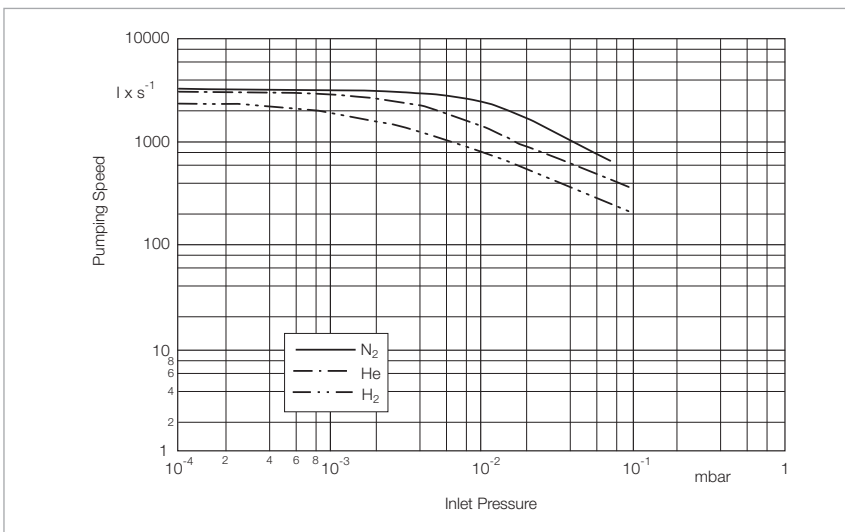

Pumping speed of the TURBOVAC MAG W 3200 C (DN 320) as a function of the inlet pressure

Accessories

Electronic Frequency Converters for Pumps with Mechanical Rotor Suspension

TURBO.DRIVE TD 20 *classic*




Technical Features

- For operating the TURBOVAC 151 (C), 361 (C), 600 C, 1000 C and 1100 C turbomolecular pump
- Front panel with LED
 - Status, Power, Error, pump run-up, pumping power
- Wide voltage range mains input
- Current interfaces like Profibus, DeviceNet, Ethernet/IP, RS 232 C, RS 485 C and 25-way terminal strip, available as options

Advantages to the User

- Easy integration within a vacuum system owing to the large variety of different modern interfaces as well as for modernising older systems
- Start/stop function through keys on the front panel
- Remote control and process control through analog and PLC compatible inputs and outputs
- Compatible to frequency converter NT 20, NT 151/361 and NT 361

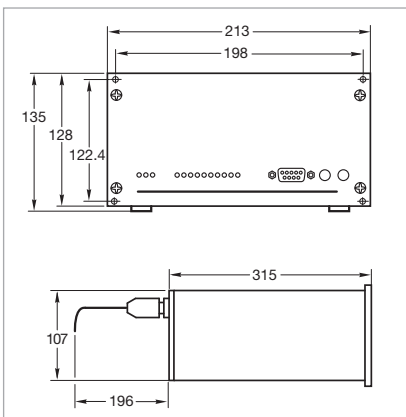

Dimensional drawing for the electronic frequency converter TURBO.DRIVE TD 20 *classic*

Technical Data

TURBO.DRIVE TD 20 *classic*

Mains connection	50/60 Hz	100 to 240 V (+15 % / -10 %)
Max. power consumption	W	500
Max. output voltage	V	3 x 47
Max. output current	A	5
Interface		Without, RS 232 C, RS 485 C, Profibus or 25-way terminal strip
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	213 x 128 x 315 (8.39 x 5.04 x 12.40)
Weight, approx.	kg (lbs)	4.0 (8.8)

Ordering Information

TURBO.DRIVE TD 20 *classic*

	Part No.
TURBO.DRIVE TD 20 <i>classic</i>	
without interface	800075V0001
with RS 232 C interface	800075V0002
with RS 485 C interface	800075V0004
with Profibus	800075V0003
with 25-pol I/O	800075V0005
Mains cable	
3 m (10.5 ft)	
EURO plug	800102V0002
UK plug	800102V0003
US plug 5-15 P	800102V1002
2 m (7.5 ft)	
US plug 115 V AC	992 76 513
Connecting cable	
TURBOVAC - frequency converter	
3 m (10.5 ft)	857 65
5 m (17.5 ft)	857 66
10 m (35.0 ft)	857 67
20 m (70.0 ft)	857 68
50 m (175.0 ft)	800152V0008
60 m (210.0 ft)	800152V0007
80 m (280.0 ft)	800152V0080
140 m (490.0 ft)	800152V0140
19" rack mounting frame 3 HU	161 00
Pump adapter cable	800 000 006
Adapter cable, 0.2 m (0.7 ft) long 25-way PLC interface to 2x Phoenix plugs (required when a NT 20 with connected PLC interface needs to be replaced)	800152V0020
PC software TURBO.DRIVE Server ¹⁾	800110V0102 (see Chapter "Accessories" at the end of the section)

¹⁾ Software supports only RS 232 C, RS 485 C and Profibus

TURBOTRONIK NT 10



Technical Features

- For operating the TURBOVAC 50 turbomolecular pump
- Bench top unit
- Also for rack mounting (1/4 19", 3 HU)
- Controls and indicators on the front panel
- Inputs for remote control and process controller
- Freely assignable relays (e.g. to control the backing pumps)

Technical Data

TURBOTRONIK NT 10

Mains connection	50/60 Hz	100-120 or 200-240 V
Max. power consumption	W	45
Max. output voltage	V	3 x 150
Max. output current	A	6
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +40 (+32 to +104)
Dimensions (W x H x D)	mm (in.)	106 x 128 x 233 (4.17 x 5.04 x 9.17)
Weight, approx.	kg (lbs)	1.5 (3.3)

Ordering Information


TURBOTRONIK NT 10

	Part No.
100 - 120 V (with US plug)	859 01
200 - 240 V (with EURO plug)	859 00
Connecting cable pump - converter	
1 m (3.5 ft)	200 11 609
3 m (10.5 ft)	121 08
5 m (17.5 ft)	121 09
10 m (35.0 ft)	161 10
15 m (52.5 ft)	119 90
20 m (70.0 ft)	800150V2000

TURBO.DRIVE TD 400 (TD 400) for TURBOVAC SL 80 and TW 250 S



TURBO.DRIVE TD 400 (Front side)

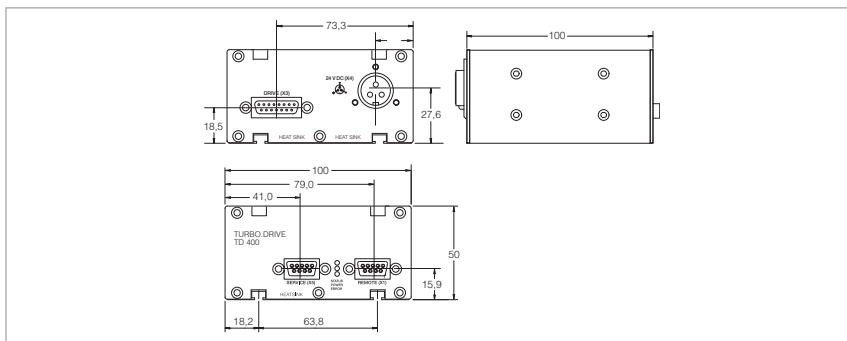

Dimensional drawing for the TURBO.DRIVE TD 400

Technical Features

- Small footprint
- USB, RS 232 C, RS 485 C, Profibus or Ethernet/IP interface
- Configurations:
 - as a separate frequency converter
 - integrated within the turbomolecular pump
- Remote control via remote interface
- Flexible mounting options
- Cost-effective supply of 24 V DC

High Vacuum Pumps

Technical Data

TURBO.DRIVE TD 400

Mains connection	V DC	24
Max. current consumption	A	8
Max. power consumption	W	190
Max. output voltage	V	3 x 24
Interface		USB, RS 232 C, RS 485 C or Profibus
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	+5 to +45 (+41 to +113)
Dimensions (W x H x D)	mm (in.)	100 x 90 x 100 (3.9 x 3.5 x 3.9)
Weight, approx.	kg (lbs)	0.7 (1.6)


Ordering Information

TURBO.DRIVE TD 400

	Part No.
TURBO.DRIVE TD 400 with USB interface	800073V0008
with RS 232 C interface	800073V0002
with RS 485 C interface	800073V0003
with Profibus	800073V0004
Connecting cable TD 400 - Pump	
0.2 m (0.70 ft)	800152V0021
0.3 m (1.15 ft)	800152V0023
0.4 m (1.40 ft)	800152V0022
0.5 m (1.75 ft)	800152V0050
1.0 m (3.50 ft)	P152 47
2.5 m (8.75 ft)	864 49
3.0 m (10.5 ft)	864 40
5.0 m (17.5 ft)	864 50
START/STOP switch (for manual operation)	152 48
Hat rail adaptor as mounting aid	800110V0003
Accessories for RS 232 C and RS 485 C interfaces	(see Chapter "Accessories" at the end of the section)

TURBO.CONTROL 300

Power Supply Unit for TURBO.DRIVE TD 400

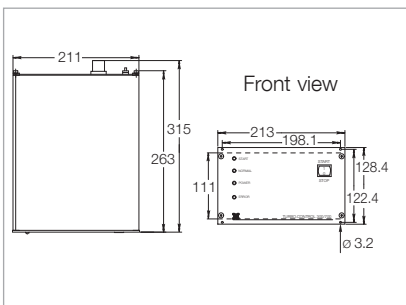

Dimensional drawing for the power supply
TURBO.CONTROL 300

Technical Features

- Cost-effective supply of 24 V DC power for SL 80, TW 250 S and TURBO.DRIVE TD 400
- Plug & play
- Bench top unit or for cabinet mounting
- Mains switch
- START/STOP switch for the turbo-molecular pump
- Remote control via remote interface
- Status indicating LEDs and status relays

Technical Data**Power Supply
TURBO.CONTROL 300**

Mains connection	50/60 Hz	85-264 V
Max. power consumption	W	300
Max. output voltage	V DC	24
Max. current consumption	A	8.4
Protection rating	IP	20
Admissible ambient temperature	°C (°F)	0 to +40 (+32 to +104)
Dimensions (W x H x D)	mm (in.)	213 x 129 x 320 (8.4 x 5.1 x 12.6)
Weight, approx.	kg (lbs)	1.5 (3.3)

Ordering Information**Power Supply
TURBO.CONTROL 300**

	Part No.
Power supply TURBO.CONTROL 300	800100V0001
DC cable frequency converter - power supply	24 V DC control cable
1 m (3.5 ft)	800091V0100
3 m (10.5 ft)	800091V0300
5 m (17.5 ft)	800091V0500
10 m (35.0 ft)	800091V1000
20 m (70.0 ft)	800091V2000
Mains cable	
3 m (10.5 ft) with EURO plug	800102V0002
with UK plug	800102V0003
with US plug 5-15 P	800102V1002
2 m (7.5 ft) US plug 115 V AC	992 76 513

Electronic Frequency Converters for Pumps with Magnetic Rotor Suspension MAG.DRIVE S




MAG.DRIVE S without display




MAG.DRIVE S with display

Advantages to the User

- Operation of turbomolecular pumps with magnetically levitated rotors:
 - MAG W 300/400 P and
 - MAG W 600/700 P
- Easy operation through the controls
- Communication to host computer of the customer via serial interface and conventional interface possible
- Setting of speed and other functions
- Warning in case the pump is running out of specification
- Storing of all parameters in the pump's memory
- Small size and low weight
- Integrated fan
- 2 slots for industrial communications modules
 - rear side:
 - Standard 9 pin 24 V SPS
 - PLC-IO in Control Slot
 - front side:
 - RS 232 C in Service Slot
 - further interfaces can be fitted:
 - Ethernet, Profibus, DeviceNet, RS 485 C

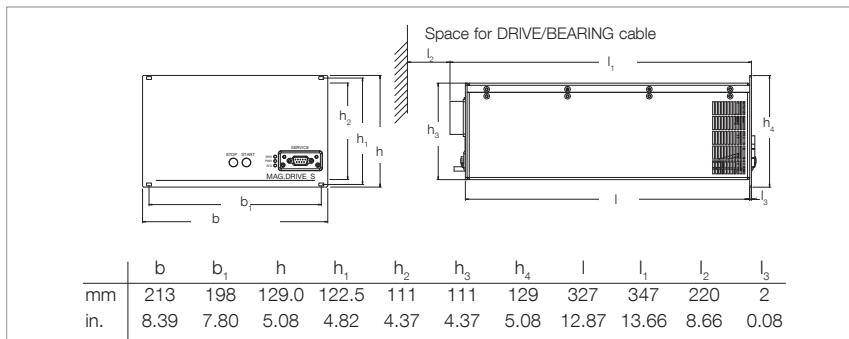

Dimensional drawing for the MAG.DRIVE S

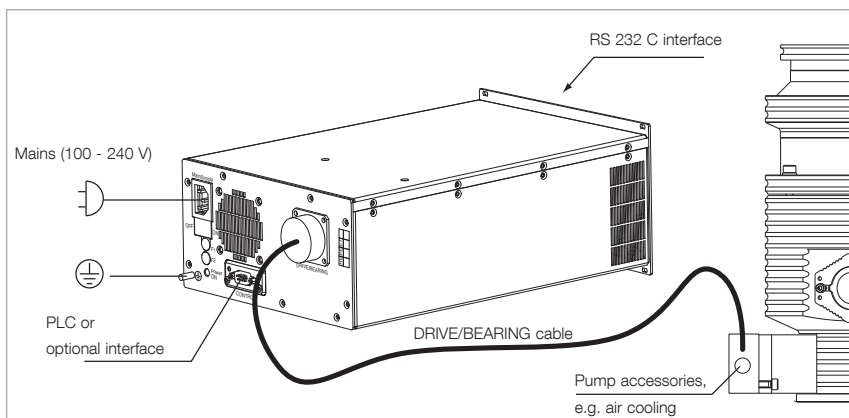

Overview connection lines

Technical Data

MAG.DRIVE S

Voltage range	V	100 - 240, ± 10%
Nominal frequency	Hz	50 / 60
Power consumption		
stand-by	W	100
maximum	W	400
Max. motor voltage	V	48
Max. pump current	A	6
Fuses F1, F2 5 x 20 mm		10 A fast blow high breaking capacity 250 V
System fuse		L or G characteristic
Max. frequency	Hz	0 to 2000
Load capability, relay output X1	V / A	32 / 0,5
Temperature		
during operation	°C (°F)	0 to +45 (+32 to +113)
during storage	°C (°F)	-10 to +60 (+14 to +140)
Relative humidity of the air	%	95 (non-condensing)
Weight, approx.	kg (lbs)	65 (14.35)

Ordering Information

MAG.DRIVE S

	Part No.
Electronic frequency converter	
MAG.DRIVE S	410300V0202
MAG.DRIVE S with display	410300V0212
Connecting cable DRIVE/BEARING (connection between pump and MAG.DRIVE S)	
3.0 m (10.5 ft)	410300V4003
5.0 m (17.5 ft)	410300V4005
10.0 m (35.0 ft) ¹⁾	410300V4010
20.0 m (70.0 ft) ¹⁾	410300V4020
Mains cable	
3.0 m (10.5 ft)	
EURO plug	800102V0002
US plug 5-15 P	800102V1002
2.0 m (7.5 ft)	
US plug 115 V AC	992 76 513

¹⁾ Suited for operating the MAG W 300/400 only

MAG.DRIVE digital




MAG.DRIVE digital without plug-in control




MAG.DRIVE digital with plug-in control

Advantages to the User

- Operation of turbomolecular pumps with magnetically levitated rotors:
MAG W 830/1300 C,
MAG (W) 1500 CT,
MAG W 2000 C/CT,
MAG W 2200 C/CT and
MAG W 2800/3200 C/CT
- Easy operation through the controls or the use of plug-in control unit
- Communication to host computer of the customer via serial interface and conventional interface possible
- Setting of speed, temperature of the basic flange and other functions
- Warning in case the pump is running out of specification
- Storing of all parameters in the pump's memory
- Plug-in control
- Small size and low weight
- Integrated fan
- Integrated temperature management system (TMS)

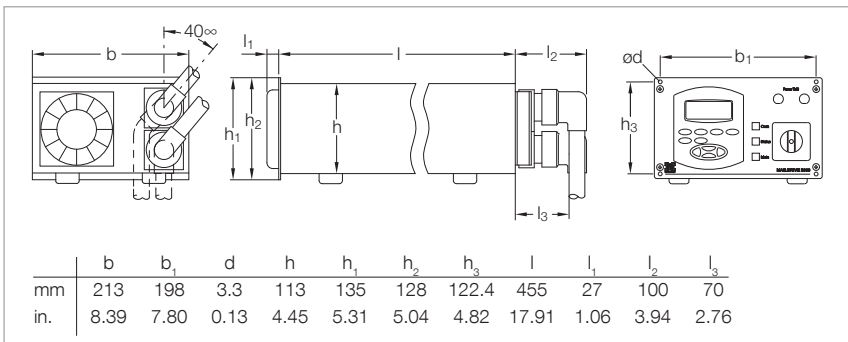

Dimensional drawing for the MAG.DRIVE digital

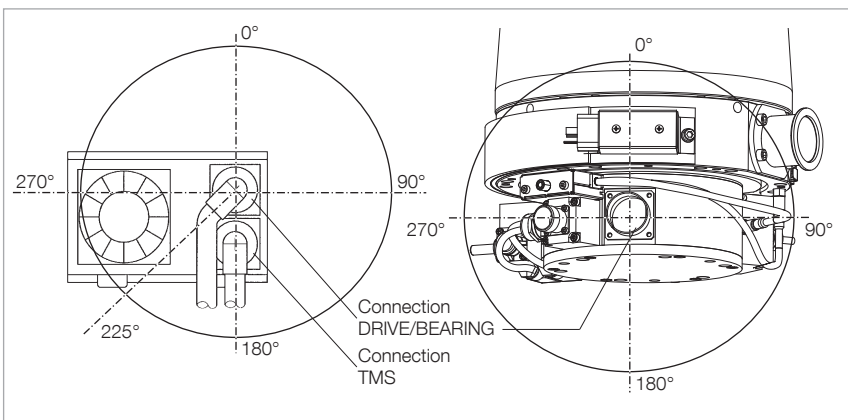

Overview connection lines

Technical Data

MAG.DRIVE digital

Mains connection, 50/60 Hz	V	200 - 240, +10%/-15%
Current for connected consumers, max.	A	20
Max. motor voltage	V	60
Nominal frequency	Hz	50/60
Permissible ambient temperature	°C (°F)	0 to +45 (+32 to +113)
Dimensions (W x H x D)	mm (in.)	483 x 213 x 1/2 19" (19.02 x 8.39 x 1/2 19")
Weight, approx.	kg (lbs)	10 (22)

Ordering Information


MAG.DRIVE digital

				Part No.
Electronic frequency converter ¹⁾ MAG.DRIVE digital with Profibus interface with RS 232 C interface				400035V0011 400035V0013 400035V0014
Plug-in control				121 36
Connection line leading to the DRIVE/BEARING of the TURBOVAC MAG ... C/CT				
	Cable outlet frequency converter	Cable outlet pump		
	DRIVE/BEARING	DRIVE/BEARING	PK	
1.5 m (5.25 ft)	bended 225°	straight	straight	400036V0001
1.5 m (5.25 ft)	bended 40°	bended 180°	straight	400036V0025
3.0 m (10.5 ft)	straight	bended 180°	straight	400036V0006
3.0 m (10.5 ft)	bended 225°	straight	straight	400036V0008
3.0 m (10.5 ft)	straight	bended 270°	straight	400036V0009
5.0 m (17.5 ft)	bended 225°	straight	straight	400036V0004
5.0 m (17.5 ft)	straight	straight	straight	400036V0010
8.0 m (28.0 ft)	bended 225°	straight	straight	400036V0005
10.0 m (35.0 ft)	bended 225°	straight	straight	400036V0002
20.0 m (70.0 ft)	bended 225°	straight	straight	400036V0003
23.0 m (80.5 ft)	bended 225°	straight	straight	400036V0012
30.0 m (105 ft)	bended 225°	straight	straight	400036V0011
TMS (only for CT versions)				
	Cable outlet frequency converter	Cable outlet pump		
	TMS	TMS	Heater	
1.5 m (5.25 ft)	bended 225°	straight	bended 180°	400037V0001
1.5 m (5.25 ft)	bended 40°	straight	bended 180°	400037V0025
3.0 m (10.5 ft)	bended 225°	straight	bended 180°	400037V0008
5.0 m (17.5 ft)	bended 225°	straight	bended 180°	400037V0004
8.0 m (28.0 ft)	bended 225°	straight	bended 180°	400037V0005
10.0 m (35.0 ft)	bended 225°	straight	bended 180°	400037V0002
20.0 m (70.0 ft)	bended 225°	straight	bended 180°	400037V0003
Purge / Vent (only for optional purge vent valve Part No. 121 33)				
	Cable outlet frequency converter	Cable outlet pump		
	TMS	Purge	Vent	
1.5 m (5.25 ft)	straight	bended	bended	400038V0007
3.0 m (10.5 ft)	bended 225°	bended	bended	400038V0006
10.0 m (35.0 ft)	bended 225°	bended	bended	400038V0002
20.0 m (70.0 ft)	straight	bended	bended	400038V0009
Connector for hardware interface				upon request
19" installation frame				161 00

¹⁾ Included are 2 mains cords. One with EURO plug and one with US plug (220 V AC).
Replacement mains cord are Part Numbers 180 097 or 180 096 respectively

Power Supply TURBO.POWER 500

for TURBOVAC MAG W 300/400/600/700 iP

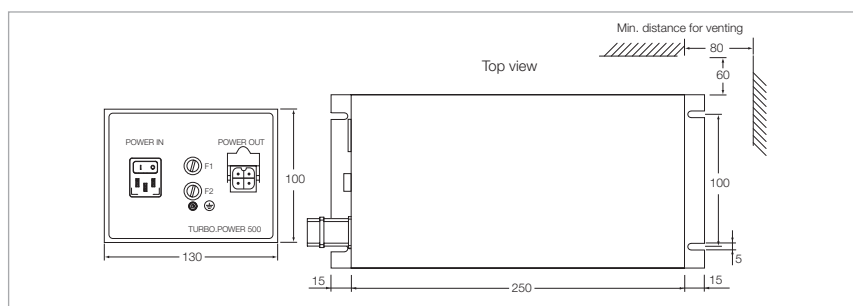

Dimensional drawing for the power supply TURBO.POWER 500

Technical Features

- For supplying 48 V DC power to the MAG W 300/400/600/700 iP
- Bench top unit or for cabinet mounting

Technical Data

Power Supply TURBO.POWER 500

Power supply (POWER IN)	V	100 - 240, ± 10%
Nominal frequency	Hz	50 / 60
Power consumption maximum	VA	650
at ultimate pressure operation of the pump	VA	450
DC voltage range POWER OUT	V DC	48
max.	A	10
Length of the DC connection cable, max.		
at 3 x 1.5 mm ²	m (ft)	5 (17.5)
at 3 x 2.5 mm ²	m (ft)	20 (70.0)
Ambient temperature during operation	°C (°F)	+10 to +40 (+50 to +104)
during storage	°C (°F)	-10 to -70 (+14 to -94)
Relative humidity of the air	%	5 to 85 (non-condensing)
Protection class	IP	30
Overvoltage category		II
Pollution category		2
Weight, approx.	kg (lbs)	4.0 (8.8)


Ordering Information

Power Supply TURBO.POWER 500

	Part No.
Power supply TURBO.POWER 500	410300V0221
DC cable (connection between TURBO.POWER 500 and MAG.DRIVE iS)	
1.0 m (3.5 ft)	410300V2001
3.0 m (10.5 ft)	410300V2003
5.0 m (17.5 ft)	410300V2005
10.0 m (35.0 ft)	410300V2010
20.0 m (70.0 ft)	410300V2020
Mains cable	
3.0 m (10.5 ft) EURO plug	800102V0002
US plug 5-15 P	800102V1002
2.0 m (7.5 ft) US plug 115 V AC	992 76 513

Vibration Absorber

Vibration absorbers are used to inhibit the propagation of vibrations from the turbomolecular pump to highly sensitive instruments like electron beam microscopes, micro-balances or analytical instruments.

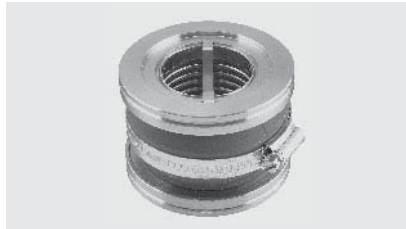


Ordering Information

Vibration Absorber

	Part No.
Vibration absorber	
DN 63 ISO-K 66 mm (2.60 in.) long	800131V0063
DN 63 CF 81 mm (3.19 in.) long	500 070
DN 100 ISO-K 84 mm (3.31 in.) long	800131V0100
DN 100 CF 100 mm (4.09 in.) long	500 071
DN 160 ISO-K 84 mm (3.31 in.) long	500 073
DN 160 CF 104 mm (4.09 in.) long	500 072

Air Cooling Unit for TURBOVAC ClassicLine Pumps

For the purpose of retrofitting the TURBOVAC 50, 151, 361 and 600 pumps for air cooling, an air cooling unit is available by way of a retrofit kit. This kit can be easily fitted to the respective pump using the fitting components included with the accessories.

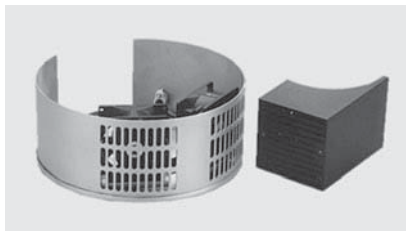

Technical Data

Air Cooling Unit

Rated power consumption of the air cooling unit when connected to		
TURBOVAC 50, 151 (C)/361 (C)	W	10.5
TURBOVAC 600 C, 1000 C	W	21.0

Ordering Information

Air Cooling Unit

	Part No.	Part No.
Air cooling unit for	230 V	100-115 V
TURBOVAC 50	854 05	800152V0015
TURBOVAC 1 51 (C)/361 (C)	855 31	800152V0016
TURBOVAC 600 C, 1000 C	855 41	800152V0017

Air Cooling Unit for TURBOVAC SL Pump

For fitting to the turbomolecular pump SL 80



Air cooling units for the pump SL 80

Technical Data

Air Cooling Unit

Power supply voltage	V DC	24
Current rating	mA	39
Power	W	0.9
Operating temperature	°C (°F)	+10 to +40 (+50 to +104)
Protection class	IP	20
Weight, approx.	kg (lbs)	0.23 (0.51)
Volume flow	m³/h	20

Ordering Information

Air Cooling Unit

	Part No.
Air cooling unit for TURBOVAC SL 80	800136V0001

Flange Heater for CF High Vacuum Flanges

Most TURBOVAC pumps can be baked out in order to improve the ultimate pressure attained in the UHV range. Degassing of the turbomolecular pump will only be useful when simultaneously baking out the vacuum chamber.



Technical Data

Flange Heater

Rated power consumption of the flange heater		
DN 63 CF, DN 100 CF	W	100
DN 160 CF	W	150

Ordering Information

Flange Heater

	Part No.	Part No.
Flange heater	230 V	115 V
DN 63 CF	854 04	854 07
DN 100 CF	854 27	854 28
DN 160 CF	854 37	854 38

Fine Filter

A fine filter integrated in the centering ring protects the pump against particles and dust on the high vacuum side.



Ordering Information


Fine Filter

	Part No.
Connection flange of the fine filter	
DN 40 ISO-KF	883 98
DN 63 ISO-K	887 20
DN 100 ISO-K	887 21

Securing Collar for Octal Socket Plugs

for ClassicLine Pumps TURBOVAC 151 (C), 361 (C), 600 C, 1000 C and 1100 C

The securing collar serves the purpose of securing the plug on the ClassicLine pumps TURBOVAC 151 (C), 361 (C), 600 C, 1000 C and 1100 C against being disconnected inadvertently.

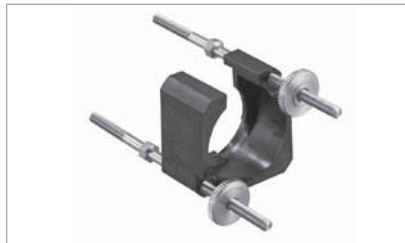


Ordering Information

Securing Collar for Octal Socket Plugs

	Part No.
Securing collar for octal socket plugs	800001830

Solenoid Venting Valve

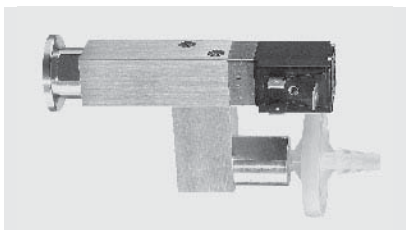

Technical Data

Venting Valve


Drive voltage	V DC	24
Power consumption	W	4
Connecting flange	DN	16 ISO-KF
Weight, approx.	kg (lbs)	0.3 (0.66)

Ordering Information

Venting Valve

	Part No.
Solenoid venting valve, normally closed	800120V0011

Power Failure Venting Valve

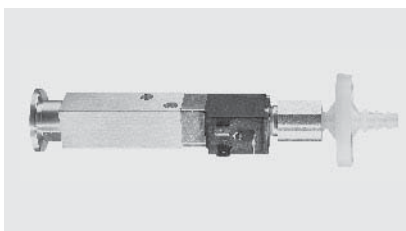

Technical Data

Power Failure Venting Valve


Drive voltage	V DC	24
Power consumption	W	4
Connecting flange	DN	16 ISO-KF
Weight, approx.	kg (lbs)	0.3 (0.66)

Ordering Information

Power Failure Venting Valve

	Part No.
Power failure venting valve, normally open	800120V0021

Power Failure Venting Valve, Electromagnetically Actuated

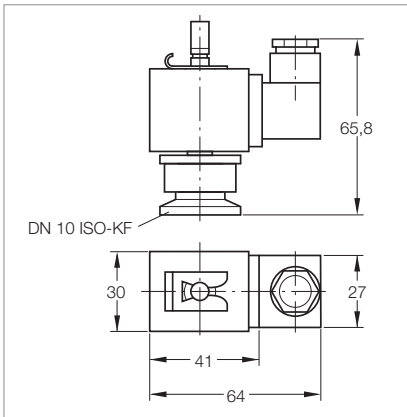

Dimensional drawing for the electromagnetically actuated power failure venting valve

Technical Data

Technical data

Power Failure Venting Valve

See Catalog "Valves", para. "Special Valves"

Ordering Information

Power failure venting valve DN 10 ISO-KF,
electromagnetically actuated
24 V DC
230 V AC / 50/60 Hz

Power Failure Venting Valve

Part No.

174 46
174 26

Purge Gas and Venting Valve



Technical Data

Connecting flange DN
Weight, approx. kg (lbs)

Purge Gas and Venting Valve

10 ISO-KF
0.7 (1.55)

Ordering Information


Purge gas and venting valve, 230 V
0.2 mbar x l x s⁻¹ (12 sccm)
0.4 mbar x l x s⁻¹ (24 sccm)

Purge Gas and Venting Valve

Part No.

855 19
855 29

Purge Gas and Venting Valve

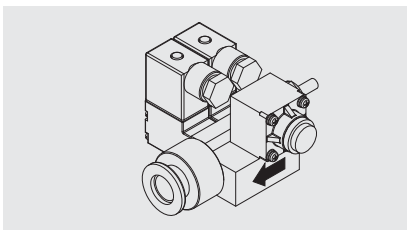

Technical Data

Connecting flange
Inlet
Outlet
Purge gas pressure, abs. bar
Weight, approx. kg (lbs)

Purge Gas and Venting Valve

1/4" tube
pump specific or DN 16 ISO-KF

1.5 to 6,0
0.5 (1.1)

Ordering Information

Purge gas and venting valve, 24 V DC
0.6 mbar x l x s⁻¹

Purge Gas and Venting Valve

Part No.

121 33

Further 0.6 mbar x l x s⁻¹ valves upon request

Purge Gas and Venting Valve for ClassicLine and SL Pumps



Technical Data

Connecting flange		
Pump side	DN	10 ISO-KF
Gas connection	G	1/4"
Seal gas pressure, abs.	bar	1
Weight, approx.	kg (lbs)	0.3 (0.66)


Purge Gas and Venting Valve

Ordering Information

Purge Gas and Venting Valve

	Part No.
Purge gas and venting valve at 1 bar	113 50
0.2 mbar x l x s ⁻¹ (12 sccm), 24 V DC	800152V0041
0.2 mbar x l x s ⁻¹ (12 sccm), 110 - 115 V AC	800152V0019
0.2 mbar x l x s ⁻¹ (12 sccm), 230 V AC	800152V0013
0.4 mbar x l x s ⁻¹ (24 sccm), 24 V DC	800152V0042
0.4 mbar x l x s ⁻¹ (24 sccm), 110 - 115 V AC	800152V0014
0.4 mbar x l x s ⁻¹ (24 sccm), 230 V AC	800152V0012
0.6 mbar x l x s ⁻¹ (36 sccm), 24 V DC	800152V0043
0.6 mbar x l x s ⁻¹ (36 sccm), 110 - 115 V AC	800152V0040
0.6 mbar x l x s ⁻¹ (36 sccm), 230 V AC	

Adapter Set for Seal Gas and Venting Valve for the SL pumps

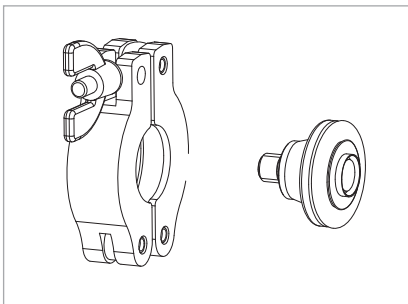

Technical Data

Pump flange adapter incl. adapter centering ring with sinter filter insert and clamping ring	M8 / DN 10 ISO-KF DN 10 / DN 16 ISO-KF
--	---


Adapter Set

Ordering Information

Adapter Set

	Part No.
Adapter set for purge gas and venting valve	800110V0011

Gas Filter to G 1/4" for Purge Gas and Venting Valve

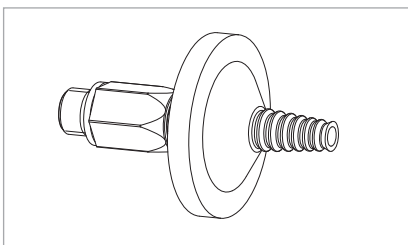

Technical Data

Gasfilter including fitting G 1/4" and 2 gaskets	
---	--

Gas Filter

Ordering Information

Gas Filter

	Part No.
Gas filter to G 1/4" for seal gas and venting valve	800110V0012
Replacement filter for gas filter to G 1/4" for seal gas and venting valve	E 200 18 515

Accessories for Serial Interfaces RS 232 C and RS 485 C

Through these accessories many control, monitoring and information capabilities can be implemented in

connection with the electronic frequency converters and turbomolecular pumps.

All turbomolecular pumps or electronic frequency converters are supported.

PC Software LEYASSIST



Software for PC-based communication, control and monitoring of turbomolecular pumps via USB, RS 485 or RS 232 interface with automatic pump detection.

Functions

- Display of vacuum system status
- Configuring the accessory functions of the TURBOVAC i / iX
- Reading/writing of parameters
- Data logging
- Alarm/warning message logging

Ordering Information

PC Software LEYASSIST

	Part No.
PC software LEYASSIST	230439V01

Interface Adaptor for Frequency Converter with RS 232 C/RS 485 C Interface

Ordering Information

Interface Adaptor RS 232 C/RS 485 C

	Part No.
Adaptor RS 232 C/RS 485 C mains connection 230 V, 50 Hz, EURO plug	800110V0101
Adaptor USB/RS 232 C for connection of RS 232 C to USB (PC), including CD with drivers and manual	800110V0103

Miscellaneous

Services for Mechanically Suspended Turbomolecular Pumps

Complete Refurbishing at the Service Centre

Complete refurbishing at the service centre includes the following:

Complete disassembly, cleaning, replacement of all wearing parts, mounting, electrical safety test, final test including vibration measurement

Complete Refurbishing with Decontamination at the Service Centre

Complete refurbishing with decontamination at the service centre includes the following:

Complete disassembly, cleaning and decontamination, replacement of all wearing parts, mounting, electrical safety test, final test including vibration measurement

Ordering Information

Complete Refurbishing at the Service Centre

Complete Refurbishing with Decontamination at the Service Centre

	Part No.	Part No.
For pump		
TURBOVAC 35 / 50D	AS 2165	AS 2165 D
TURBOVAC 50	AS 2133	AS 2133 D
TURBOVAC SL 80	LAS 2368	LAS 2368 D
TURBOVAC TW 70 H	AS 2368	AS 2368 D
TURBOVAC 151	AS 2134	AS 2134 D
TURBOVAC TW 250 S	AS 2168	AS 2168 D
TURBOVAC SL 300	LAS 2369	LAS 2369 D
TURBOVAC TW 300	AS 2369	AS 2369 D
TURBOVAC 361	AS 2135	AS 2135 D
TURBOVAC 600 / 1000	AS 2136	AS 2136 D
TURBOVAC TW 701 / 690	AS 2330	AS 2330 D
TURBOVAC 1100	AS 2137	AS 2137 D

Services for Magnetically Levitated Turbomolecular Pumps

Complete Refurbishing at the Service Centre

Complete refurbishing at the service centre includes the following:

Complete disassembly, cleaning, replacement of all wearing parts, mounting, electrical safety test, final test including vibration measurement

Complete Refurbishing with Decontamination at the Service Centre

Complete refurbishing with decontamination at the service centre includes the following:

Complete disassembly, cleaning and decontamination, replacement of all wearing parts, mounting, electrical safety test, final test including vibration measurement

Ordering Information

Complete Refurbishing at the Service Centre

Complete Refurbishing with Decontamination at the Service Centre

	Part No.	Part No.
For pump		
TURBOVAC 340 M	AS 2141	AS 2141 D
TURBOVAC 340 MC/MCT	AS 2142 ¹⁾	AS 2142 D ¹⁾
TURBOVAC MAG 400 C/CT	AS 2143 ¹⁾	AS 2143 D ¹⁾
MAG (W) 1600 / 2000	AS 2164 ¹⁾	AS 2164 D ¹⁾
MAG (W) 830 / 1300 / 1500	AS 2370 ¹⁾	AS 2370 D ¹⁾
MAG 900 / 1000 / 1200	AS 2160 ¹⁾	AS 2160 D ¹⁾
MAG 2200	AS 2200 ¹⁾	AS 2200 D ¹⁾
MAG 2800 / 3200	AS 2800 ¹⁾	AS 2800 D ¹⁾

Notes

The listed services include the costs for material and working hours for standard pumps. Services for pump variants upon request.

If additional spare parts are needed for repairs, then these are invoiced separately according to a cost estimate.

¹⁾ Including rotor replacement

General

Applications and Accessories for Oil Diffusion Pumps

Pumps	DIP 3000	DIP 8000	DIP 12000	DIP 20000	DIP 30000	DIP 50000	LEYBOJET 630	OB 6000	OB 12000	OB 18000
Application										
Vacuum coating (e.g. Sputtering)	■	■	■	■	■	■	■	■	■	■
Research and development	■	■	■	■	■	■	■	■	■	■
Metallurgy/furnaces	■	■	■	■	■	■	■	■	■	■
Mechanical engineering	■	■	■	■	■	■	■	■	■	■
Sputtering process							■	■	■	■
Secondary metallurgy (e.g. VIM, VID)								■	■	■
High vacuum furnaces								■	■	■

Accessories

Page

Astrotorus baffle	458	■	■	■	■	■	■	■			
Over-temperature protection switch	460	■	■	■	■	■	■	■			
Contact thermometer	460	■	■	■	■	■	■	■			
Resistance thermometer Pt100	460	■	■	■	■	■	■	■			
Monitoring instruments	461	■	■	■	■	■	■	■	■	■	■
Energieregler	434				■	■	■	■	■	■	■
Adsorption trap	464	For generating an oil-free vacuum with oil sealed backing pumps									

Oil for Diffusion Pumps for different fields of application

Application	Vacuum coating	Research and development	Metallurgy/furnaces	Mechanical engineering	Sputter processes
LEYBONOL Oils					
LVO 500	■	■	■	■	■
LVO 510	●	●	●	●	●
LVO 520	●	●			
LVO 530	●	●			
LVO 540 ¹⁾	■	■	■	■	■

- = Standard
- = Possible

¹⁾ Only for OB pumps

The table only lists general applications. Your specific requirements might be subject to deeper analysis. For further questions, please contact our technical Sales support.

For information on oil specifications please refer to Catalog Part "Oils / Greases / Lubricants LEYBONOL®".

Oil for Diffusion Pumps for different pump types

Pumps	DIP 3000	DIP 8000	DIP 12000	DIP 20000	DIP 30000	DIP 50000	LEYBOJET 630	OB 6000	OB 12000	OB 18000
LEYBONOL Oils										
LVO 500	■	■	■	■	■	■	■			
LVO 510	●	●	●	●	●	●	●			
LVO 520	●	●	●	●	●	●	●			
LVO 530	●	●	●	●	●	●	●			
LVO 540								■	■	■

- = Standard
- = Possible

Note

All oils may be used.
The pumps are supplied as standard without oil.

The table only lists general applications. Your specific requirements might be subject to deeper analysis.
For further questions, please contact our technical Sales support.

For information on oil specifications please refer to Catalog Part "Oils / Greases / Lubricants LEYBONOL®".

Operating Principle of Fluid Entrainment Vacuum Pumps

The main components of diffusion pumps, the operation of which relies on vapor-phase pump fluids are:

- Cooled pump body with intake and exhaust ports
- System of nozzles
- Pump boiler

In the case of diffusion pumps a pump fluid contained in a boiler is heated to such an extent that it is vaporized. The vapor is then forced through nozzles within the pump. The nozzles are generally designed in such a way, that they accelerate the vapor to a speed exceeding the speed of sound (Laval nozzles), thus creating a high speed vapor jet. The vapor is then deflected by the nozzles at a specific angle onto the pump body. The pump body is

cooled, so that the vaporized pump fluid condenses and is returned back to the boiler as a liquid. The pumping action of diffusion pumps and fluid entrainment pumps in general is based on the transporting capacity of the vapor jet.

The gas which is to be pumped is compressed sufficiently at the fore-vacuum port so that it can be pumped out by a backing pump.

Oil Diffusion Pumps

Compared to other fluid entrainment pumps the density of the vapor in the boiler and in the vapor jet is fairly low so that the gas molecules may almost completely diffuse into the vapor jet. Thus most of the molecules which enter the vapor jet are also pumped out.

For this reason, the pumping speed of diffusion pumps is extremely high with respect to the intake area and constant – starting at an inlet pressure of approx. 10^{-3} mbar (0.75×10^{-3} Torr) down to very low pressures – as within the pressure range the vapor jet is not influenced in any way by the pressure within the vacuum vessel.

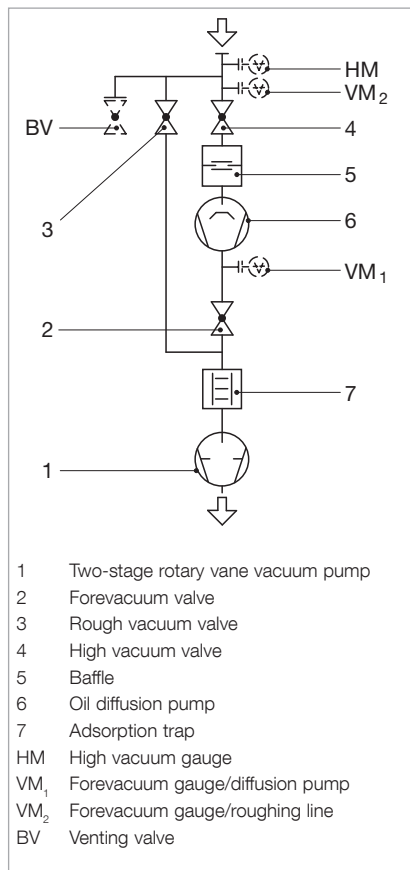


Diagram of a pump system with diffusion pump

Operating Oil Diffusion Pumps

Forevacuum

In all cases diffusion pumps require a sufficiently sized backing pump (see Technical Data). The size and type of forevacuum pump depends on the operating conditions and the quantities of gas which are to be pumped.

1. Continuous operation at operating pressures above 10^{-4} mbar (0.75×10^{-4} Torr) – large quantities of gas.
2. Continuous operation at operating pressures below 10^{-4} mbar (0.75×10^{-4} Torr) – smaller quantities of gas.

In applications which rely on diffusion pumps, the vacuum chamber must be connected via a valve (3) and a roughing line directly to the backing pump. This is done so that the vacuum chamber may be pre-evacuated by the backing pump down to a pressure where the diffusion pump can take over. Until the high vacuum valve (4) opens, both diffusion pump and pump fluid are preserved. Before venting the vacuum chamber the forevacuum valve (2) and the high vacuum valve (4) must be closed, whereby the diffusion pump remains in the ready status.

Pumping Speed

The pumping speed of any pump is equivalent to the volume throughput through the intake opening of a pump. In the case of diffusion pumps the pumping speed for lighter gases is higher compared to heavier gases.

Backstreaming of the Pump Fluid

Undesirable backstreaming of molecules from the pump fluid is caused by the effect that some molecules are able to leave the vapor jet and thus do not arrive at the cooled pump body. Because of collisions between each other and due to reflection at the pump body, these molecules are then able to move in the direction of the vacuum chamber.

For DIP pumps the backstreaming effect amounts only to a few μg per cm^2 of intake area per minute. Backstreaming may be almost completely suppressed by including a cold cap baffle or an additional Astrotorus baffle.

Backstreaming of Oil in the Case of Diffusion Pumps

- Pump without baffle
approx. $1 \times 10^{-2} \text{ mg} \times \text{cm}^{-2} \times \text{min}^{-1}$
- Pump with cold cap baffle
approx. $1 \times 10^{-3} \text{ mg} \times \text{cm}^{-2} \times \text{min}^{-1}$
- Pump with Astrotorus baffle
($T = 10 \text{ }^\circ\text{C}$ ($50 \text{ }^\circ\text{F}$))
approx. $1 \times 10^{-5} \text{ mg} \times \text{cm}^{-2} \times \text{min}^{-1}$

The values stated have been measured at an intake pressure of $< 1 \times 10^{-4}$ mbar and apply to LEYBONOL LVO 500.

Attainable Ultimate Pressure

The attainable ultimate pressure for a particular vacuum system depends not only on the type and pumping speed rating of the diffusion pump, but also on the vapor pressure of the pump fluid, shape and temperature of the baffle, leaks at connecting flanges or welded joints and the condition of the surfaces within the vacuum chamber.

When excluding all effects which contribute to an increase in pressure within

the vacuum chamber due to leaks and contamination of the vacuum chamber walls, it will be possible to attain the ultimate pressures stated in the table "Attainable Ultimate Pressures with Oil Diffusion Pumps (DIP)" given in chapter "General".

In practice the following combination has been found to work very well when needing a low vacuum free of oil vapors.

- Water-cooled cold cap baffle as a integral part of the diffusion pump together with a water-cooled Astrotorus baffle which may be installed as an additional component on the high vacuum flange of the diffusion pump.

Sealing Methods

For ultimate pressures down to 10^{-8} mbar (0.75×10^{-8} Torr) bakeout temperatures of up to 150 °C (302 °F) are sufficient. FPM [FKM (= Fluor caoutchouc), temperature resistant up to 150 °C (302 °F)] sealing rings or ultra sealing rings made of aluminum must be used.

In order to prevent pressure variations, ultra sealing rings must be used in the connections, between diffusion pump and baffle.

Ultimate pressures below 10^{-8} mbar (0.75×10^{-8} Torr) require bakeout temperatures up to 400 °C (752 °F). However, it is only necessary to bake out the vacuum chamber to 400 °C (752 °F) and to maintain a temperature gradient across the baffle or the cold trap so that a temperature of 150 °C (302 °F) is not exceeded at the intake flange of the pump.

In this way, it is still acceptable to use FPM (FKM) sealing rings or ultra sealing rings made of aluminium.

Cooling

The cooling water temperature should not exceed 25 °C (77 °F) at the intake and 30 °C (86 °F) at the discharge, otherwise sufficient condensation of the pump fluid cannot be ensured. When connecting the cooling system of the pump and the baffle in series, the cooling water must always be made to flow through the baffle first and then through the diffusion pump, because the attainable ultimate pressure in the vacuum chamber depends strongly on the condensation temperature of the pump fluid in the baffle.

Attainable Ultimate Pressures with Oil Diffusion Pumps

Attainable Ultimate Pressure ¹⁾

LEYBONOL LVO 500

Without baffle	mbar (Torr)	1.5×10^{-6} (1.1×10^{-6})
With cold cap baffle	mbar (Torr)	5.0×10^{-7} (3.8×10^{-7})
With Astrotorus baffle	mbar (Torr)	1.5×10^{-7} (1.1×10^{-7})

¹⁾ Attained in consideration of the notes given under "Sealing Methods" in the chapter "General" para. "Oil Diffusion Pumps" and after degassing the connected vacuum chamber for several hours at 200 °C (392 °F)

Products

DIP Pumps Water-Cooled



DIP 12 000



DIP 30 000 with Power Controller

The DIP range of pumps was developed for operation in industrial systems. Excellent vacuum performance data combined with the inherent ruggedness of this kind of pump, make our diffusion pumps a reliable component in high and medium vacuum applications.

Advantages to the User

- High pumping speeds in the fine and high vacuum ranges
- Low attainable ultimate pressure
- Integrated, water-cooled cold cap baffle guarantees low oil back-streaming rates into the vacuum chamber
- Low oil losses (even at high gas throughputs) by integrated water-cooled forevacuum baffle
- High forevacuum resistance even at reduced heating power
- The heating cartridges are accessible from the outside via heating inserts which are built into the boiler. This ensures a quick exchange of single heating cartridges (even when the pump is hot)
- A separate automatic circuit breaker for each heating cartridge ensures a high level of electrical safety
- A standard built-in thermostat acts as a thermal overload switch and ensures that the heating cartridges can not overheat
- All pumps are prepared for installation with an over-temperature switch (optional) for checking the cooling water circuit, and a contact thermometer (optional) to monitor the operating temperature of the diffusion pump
- Indication of the oil level by sight-glass permits simple checking of the current oil level
- All DIP pumps are delivered with their inside chamber cleaned in such a manner that it is free of oil. The inside is evacuated. In the condition as delivered, the pumps may be also operated with silicone oil
- Utilisation of the DIP power controller cuts power consumption by up to 30% without impairing pump performance (option)


Typical Applications

The diffusion pumps from the DIP range are used in coating systems, vacuum melting and drying systems as well as in vacuum furnaces in the area of metallurgy.


Supplied Equipment

The DIP pumps are supplied ready for connection but without the filling of pump fluid.


The inside of the pump is cleaned before delivery to such an extent that it is free of oil. The inside is evacuated. High and forevacuum flanges are equipped with gaskets and centering rings having shipping flanges and complete with clamping components.

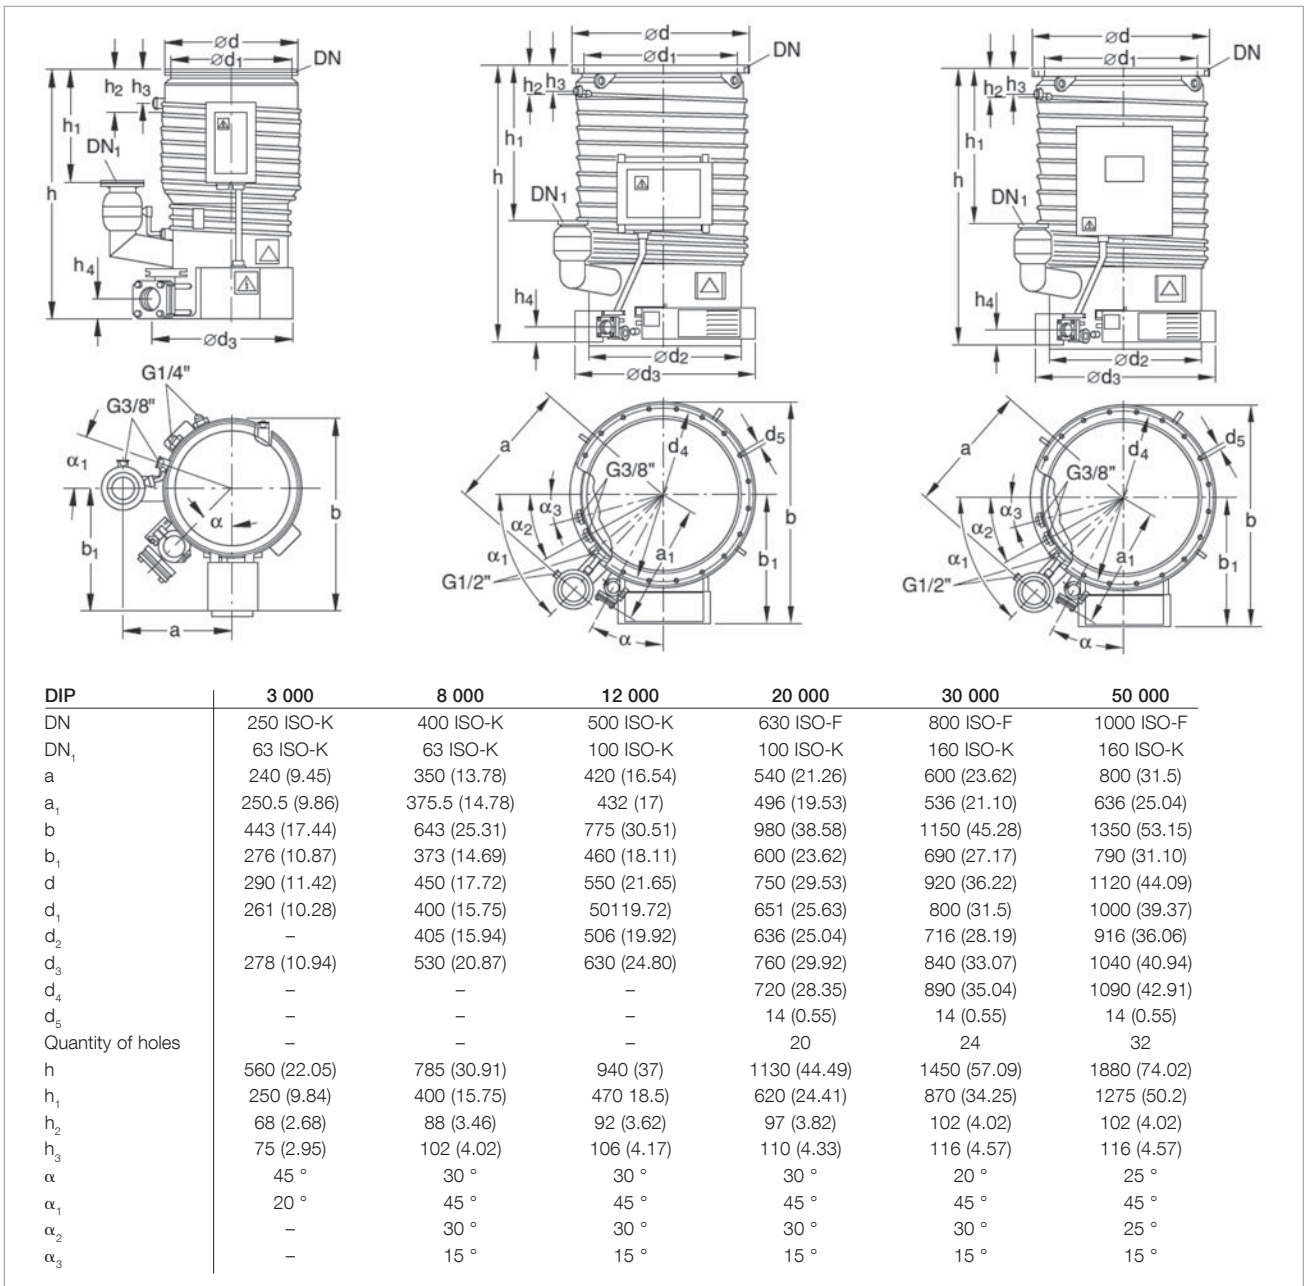

Dimensional drawing for the DIP 3000 [left], DIP 8000 and DIP 12000 [middle], DIP 20 000 to DIP 50 000 [right]; dimensions in brackets () are in inch

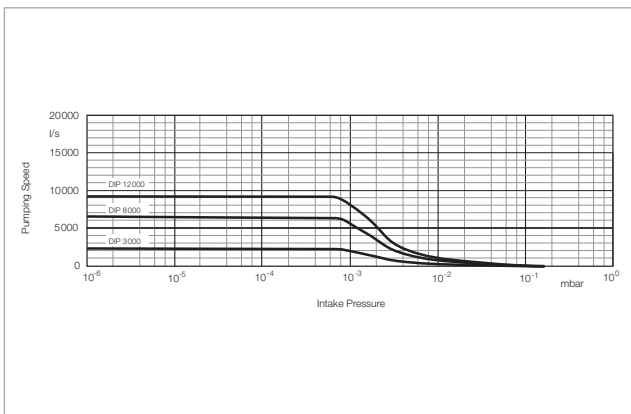

Pumping speed characteristics of the DIP 3000 to 12000 pumps as a function of intake pressure

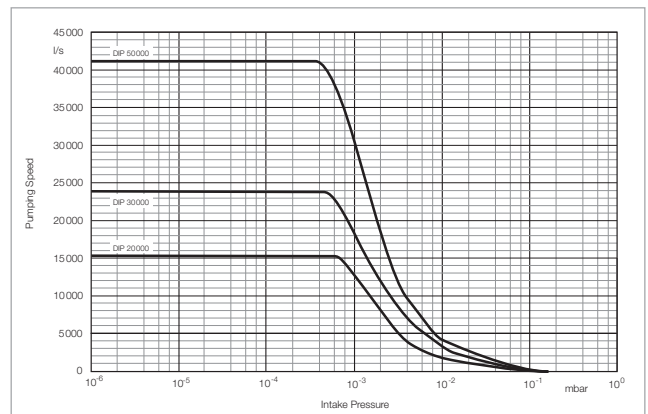

Pumping speed characteristics of the DIP 20000 to 50000 pumps as a function of intake pressure

Technical Data

DIP 3 000

DIP 8 000

DIP 12 000

High vacuum / forevacuum connection	DN	250 ISO-K / 63 ISO-K	400 ISO-K / 63 ISO-K	500 ISO-K / 100 ISO-K
Pumping speed for air ¹⁾ below 1×10^{-4} mbar	l x s ⁻¹	3 000	8 000	12 000
Operating range	mbar (Torr)	$< 10^{-2}$ to 10^{-7} (0.75×10^{-2} to 0.75×10^{-7})	$< 10^{-2}$ to 10^{-7} (0.75×10^{-2} to 0.75×10^{-7})	$< 10^{-2}$ to 10^{-7} (0.75×10^{-2} to 0.75×10^{-7})
Ultimate total pressure ¹⁾	mbar (Torr)	$< 5.0 \times 10^{-7}$ (3.75×10^{-7})	$< 5.0 \times 10^{-7}$ (3.75×10^{-7})	$< 5.0 \times 10^{-7}$ (3.75×10^{-7})
Max. permissible forevacuum pressure	mbar (Torr)	6.0×10^{-1} (4.5×10^{-1})	6.0×10^{-1} (4.5×10^{-1})	6.0×10^{-1} (4.5×10^{-1})
Pump fluid filling, min. / max.	l (qts)	1.0 / 1.4 (1.1 / 1.5)	1.7 / 3.4 (1.8 / 3.6)	2.4 / 5.3 (2.5 / 5.6)
Mains connection				
Standard EURO, 50/60 Hz	V	230 ~ 1 Ph	400 ~ 3 Ph Y	400 ~ 3 Ph Y
Standard Americas, 50/60 Hz	V	230 ~ 1 Ph	460 ~ 3 Ph Y	460 ~ 3 Ph Y
Special, 50/60 Hz	V	-	230 ~ 3 Ph Δ	230 ~ 3 Ph Δ
Heating power	kW	2.4	4.8	7.2
Number of heating cartridges		2	6	9
Heating up time	min	< 25	< 25	< 25
Cooling water (minimum) for pump ²⁾	l x h ⁻¹ (gal/min)	160 (0.7)	290 (1.28)	500 (2.2)
for cold cap baffle	l x h ⁻¹ (gal/min)	20 (0.09)	30 (0.13)	50 (0.22)
max. supply pressure	bar (psig)	6 (87)	6 (87)	6 (87)
Number of cooling circuits (including cold cap baffle)		2	2	2
Cooling water connection for pump	G (BPS)	3/8"	1/2"	1/2"
for cold cap baffle	G (BPS)	1/4"	3/8"	3/8"
Weight, approx.	kg (lbs)	29 (64)	70 (154)	102 (225)
Recommended backing pump ³⁾ at operating pressures > 10^{-4} mbar (> 0.75×10^{-4} Torr)		TRIVAC D 65 B + W 251	SV 300 + W 251	SV 300 + W 501
at operating pressures < 10^{-4} mbar (< 0.75×10^{-4} Torr)		-	TRIVAC D 65 B + W 251	TRIVAC D 65 B + W 251

Ordering Information

DIP 3 000

DIP 8 000

DIP 12 000

	Part No.	Part No.	Part No.
Oil diffusion pump			
Standard EURO	222 10	222 20	222 25
Standard Americas	222 10	500 670	500 591
Special	-	500 649	22225V003
Astrotorus baffle	227 50	227 60	227 65
Water flow monitor	500006623	500006623	500006623
Over-temperature protection switch	122 84	122 84	122 84
Contact thermometer	218 81	218 81	218 81
Resistance thermometer Pt100 sensor	200 02 958	200 02 958	200 02 958
Pump fluid ⁴⁾	see Catalog Part "Oils / Greases / Lubricants LEYBONOL"		

¹⁾ Measured to DIN 28 427 with LEYBONOL LVO 500 as the pump fluid

²⁾ The required quantity of cooling water refers to $\Delta T = 10 \text{ °C}$ (50 °F). The discharge temperature should not exceed 30 °C (86 °F)

³⁾ Single- or two-stage rotary vane vacuum pump (TRIVAC; SOGEVAC) from our range of forevacuum pumps jointly with Roots vacuum pumps (RUVAC) in pump systems

⁴⁾ Oil must be purchased separately

Technical Data
DIP 20 000
DIP 30 000
DIP 50 000

High vacuum / forevacuum connection	DN	630 ISO-F / 100 ISO-K	800 ISO-F / 160 ISO-K	1000 ISO-F / 160 ISO-K
Pumping speed for air ¹⁾ below 1 x 10 ⁻⁴ mbar	l x s ⁻¹	20 000	30 000	50 000
Operating range	mbar (Torr)	< 10 ⁻² to 10 ⁻⁷ (0.75 x 10 ⁻² to 0.75 x 10 ⁻⁷)	< 10 ⁻² to 10 ⁻⁷ (0.75 x 10 ⁻² to 0.75 x 10 ⁻⁷)	< 10 ⁻² to 10 ⁻⁷ (0.75 x 10 ⁻² to 0.75 x 10 ⁻⁷)
Ultimate total pressure ¹⁾	mbar (Torr)	< 5.0 x 10 ⁻⁷ (3.75 x 10 ⁻⁷)	< 5.0 x 10 ⁻⁷ (3.75 x 10 ⁻⁷)	< 5.0 x 10 ⁻⁷ (3.75 x 10 ⁻⁷)
Max. permissible forevacuum pressure	mbar (Torr)	6.0 x 10 ⁻¹ (4.5 x 10 ⁻¹)	6.0 x 10 ⁻¹ (4.5 x 10 ⁻¹)	6.0 x 10 ⁻¹ (4.5 x 10 ⁻¹)
Pump fluid filling, min. / max.	l (qts)	6.0 / 9.0 (6.3 / 9.5)	7.0 / 15.0 (7.4 / 15.9)	12.0 / 25.0 (12.7 / 26.4)
Mains connection				
Standard EURO, 50/60 Hz	V	400 ~ 3 Ph Y	400 ~ 3 Ph Y	400 ~ 3 Ph Y
Standard Americas, 50/60 Hz	V	460 ~ 3 Ph Y	460 ~ 3 Ph Y	460 ~ 3 Ph Y
Special, 50/60 Hz	V	230 ~ 3 Ph Δ	230 ~ 3 Ph Δ	230 ~ 3 Ph Δ
Reduced power consumption through power controller (saves up 30%)	kW	8.4	12.6	16.8
Heating power	kW	12	18	24
Number of heating cartridges		12	18	24
Heating up time	min	< 25	< 30	< 30
Cooling water (minimum)				
for pump ²⁾	l x h ⁻¹ (gal/min)	600 (2.6)	900 (4.0)	1500 (6.6)
for cold cap baffle	l x h ⁻¹ (gal/min)	60 (0.26)	80 (0.35)	150 (0.66)
max. supply pressure	bar (psig)	6 (87)	6 (87)	6 (87)
Number of cooling circuits (including cold cap baffle)		2	3	3
Cooling water connection				
for pump	G (BPS)	1/2"	1/2"	1/2"
for cold cap baffle	G (BPS)	3/8"	3/8"	3/8"
Weight, approx.	kg (lbs)	172 (379)	296 (653)	560 (1235)
Recommended backing pump ³⁾ at operating pressures > 10 ⁻⁴ mbar (> 0.75 x 10 ⁻⁴ Torr) at operating pressures < 10 ⁻⁴ mbar (< 0.75 x 10 ⁻⁴ Torr)		SV 200 + W 501 TRIVAC D 65 B + W 251	SV 300 + W 1001 SV 300 + W 251	SV 630 B + W 2001 SV 300 + W 501

Ordering Information
DIP 20 000
DIP 30 000
DIP 50 000

	Part No.	Part No.	Part No.
Oil diffusion pump			
Standard EURO with control unit	222 30V001	222 35V001	222 40V001
Standard Americas with control unit	222 30V002	222 35V002	222 40V002
Standard EURO	222 30	222 35	222 40
Standard Americas	500 882	500 665	500 728
Special	22230V004	22235V006	500 654
Retrofit kit energy control unit	503 647V001	503 648V001	503 648V001
Retrofit kit energy control unit US	503 647V002	503 648V002	503 648V002
Astrotorus baffle	227 70	227 75	227 80
Water flow monitor	500006623	500006623	500006623
Over-temperature protection switch	122 84	122 84	122 84
Contact thermometer	218 81	218 81	218 81
Resistance thermometer Pt100 sensor	200 02 958	200 02 958	200 02 958
Pump fluid ⁴⁾	see Catalog Part "Oils / Greases / Lubricants LEYBONOL"		

¹⁾ Measured to DIN 28 427 with LEYBONOL LVO 500 as the pump fluid

²⁾ The required quantity of cooling water refers to ΔT = 10 °C (50 °F). The discharge temperature should not exceed 30 °C (86 °F)

³⁾ Single- or two-stage rotary vane vacuum pump (TRIVAC; SOGEVAC) from our range of forevacuum pumps jointly with Roots vacuum pumps (RUVAC) in pump systems

⁴⁾ Oil must be purchased separately

LEYBOJET 630

Water-Cooled



LEYBOJET 630


The oil diffusion pumps from Oerlikon Leybold Vacuum are well proven in industrial high vacuum applications.

They excel through their excellent vacuum performance data and owing to their rugged design are a reliable component in many medium and high vacuum systems.


The water-cooled LEYBOJET 630 was developed especially with the medium vacuum in mind.

Advantages for the User

- High and stable pumping speed well into medium vacuum range
- Low ultimate pressure
- Low oil backstreaming due to integrated water-cooled cold cap baffle
- High forevacuum tolerance
- Each heating cartridge is protected by a separate circuit breaker
- In maintaining the well proven heating system - heating insert with thermally conducting panels and heating cartridges - the LEYBOJET 630 is now equipped with an additional ejector nozzle for the purpose of obtaining a stable pumping speed well into the medium vacuum range

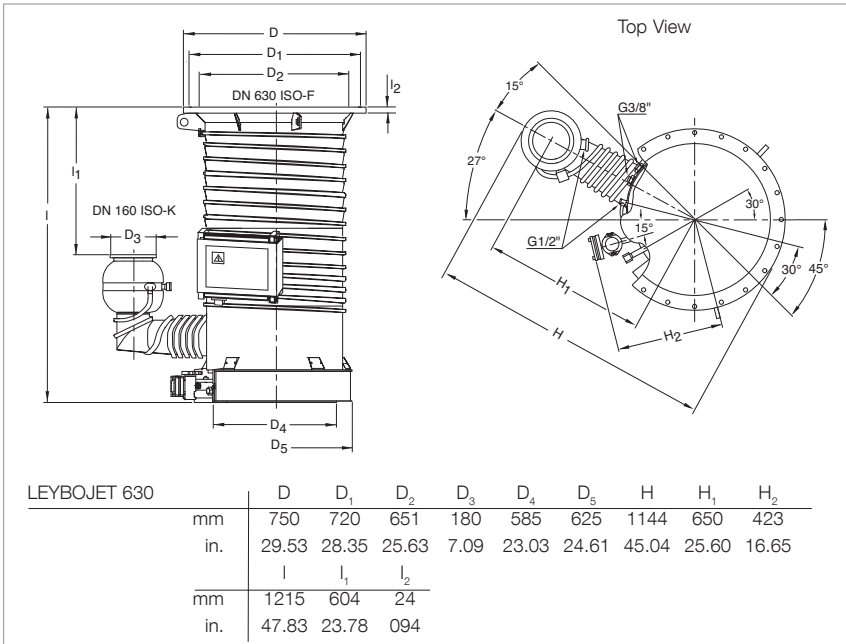

Dimensional drawing for the LEYBOJET 630

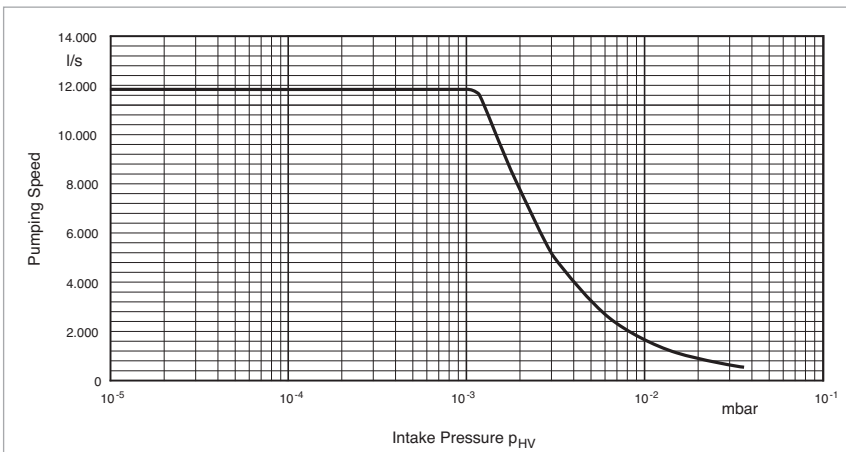

Pumping speed curve of the LEYBOJET 630 as a function of the intake pressure

Typical Applications

The principal areas of application of the LEYBOJET 630 are modern sputtering processes as well as vacuum melting and drying plants.

Supplied Equipment

The LEYBOJET 630 are supplied ready for connection but without the filling of pump fluid.

The inside of the pump is cleaned before delivery to such an extent that it is free of oil. The inside is evacuated. High and forevacuum flanges are equipped with gaskets, centering rings, shipping flanges, and clamping components.

Technical Data

LEYBOJET 630

High vacuum connection	DN	630 ISO-F
Forevacuum connection	DN	160 ISO-K
Pumping speed for air ¹⁾		
at 1×10^{-2} mbar	$l \times s^{-1}$	1 700
at 1×10^{-3} mbar	$l \times s^{-1}$	12 000
$< 1 \times 10^{-4}$ mbar	$l \times s^{-1}$	12 000
Operating range	mbar (Torr)	$< 10^{-2}$ ($< 0.75 \times 10^{-2}$)
Ultimate total pressure ¹⁾	mbar (Torr)	$< 5 \times 10^{-7}$ ($< 3.75 \times 10^{-7}$)
Max. permissible forevacuum pressure	mbar (Torr)	6×10^{-1} (4.5×10^{-1})
Pump fluid filling, min. / max.	l (qts)	5.0 / 8.0 (5.3 / 8.5)
Mains connection 50/60 Hz	V	400, 3 Ph
Heating power	kW	10.8
Number of heating cartridges		9
Heating up time	min	< 30
Cooling water		
min. throughput ²⁾	$l \times h^{-1}$ (gal/min)	500 (2.2)
connection	G	1/2"
Number of cooling circuits (including cold cap baffle)		2
Cooling water connection		
for pump	G (BPS)	1/2"
for cold cap baffle	G (BPS)	3/8"
Weight, approx.	kg (lbs)	145 (320)
Recommended backing pump ³⁾		
at operating pressures		
$> 10^{-4}$ mbar ($> 0.75 \times 10^{-4}$ Torr)		SV 200 + W 501
at operating pressures		
$< 10^{-4}$ mbar ($< 0.75 \times 10^{-4}$ Torr)		TRIVAC D 65 B + W 251

Ordering Information

LEYBOJET 630

	Part No.
Oil diffusion pump LEYBOJET 630	502 180
Astrotorus baffle	227 70
Water flow monitor	500006623
Over-temperature protection switch	122 84
Contact thermometer	218 81
Resistance thermometer Pt100 sensor	200 02 958
Pump fluid ⁴⁾	see Catalog Part "Oils / Greases / Lubricants LEYBONOL"


¹⁾ Measured to DIN 28 427 with LEYBONOL LVO 500 as the pump fluid

²⁾ The required quantity of cooling water refers to $\Delta T = 10 \text{ }^\circ\text{C}$ (50 $^\circ\text{F}$). The discharge temperature should not exceed 30 $^\circ\text{C}$ (86 $^\circ\text{F}$)

³⁾ Single- or two-stage rotary vane vacuum pump (TRIVAC; SOGEVAC) from our range of forevacuum pumps jointly with Roots vacuum pumps (RUVAC) in pump systems

⁴⁾ Oil must be purchased separately

Oil Booster OB 6000 to OB 18000

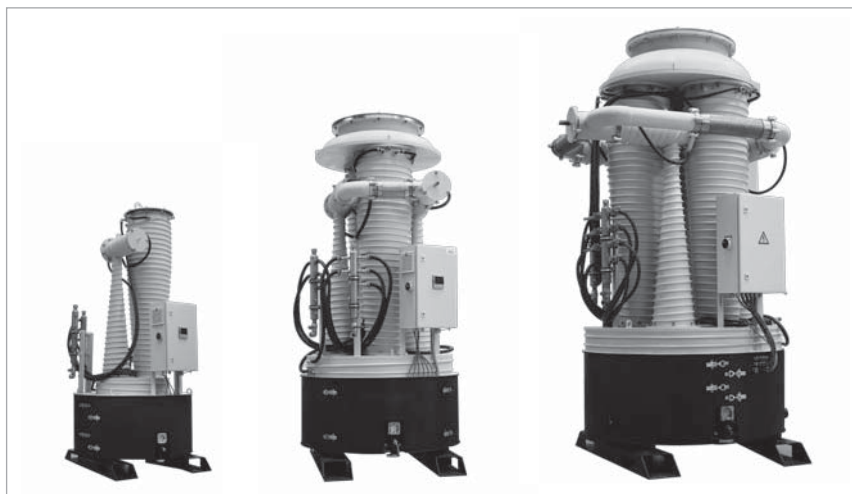

Oil Booster OB 6000 (left), OB 12000 (middle) and OB 18000 (right)

The design of the oil booster pumps from Oerlikon Leybold Vacuum is well proven in industrial high vacuum applications. They excel above all through excellent vacuum performance data and are, owing to their rugged design a reliable component in many medium and high vacuum units.

The water cooled oil booster pump was developed in particular for applications in the rough and medium vacuum range. The pumps from the OB line from Oerlikon Leybold Vacuum deliver when properly deployed, a maximum pumping speed at high gas throughputs.

Advantages for the User

- Very high pumping speed from a small sized pump
- Pump sizes 6000, 12,000 and 18,000 m³ per hour
- Simple to operate
- Rugged and long life
- Selectable flange connections (OB 12,000 and 18,000 only)
- Small manageable amount of spare parts
- Pump components (e.g. heating elements, diffusion corpus, jet corpus) are similar for all OB sizes and can be exchanged easily
- Modern electronic pump monitoring (PLC controlled)
- High efficiency due to direct heating
- Optimized heating design for long oil change intervals

Typical Applications

- Vacuum Induction Melting (VIM) or Vacuum Induction Degassing (VID) of special alloys are utmost important process steps in the metallurgy.
- Depending on the required steel-quality, the required process pressure in such applications is particularly low.
- Secondary metallurgy processes are becoming more popular thanks to the greater demand for better steels e.g. in the automotive, construction and rail markets.

Supplied Equipment

The OB pumps are plug-and-play but are delivered without pump fluid.

The pump chamber is free of oil and has been cleaned.

The inside volume is evacuated. The high vacuum and forevacuum flanges are equipped with sealing and centering rings as well as shipping flanges.

Moreover, the electric circuit breaker box and the cooling water manifold have been installed for immediate connection.

The included Pt100 temperature sensor ensures safe oil temperature monitoring.

The installed overtemperature protection switch monitors and ensures safe operation of the pump.

Technical Data


Oil Booster

		OB 6000	OB 12000	OB 18000
Pumping speed for air below 1.0×10^{-3} mbar (7.5×10^{-3} Torr)	mbar x l x s ⁻¹	6.000	12.000	18.000
High vacuum connection standard	DN	400 ISO-K	630 ISO-F	630 ISO-F
optional	DN	400 ISO-K / ASA 16 / ASA 18	500 ISO-K / 800 ISO-F / ASA 16 / ASA 20	800 ISO-F / 1000 ISO-F / ASA 32 / ASA 35
Fore vacuum connection (standard)	DN	160 ISO-K	160 ISO-K	160 ISO-K
Operating range	mbar (Torr)	1 to 10^{-6} (0.75 to 10^{-6})	1 to 10^{-6} (0.75 to 10^{-6})	1 to 10^{-6} (0.75 to 10^{-6})
Ultimate total pressure	mbar (Torr)	5×10^{-6} (< 3.75×10^{-6})	5×10^{-6} (< 3.75×10^{-6})	5×10^{-6} (< 3.75×10^{-6})
Pump fluid filling	l (qts)	45 (47.6)	60 (63.4)	90 (95.1)
Mains connection				
Standard EURO, 50/60 Hz	V	400 ~ 3 Ph Y	400 ~ 3 Ph Y	400 ~ 3 Ph Y
Standard Americas, 50/60 Hz	V	460 ~ 3 Ph Y	460 ~ 3 Ph Y	460 ~ 3 Ph Y
Special, 50/60 Hz	V	230 ~ 3 Ph Δ	230 ~ 3 Ph Δ	230 ~ 3 Ph Δ
Weight	kg (lbs)	450 (992)	850 (1874)	1400 (3086)
Cooling water consumption	l x h ⁻¹ (gal/min)	700 (3.1)	800 (3.5)	1360 (6.0)
connection	G	1"	1"	1"

Ordering Information

Oil Booster


	OB 6000	OB 12000	OB 18000
	Part No.	Part No.	Part No.
Oil diffusion pump			
Standard EURO	503750V001	503654V001	503508V001
Standard US	503750V005	503654V005	503508V005
with control unit			
EURO version	503750V002	503654V002	503508V002
US version	503750V006	503654V006	503508V006
with control unit and waterflow/ -temperature monitoring			
EURO version (380 V)	503750V003	503654V003	503508V003
US version (460 V)	503750V004	503654V004	503508V004
Pump fluid	see Catalog Part "Oils / Greases / Lubricants LEYBONOL"		

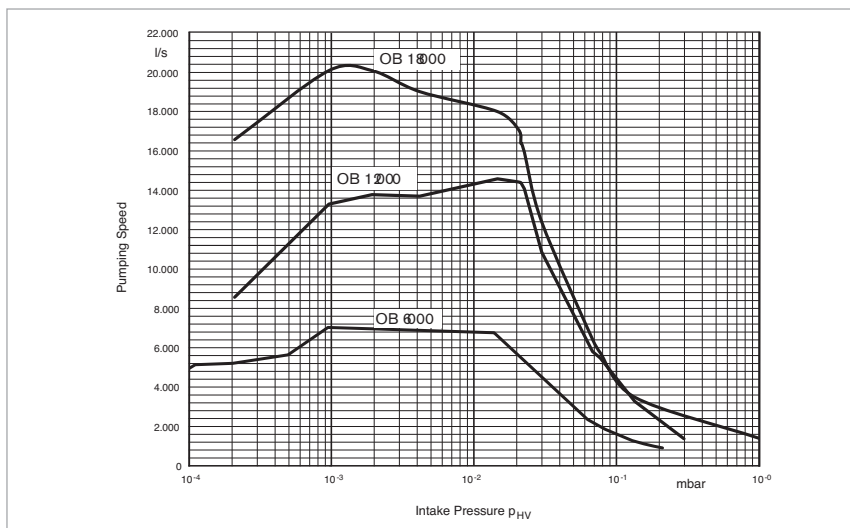

Pumping speed curves of the Oil Booster OB 6000 to OB 18000 as a function of the intake pressure


Accessories for Oil Diffusion Pumps

Astrotorus Baffles

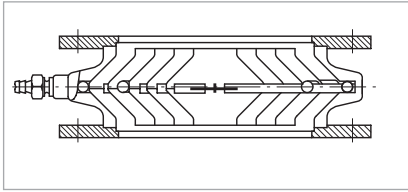

Section through an astrotorus baffle

The cooling inserts of the astrotorus baffles are made of copper, whereas the housing and the connection flange are made of standard steel.

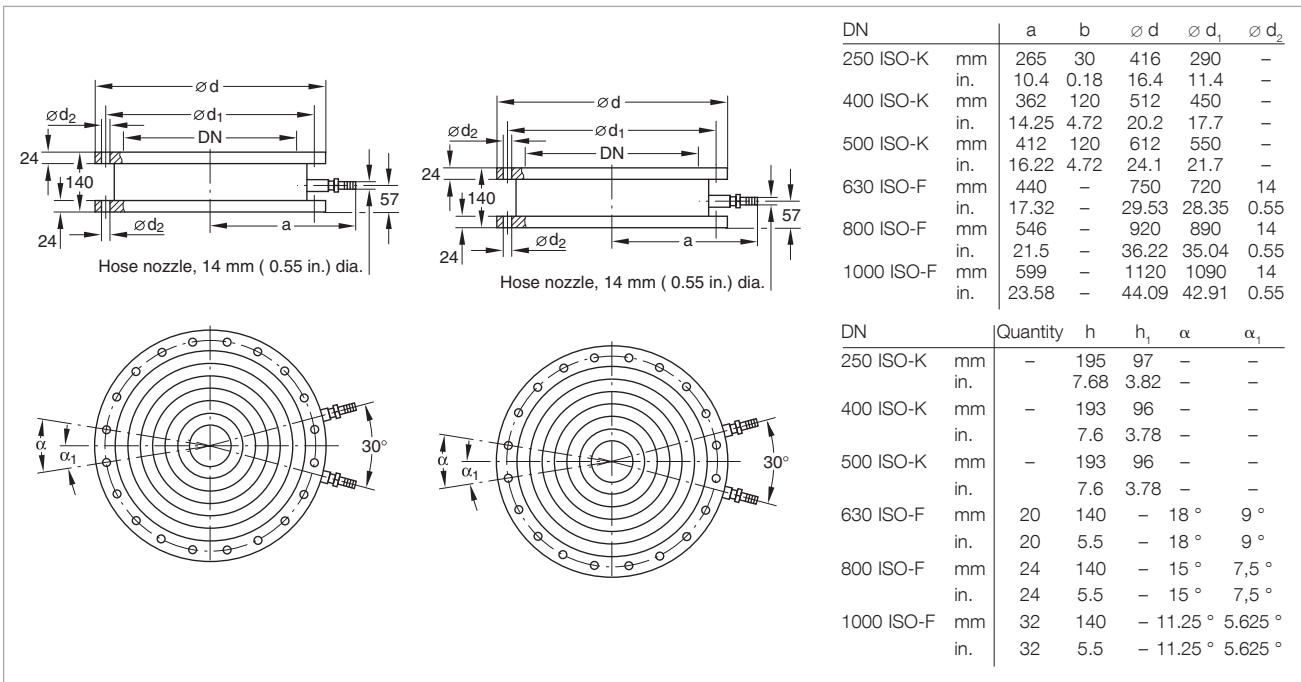

Dimensional drawing for the astrotorus baffle ISO-K (left) and ISO-F (right)

Technical Data

Astrotorus Baffles

Connection to pump	DIP	3 000	8 000	12 000
HV connection flanges	DN	250 ISO-K	400 ISO-K	500 ISO-K
Throttling of the pumping speed, approx.	%	30	30	30
Conductance	$l \times s^{-1}$	3 000	9 000	12 000
Weight	kg (lbs)	25.0 (55.2)	30.0 (66.2)	65.0 (143.5)

Ordering Information

Astrotorus Baffles

	Part No.	Part No.	Part No.
Astrotorus baffle			
250 ISO-K	227 50	-	-
400 ISO-K	-	227 60	-
500 ISO-K	-	-	227 65

Technical Data

Astrotorus Baffles

Connection to pump	DIP	20 000	30 000	50 000
HV connection flanges	DN	630 ISO-F	800 ISO-F	1000 ISO-F
Throttling of the pumping speed, approx.	%	30	30	30
Conductance	$l \times s^{-1}$	18 000	28 000	50 000
Weight	kg (lbs)	120.0 (264.9)	170.0 (375.3)	190.0 (419.4)

Ordering Information

Astrotorus Baffles

	Part No.	Part No.	Part No.
Astrotorus baffle			
630 ISO-F	227 70	-	-
800 ISO-F	-	227 75	-
1000 ISO-F	-	-	227 80

For matching valves, please ask us for a quotation.

Temperature dependant Switching Components for Automatic Pump System Control


The operational status of the diffusion pump depends on the temperature of the pump fluid in the pump boiler. Through temperature dependent switching components which are inserted into the pump boiler it is possible to monitor the operational status of the diffusion pump and signal its status to a process controller.

For this, the diffusion pump requires two thresholds. Depending on the type of pump, the upper threshold should be between 180 and 200 °C (356 and 392 °F) and the lower threshold between 90 and 100 °C (194 and 212 °F).

The upper threshold indicates that the diffusion pump is ready for operation and thus actuates certain devices, for example opening of the high vacuum valve ahead of the diffusion pump.

The lower threshold indicates that the diffusion pump has cooled down to such an extent that the backing pump and the cooling water supply may be switched off.

Over-temperature protection switches are used to monitor the temperature of the cooling water in the cooling water circuit of the diffusion pumps. When the temperature rises to unacceptably high levels (for example when the cooling water supply fails) the heater in the diffusion pump is switched off (correct electrical connection to the main supply is required). The use of over-temperature protection switches avoids unnecessary alarms that may be triggered by contaminated water when only a water flow monitor is used. The over-temperature protection switch is screwed on to a contact plate which is soldered to the cooling pipe on the

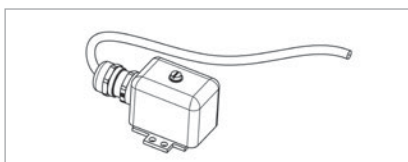

Over-temperature protection switch

pump's body.


Max. switching current: 5 A (230 V, 50/60 Hz).

Contact thermometer with a range from 0 to 400 °C (32 to 752 °F).


Through a trailing pointer two switching thresholds may be set up independently. The current oil temperature and the thresholds which have been set up can be read off at the

location of the diffusion pump. The contacting thermometer is not suited for remote signaling of temperatures.

Resistance thermometer Pt100 sensor. The measurement range of this sensor depends on the temperature display unit used by the customer where also the required thresholds are set up. The Pt100 sensor is ideal for remote signaling of temperatures.

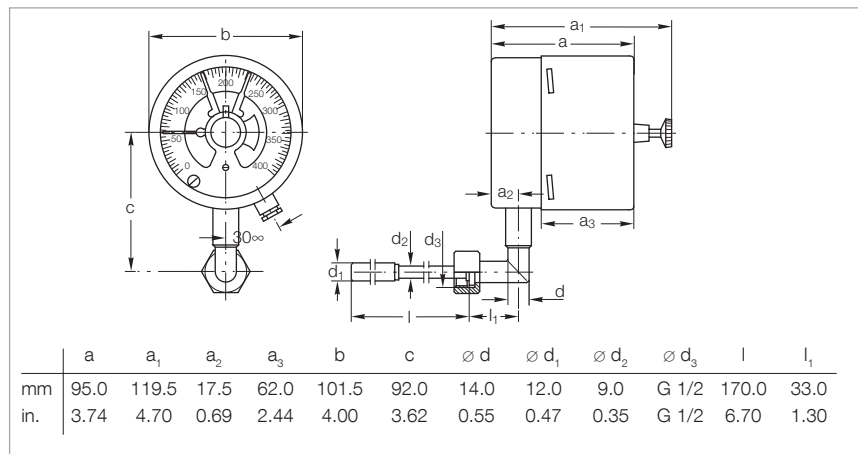

Dimensional drawing for the contact thermometer

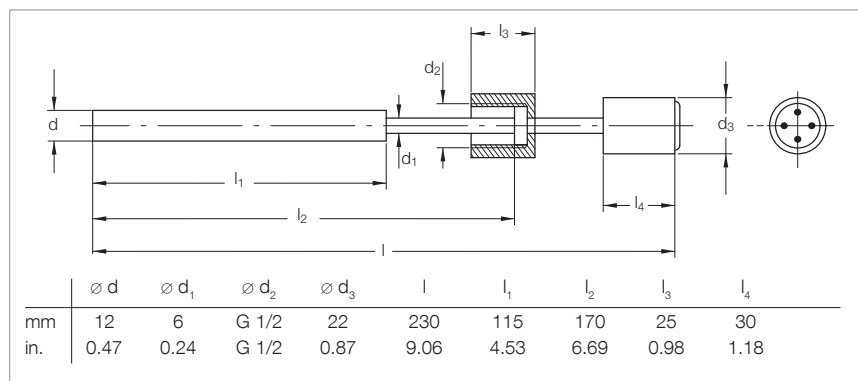

Dimensional drawing for the resistance thermometer Pt100 sensor

Ordering Information

Monitoring Instruments

	Part No.
Over-temperature protection switch	122 84
Contact thermometer (Measurement range 0 to +400 °C (+32 to +752 °F), Rating at 220 V AC: 250 mA [resistive load], Weight: 1.7 kg (3.7 lbs))	218 81
Resistance thermometer Pt100 sensor	200 02 958

Monitoring Instruments

Protection against Overheating

Water flow monitors are installed in the cooling water return section of the diffusion pump. When the cooling water throughput drops below a certain level, either the heater in the diffusion pump is switched off or a warning light or signal is triggered, depending of the type of circuit.

Measurement range: 1 to 40 l · h⁻¹
(0.06 to 2.52 gal/min)

The water throughput may be set within the limits stated with a high degree of reproducibility.

Water flow monitors may be installed in any orientation.

Max. switching capacity:
100 VA (230 V, 50/60 Hz).

Protection against Power Failure

A SECUVAC valve (see Product Section "Vacuum Valves") must be installed in the forevacuum line in order to prevent damage to the diffusion pump or the pump fluid in the event of a power failure affecting backing pumps which are not equipped with an automatic isolation valve. Rotary vane vacuum pumps from the TRIVAC B series are equipped with an automatic safety valve (intake isolation valve) as standard.

Protection against Pressure Increases in the Forevacuum Line

For protection against a pressure increase in the forevacuum line which is not caused by a power failure you may use our vacuum gauges which offer an adjustable switching threshold (see Product Section "Vacuum measuring - controlling").

Ordering Information

Water Flow Monitor

	Part No.
Water flow monitor	500006623

Power Controller



Power controller with integrated USB interface



Ethernet interface for PLC data integration

When it comes to the aspect of economic and efficient operation of diffusion pumps, power consumption plays an important role.

Through our DIP power controller, you may now drastically cut your power consumption - and this without impairing pump performance in any way!

Oerlikon Leybold Vacuum Solutions provides an unique energy control unit with less thermal loss to control the heating power to save energy significantly!

Advantages to the User

- Energy saving up to 30% (low costs and ROI in less than three years)
- Further potential savings through temperature decrease in standby-mode
- High quality regulation with customized software
- Increased operation safety and comfort
- Improved service life for oil and heating cartridges
- Easy and exact to operate via PLC or manual directly at the pump
- Uncomplicated integration of generated data into your own process control or export data via USB port
- Strategically process analysis and optimization by interpretation of energy control unit data

Technical Data**Power Controller for**


		DIP 20 000	DIP 30 000	DIP 50 000
Pumping speed for air below 1×10^{-4} mbar	$l \times s^{-1}$	20 000	30 000	50 000
Installed heating power	kW	12	18	24
Number of heating cartridges		2	6	9
Heating up time	min	< 25	< 30	< 30
Cooling water (minimum) for the pump	$l \times h^{-1}$	600	900	1500
for the cold cap baffle	$l \times h^{-1}$	80	80	150

Ordering Information**Power Controller for**

	DIP 20 000	DIP 30 000	DIP 50 000
	Part No.	Part No.	Part No.
Oil diffusion pump with power controller			
DIP 20 000	22230V001	-	-
DIP 30 000	-	22235V001	-
DIP 50 000	-	-	22240V001
Retrofit kit (DIP power controller)			
DIP 20 000	503647V001	-	-
DIP 30 000	-	503648V001	-
DIP 50 000	-	-	503649V001
Full-service retrofit kit ¹⁾			
DIP 20 000	AS8100F	-	-
DIP 30 000	-	AS8101F	-
DIP 50 000	-	-	AS8102F
Mineral oil LVO 500			
1 l	L50001	L50001	L50001
5 l	L50005	L50005	L50005
20 l	L50020	L50020	L50020
Mineral oil LVO 510			
1 l	L51001	L51001	L51001
5 l	L51005	L51005	L51005
Silicone oil LVO 520			
1 l	L52001	L52001	L52001
5 l	L52005	L52005	L52005
Silicone oil LVO 530			
1 l	L53001	L53001	L53001

¹⁾ Delivery, installation, commissioning and instruction of the staff is included

Adsorption Traps with Aluminium Oxide Insert

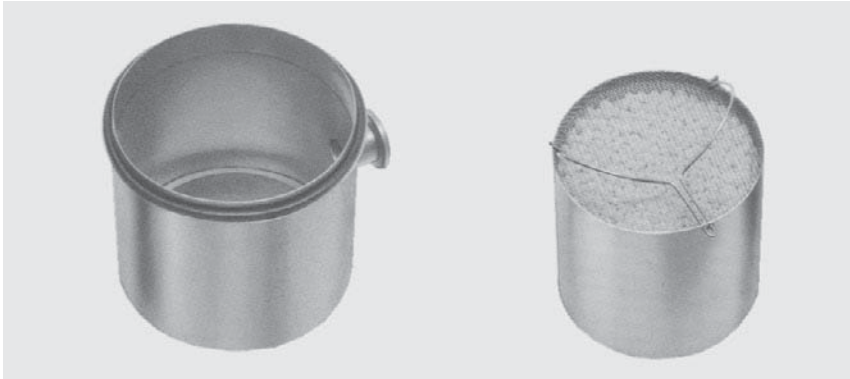

Adsorption trap (left) and insert (right)

Adsorption traps are installed in all those cases where an oil-free vacuum is to be produced with oil-sealed vacuum pumps.

Advantages to the User


- Backstreaming of oil is reduced by 99%
- Long service life
- High conductance
- Filling can be easily exchanged
- Improvement in the ultimate pressure attained by backing pumps by one order of magnitude
- Stainless steel housing and insert
- NBR gasket

Typical Applications


- Product of an oil-free vacuum

Supplied Equipment

- Complete with insert
- Without adsorbent

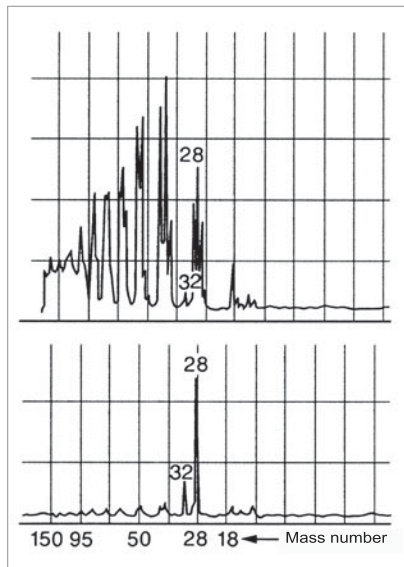

Residual gas spectrum; top ahead of a rotary vacuum pump, bottom ahead of a rotary vacuum pump with adsorption trap

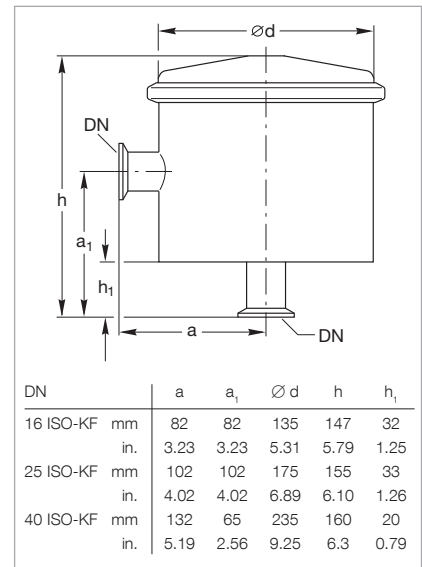

Dimensional drawing for the adsorption traps

Technical Data

		16 ISO-KF	25 ISO-KF	40 ISO-KF
Conductance at 10 ⁻² mbar (Torr)	l x s ⁻¹	4.0	6.0	12.0
Service live with Al oxide	Months	3	3	3
Al oxide filling	l (qts)	0.5 (0.53)	1.0 (1.06)	2.0 (2.1)
Weight, approx.	kg (lbs)	1.3 (2.9)	1.3 (2.9)	4.0 (8.8)

Ordering Information

		16 ISO-KF	25 ISO-KF	40 ISO-KF
	Part No.	Part No.	Part No.	
Adsorption trap	854 14	854 15	854 16	
Activated aluminum oxide in tin 1.6 l (approx. 1.2 kg (2.65 lbs))	854 10	854 10	854 10	

Applications and Accessories, Cryo Pumps

Cryo pumps											
	COOLVAC 800 EL	COOLVAC 800 CL	COOLVAC 1,500 QL	COOLVAC 2,000 QL	COOLVAC 3,000 QL	COOLVAC 5,000 QL	COOLVAC 10,000 QL	COOLVAC 18,000 QL	COOLVAC 30,000	COOLVAC 60,000	
Application											
UHV systems	■	■	■	■							
Beam tubes in particle accelerators	■										
Transfer chambers / Loadlock	■	■	■	■	■						
General research	■	■	■	■	■	■	■	■	■	■	■
Evaporation coating systems		■	■	■	■	■	■	■	■	■	■
Sputtering systems		■	■	■	■						
Ion implanters		■	■	■	■	■					
Metallization systems	■	■	■	■	■	■	■	■	■	■	■
Space simulation chambers	■	■	■	■	■	■	■	■	■	■	■
Electron beam welding systems	■	■	■	■	■	■	■	■			

Accessories

Page

	Page	COOLVAC 800 EL	COOLVAC 800 CL	COOLVAC 1,500 QL	COOLVAC 2,000 QL	COOLVAC 3,000 QL	COOLVAC 5,000 QL	COOLVAC 10,000 QL	COOLVAC 18,000 QL	COOLVAC 30,000	COOLVAC 60,000
Compressor unit COOLPAK 2000 (A)/2200 (A)	496/499	■	■	■	■	■					
Compressor unit COOLPAK 6000 H/6200 H/6000 HD	500	[■]	[■]	[■]	[■]	[■]	■	■	■	■	■
Gas manifold GD 2	504	■	■	■	■	■	■				
Gas manifold GD 4	504	■	■	■	■						
Low temperature controller MODEL 9700	514	■									
Temperature sensor	516	■									

[■] = For dual and multiple operation only

Applications and Accessories, Cryogenics

Cold heads						
	COOLPOWER 50	COOLPOWER 140 T	COOLPOWER 725	COOLPOWER 5/100	COOLPOWER 5/100 T	COOLPOWER 10 MD
Application						
Cooling of samples and detectors	■	■	■	■	■	■
Cooling of superconductors	(■)	(■)	■	■	■	■
Cooling of cryopanel	■	■	■	■	■	■
Cleaning of gases	■	■	■	■	■	■
Calibration of sensors			■	■	■	■
Optical spectroscopy			■	■	■	■
Infrared spectroscopy			■	■	■	■
Matrix spectroscopy			■	■	■	■
Testing of superconductors			■			
Cooling of superconducting magnets, coils and components HT _c + LT _c	(■)	(■)		■	■	

Accessories

	Page					
Compressor unit COOLPAK 2000 (A)/2200 (A)	496/498	■		■		
Compressor unit COOLPAK 6000 H/6200 H	500		■		■	■
Compressor unit COOLPAK 6000 HMD/6200 HMD	502					■
Low temperature controller MODEL 9700	514			■	■	■
Low temperature measurement instrument MODEL 211S	515	■	■	■	■	■
Temperature sensor	516	■	■	■	■	■

(■) = Only high T_c superconductors

Conversion of Units

Celsius, Fahrenheit, Kelvin

Kelvin (abbreviated as K) is the unit of temperature.

Temperatures on the Kelvin scale are converted into temperatures on the Celsius scale as follows:

$$n \text{ } ^\circ\text{C} = (n + 273.15) \text{ K.}$$

Since the following equation applies between Celsius scale and Fahrenheit scale

$$n \text{ } ^\circ\text{F} = 5/9 (n - 32) \text{ } ^\circ\text{C}$$

it follows that

$$n \text{ } ^\circ\text{F} = 5/9 (n + 459.67) \text{ K.}$$

The inverse equations are as follows:

$$m \text{ K} = (m - 273.15) \text{ } ^\circ\text{C}$$

$$m \text{ } ^\circ\text{C} = (1.8 m + 32) \text{ } ^\circ\text{F}$$

$$m \text{ K} = (1.8 m - 459.67) \text{ } ^\circ\text{F.}$$

The following applies in particular to absolute zero:

$$0 \text{ K} = -273.15 \text{ } ^\circ\text{C} ; -459.67 \text{ } ^\circ\text{F.}$$

bar, psi

$$1 \text{ bar} = 14.5 \text{ psi}$$

$$1 \text{ MPa} = 10 \text{ bar}$$

Cryo Pumps

Cryo pumps are gas entrapment vacuum pumps for the pressure range from 10^{-3} to $\leq 10^{-11}$ mbar (0.75×10^{-3} to $\leq 0.75 \times 10^{-11}$ Torr). The principle of operation is that gaseous substances are bound to the cold surfaces within the pump by means of cryocondensation, cryosorption or cryotrapping.

In order to be able to produce a high or ultra-high vacuum the cold surfaces (cryopanel) must be cooled to a sufficiently low temperature. Depending on the type of cooling system used a difference is made between refrigerator cryo pumps, bath cryo pumps and evaporator cryo pumps.

Oerlikon Leybold Vacuum manufactures only cryo pumps which are cooled by means of a refrigerator.

Advantages to the User

Advantages offered by the Pumping Principle

- High effective pumping speed for all gases
- Extremely high pumping speed for water vapor

For a given diameter of the high vacuum flange, the cryopump offers the highest pumping speed of all high vacuum pumps.

Advantages offered by Design

In contrast to gas transfer high vacuum pumps (mechanically suspended turbomolecular pumps, for example), cryo pumps do not have any mechanically moving, oil, or grease lubricated parts on the vacuum side.

The following advantages are a direct result of this design characteristic:

- Hydrocarbon-free vacuum in the pressure range from 10^{-3} to $\leq 10^{-11}$ mbar (0.75×10^{-3} to $\leq 0.75 \times 10^{-11}$ Torr).
- Insensitivity to mechanical disturbances from particles coming from the process or external vibrations.

Further Advantages

- Much more compact than comparable pump systems offering a pumping speed of over $1500 \text{ l} \times \text{s}^{-1}$
- Backing pump is only required during start-up and during regeneration
- Easy process control and pump control via computer
- Favorable price-to-performance ratio and low running costs especially at higher pumping speeds

The cryo pumps are cooled by the well-proven two-stage cold heads from Oerlikon Leybold Vacuum's COOLPOWER line (Gifford/McMahon principle).

The design of a refrigerator cryopump from the COOLVAC range is shown schematically in the figure below.

The first stage of the cold head (9) cools the thermal radiation shield (5) and the baffle (6) of the pump.

Depending on the type of pump and the operating conditions operating temperatures of 45 to 80 K are attained. Correspondingly water vapor condensates at this temperature.


The thermal shield and baffle are made of copper which conducts heat very well so as to optimally utilize the refrigerating capacity which is available.

Moreover, the thermal shield is metallized so that reflective losses will be minimal.

The second stage of the cold head (7) is used to cool the cryopanel (8). Depending on the operating conditions, operating temperatures of 10 to 20 K are attained.

Here the process of cryocondensation of N_2 , O_2 and argon will take place.

The active pumping surfaces are made of copper of high thermal conductivity and they are tightly linked thermally to the second stage of the cold head. H_2 , Ne and He are also adsorbed on to these surfaces which are partly covered with activated charcoal.

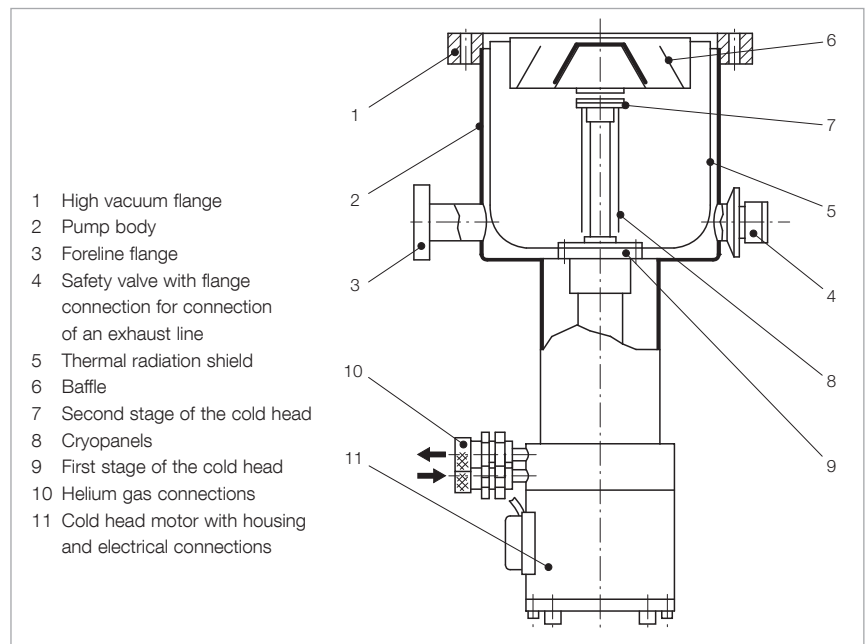

COOLVAC refrigerator cryopump

All cryo pumps from the COOLVAC range are equipped with a safety valve (respectively with a bursting disk in the case of the UHV variants) which is set in the factory so that it will open at an overpressure of 150 mbar (113 Torr).

Multiple Operation of Refrigerator Cryo Pumps

The powerful Oerlikon Leybold Vacuum compressor units COOLPAK 6000 HD open up the possibility of operating two cold heads or refrigerator cryo pumps simultaneously.

Regenerating Cryo Pumps

An important aspect in the operation of cryo pumps is that of regeneration. Since a cryopump is a gas entrapment pump, the gasses which have accumulated in the pump during the "pumping" mode must from time to time be removed from the pump. This is done by switching the compressor unit off and by warming up the cryopanel to room temperature or slightly higher so that the released substances can be pumped out by a forevacuum pump.

Cryo Pumps without Electric Regeneration System

The cryopump is warmed up to room temperature by purging the inside of the pump with a dry, pre-warmed inert gas (such as nitrogen). In this case it is not possible to set up defined and controlled temperatures within the cryopump. Thus the simultaneous presence of gases such as hydrogen and oxygen in the pump can not be entirely excluded. The formation of ignitable gas mixtures is only prevented by the diluting effect of the dry inert gas.

Cryo Pumps with Fully Automatic Electric Regeneration System from Oerlikon Leybold Vacuum

The cryopump is warmed up to room temperature by heating the 1st and 2nd stages of the cold head with elec-

tric heaters. In this case, a defined and controlled temperature distribution within the cryopump can be set up. This controlled warming process ensures that the pumped gases are removed sequentially, i.e. the pumped gases are released one after the other in the following sequence:

Advantages to the User

- Significantly reduced investment and operating costs
- Small footprint

- Gases adsorbed at the cryopanel (e.g. hydrogen, helium, neon),

- Gases condensed at the cryopanel (e.g. nitrogen, oxygen, argon),

- Gases and vapors which have condensed on to the baffle and thermal radiation shield (e.g. water vapor).

- Gases adsorbed at the cryopanel (e.g. hydrogen, helium, neon),
- Gases condensed at the cryopanel (e.g. nitrogen, oxygen, argon),
- Gases and vapors which have condensed on to the baffle and thermal radiation shield (e.g. water vapor).

The electric method of regeneration from Oerlikon Leybold Vacuum prevents gases such as hydrogen and oxygen from being present in the pump at the same time. This excludes the formation of ignitable gas mixtures right from the start.

Cryo pumps without fully automatic control and without electric regeneration system belong to the BasicLine (BL), like the COOLVAC 800 BL, for example.

The warming up process is fully automatic. Pressure and temperature distribution within the pump are set up and controlled by the control system at all times. The sequential regeneration of pumped gases prevents the formation

of ignitable gases right from the start. This ensures the utmost safety during the regeneration of cryo pumps from Oerlikon Leybold Vacuum.

In the case of cryogenic pumps with fully automatic control there exist two cryopump lines.

1. The COOLVAC BasicLine (COOLVAC BL) offering the following pumping speed class for Nitrogen in l/s: 800; COOLVAC 800 BL, for example.

Other pumping speed classes from 1 500 to 18 000 l/s are available on request.

For more information please contact your local Oerlikon Leybold Vacuum representative.


2. The COOLVAC ClassicLine (COOLVAC CL) offering the following pumping speed classes for nitrogen in l/s: 800, 1 500, 2 000, 3 000, 5 000, 10 000 and 18 000; COOLVAC 1500 CL, for example.

In the price list the designators "V" appears in connection with the pump designations.


"V":

The high vacuum flange is located at the top and the cold head below, as is the case for the COOLVAC 1500 CL-V, DN 200 CF.


Refrigerating Capacity of Cryogenic Cold Heads

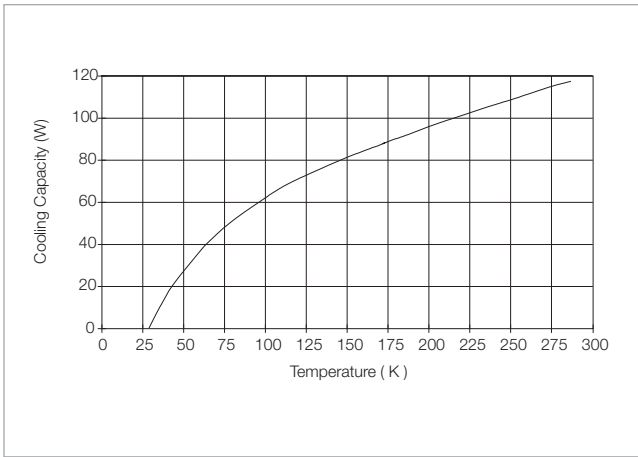


Typical refrigerating capacity of the cold head COOLPOWER 50

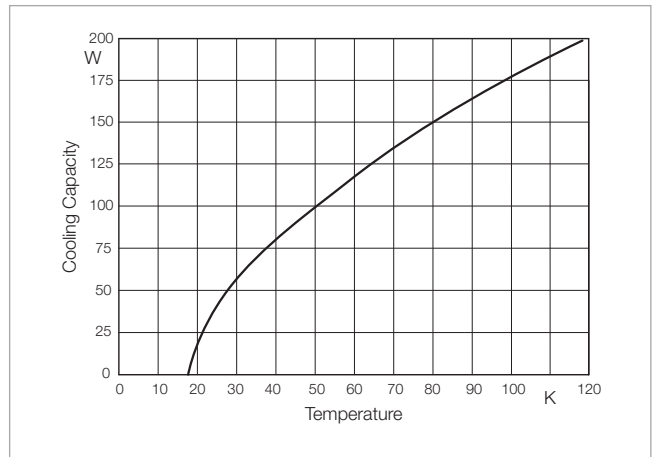


Typical refrigerating capacity of the cold head COOLPOWER 140 T

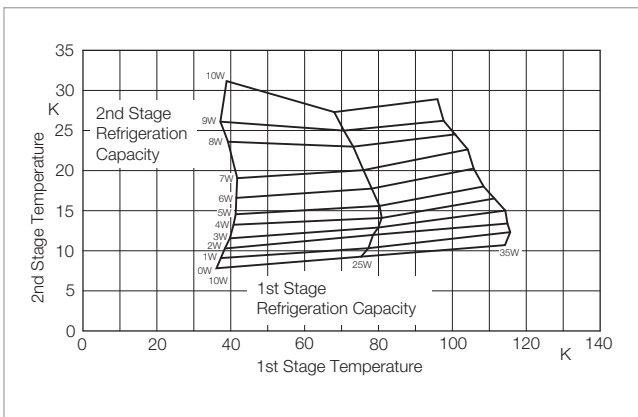


Typical refrigerating capacity of the cold head COOLPOWER 7/25

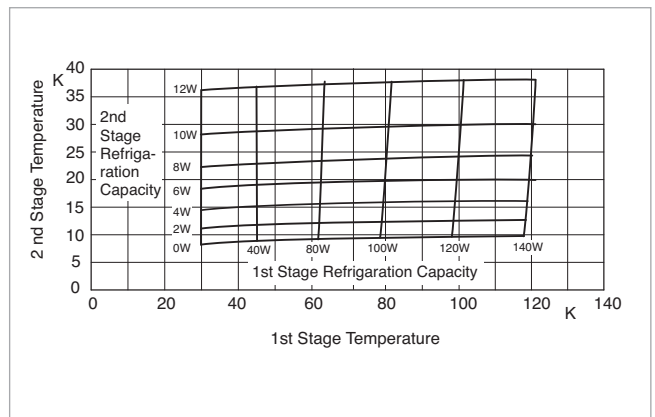

Typical refrigerating capacity of the cold head COOLPOWER 5/100

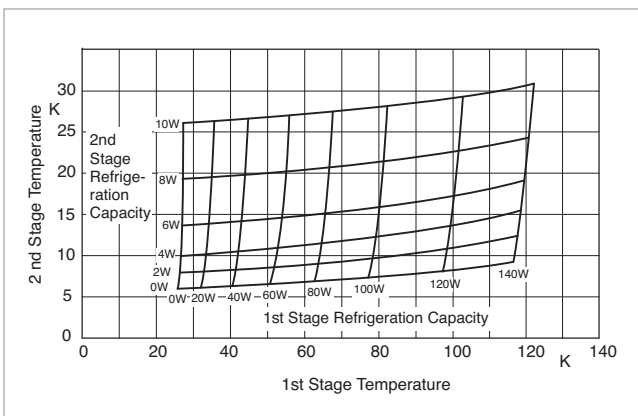

Typical refrigerating capacity of the cold head COOLPOWER 5/100 T

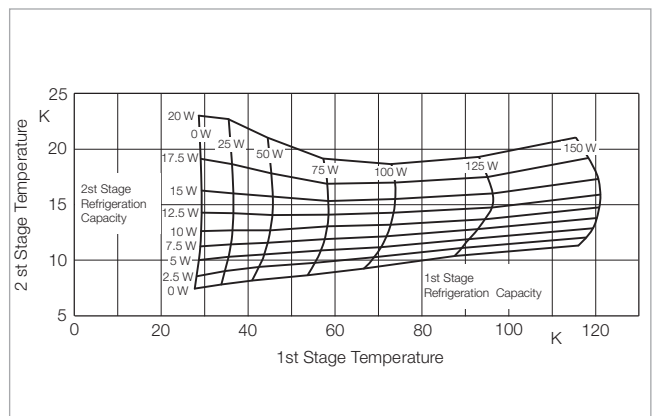

Typical refrigerating capacity of the cold head COOLPOWER 10 MD

The refrigerating capacities stated apply to vertical operation with the cold end at the bottom.

Cold Heads

A refrigerator (cold head) is a gas cooling machine which operates on the basis of a thermodynamic cycle to produce cryogenic temperatures ($T \leq 120 \text{ K}$).

Refrigerators operating according to the Gifford/McMahon principle have succeeded over other methods of cooling cryo pumps and cryostats. It is thus employed exclusively by Oerlikon Leybold Vacuum.

In order to account for individual requirements from customers, Oerlikon Leybold Vacuum offers customized cryostats as well.

Gifford/McMahon-Refrigerators

Advantages to the User


- Low temperatures on a single key press
- No liquid helium and no liquid nitrogen are required
- Very simple to operate
- High refrigerating capacity from a small volume
- Easy process control and temperature control via a computer

Advantages by Design

- No space problems since cold head and compressor unit can be installed and operated apart
- Installation of the cold head basically in any orientation
- High reliability
- Long periods of operation without maintenance
- Cooling of superconducting magnets; in magnetic resonance tomographs, for example
- Cooling of samples and detectors; especially for cooling of samples for spectroscopic analysis in the areas of solid state and surface physics
- high temperature superconductors
- superconductors and semiconductors
- infrared and gamma detectors
- Calibration of sensors

Typical Applications

- Cooling of cryopanel in cryo pumps thereby producing high or ultra-high vacuum

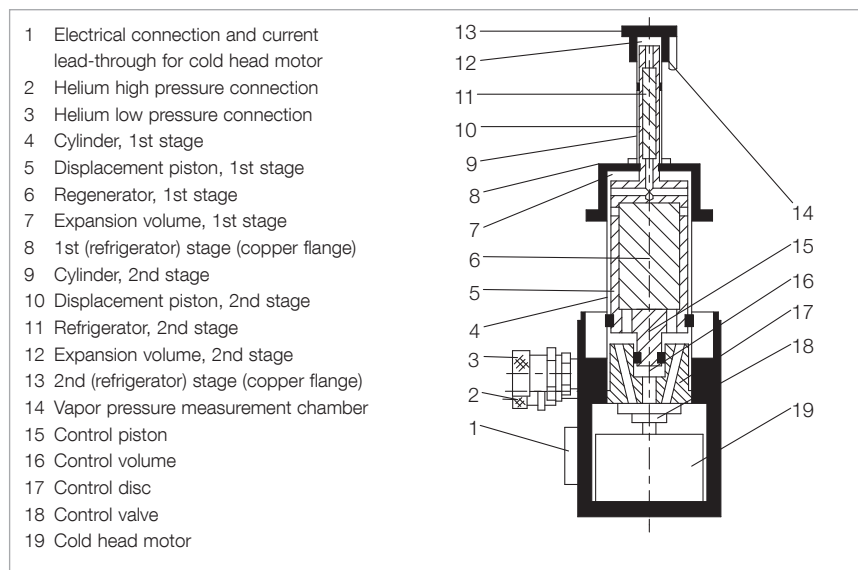

Dual-stage Gifford/McMahon cold head (schematic diagram)


Cold Heads from the COOLPOWER Range

The standard range of single-stage and two-stage cold heads matches a wide range of applications.


Oerlikon Leybold Vacuum is offering refrigerators with usable refrigerating powers of 140 W at 80 K (COOLPOWER 140 T, single-stage) and down to 3.5 W at 10 K (COOLPOWER 5/100 T; dual-stage).

The cold heads basically consist of three subassemblies:

- Drive and control unit for the displacer
- Displacer
- First stage of the cold head (and second stage in the case of two-stage cold heads).

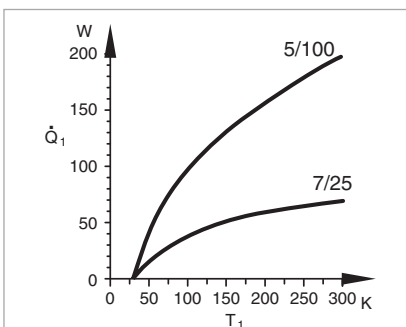

Refrigerating capacity as a function of temperature; operation in connection with the recommended compressor unit at 50 Hz; measured under standard acceptance conditions:
Refrigerating capacity \dot{Q}_1 of the first stage as a function of temperature T_1 of the first stage (2nd stage: $\dot{Q}_2 = 0$).

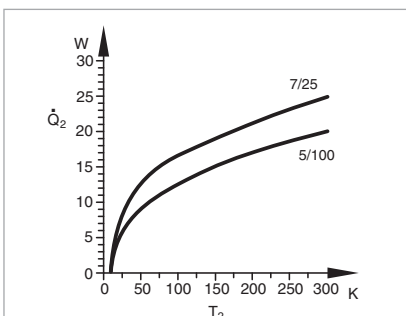

Refrigerating capacity \dot{Q}_2 of the second stage as a function of temperature T_2 , of the second stage (1st stage: $T_1 = 80 \text{ K} = \text{constant}$).
Standard acceptance conditions:
Cold head in a vacuum, 2nd cold stage thermally shielded by a radiation shield (high-gloss nickel-plated) attached to the 1st stage, thermal loading \dot{Q} simulated by electrical heating.

Pneumatically driven Cold Heads

Advantages

- Simple Design

The pneumatic drive system for the displacer of these cold heads from Oerlikon Leybold Vacuum consists of only two mechanically moving components: the rotating control valve and the synchronous motor driving the control valve.

- Easy and quick maintenance

All Oerlikon Leybold Vacuum cryo pumps from the COOLVAC range are equipped with pneumatically driven Oerlikon Leybold Vacuum cold heads.

Owing to the simple design of the built-in cold heads, maintenance is easy. Maintenance can be performed in place without detaching the cryopump from the vacuum chamber.

Mechanically driven Cold Heads

Advantages

In the case of the mechanically driven Oerlikon Leybold Vacuum cold heads, the displacer is moved through the so-called "Scotch yoke" directly by the drive motor. This elaborate mechanism allows the gas flow and the movement of the displacer to be precisely controlled through which it is possible to attain with two-stage cold heads especially high refrigerating capacities in the range of lowest temperatures (refrigerators of the COOLPOWER 10 MD line).

Advantages Through High Reliability

As to reliability, Oerlikon Leybold Vacuum cold heads are top performers.

Especially high reliability is required for medical instrumentation, specifically in connection with nuclear spin tomographs. In this application cold heads are used to cool superconducting magnets and they are thus exposed to strong magnetic fields.

The leading manufacturers of nuclear spin tomographs have therefore decided to use Oerlikon Leybold Vacuum cold heads to cool the superconducting magnets.

Refrigerator Cryostats (Basic Units)

Advantages to the User

- Can be installed basically in any orientation thereby offering a high degree of flexibility in experimental arrangements
- Can be set to any temperature within 6.5 and 320 K
- High refrigerating capacity, constant temperatures
- No liquid refrigerants are required
- Very simple to operate
- Temperature control without problems through standardized control and connecting components
- Possible high throughput of samples due to short cooldown and warming-up periods

Typical Applications

- Cooling of
 - high temperature superconductors
 - superconductors and semi-conductors
 - infrared and gamma detectors
- Measurement of electric and thermal transport quantities, as a function of the temperature, such as
 - electric and thermal conductance
 - electromotive force

Especially in connection with:

- Spectroscopic investigations in the infrared, visible and ultraviolet spectral ranges
- Matrix spectroscopy
- Moessbauer spectroscopy
- Magneto-optic experiments

Compressor Units

COOLPAK 2000 to 6000 compressors are available for single operation of the remaining cold heads from the COOLPOWER line as well as for multiple operation of cryo pumps and cryostats.

The period during which no maintenance will be required on the Oerlikon Leybold Vacuum compressor units depends on the service life of the adsorber. If the values for the ambient temperature and the cooling water

entry temperature remain within the specified range, Oerlikon Leybold Vacuum guarantees a service life for the adsorber - and thus a period during which no maintenance will be required - of 18 000 operating hours.

The possibilities for single and multiple operation of refrigerator cryo pumps are given in the following table:

For the operation of		
Compressor Unit	Cold Heads	Cryo Pumps
COOLPAK 2000/2200	1 x COOLPOWER 50 and 7/25	1 x COOLVAC 800/1500/2000/3000
COOLPAK 2000 (A)/2200 (A)	1 x COOLPOWER 50 and 7/25	1 x COOLVAC 800/1500/2000/3000
COOLPAK 6000 HD	2 x COOLPOWER 50 and 7/25 up to 2 x COOLPOWER 5/100 ¹⁾	2 x COOLVAC 800/1500/2000/3000 2 x COOLVAC 5000 ¹⁾
COOLPAK 6000 H/6200 H	1 x COOLPOWER 140 T 1 x COOLPOWER 5/100	3 x COOLVAC 800/1500/2000 2 x COOLVAC 3000 (5000 ¹⁾) 1 x COOLVAC 5000/10000
COOLPAK 6000 HMD/6200 HMD	1 x COOLPOWER 10 MD	

¹⁾ At reduced power

Approval

The Oerlikon Leybold Vacuum refrigerators in this catalog part (consisting of compressor unit COOLPAK 6000/6200, flexlines FL and the cold head COOLPOWER ²⁾) meet – as complete systems – the requirements of the NRTL (Nationally Recognized Testing

Laboratory) approval for the North American continent.

Oerlikon Leybold Vacuum refrigerators are listed under the reference number UL 471 : 2006 R3.06.

²⁾ Resp. formerly RGD

CE Approval

The Oerlikon Leybold Vacuum compressor units RW and COOLPAK meet the basic requirements regarding safety and health of the relevant EC directives.

Products Cryo Pumps


Standard Cryo Pumps, BasicLine COOLVAC 800 BL

Advantages to the User

- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High pumping speed for water vapor, argon and hydrogen

Typical Applications

- Lamps and tubes manufacture
- Transfer chambers / Loadlock
- General research

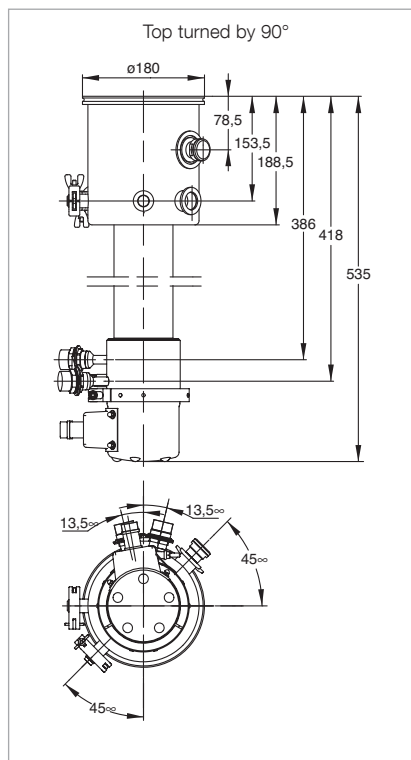


Dimensional drawing for the COOLVAC 800 BL (160 ISO-K)

Advantages to the User

- Hydrocarbon-free ultra-high vacuum
- High pumping speed for water vapor, nitrogen and hydrogen

Typical Applications

- Beam tubes in particle accelerators
- General research

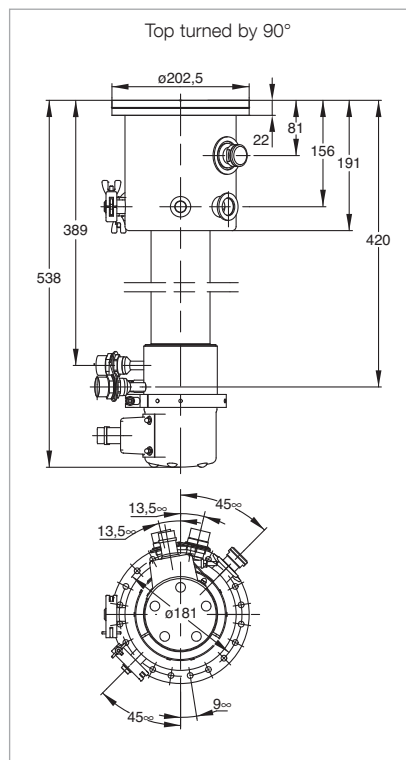


Dimensional drawing for the COOLVAC 800 BL (160 CF)

Advantages to the User

- Hydrocarbon-free ultra-high vacuum
- High pumping speed for water vapor, nitrogen and hydrogen

Typical Applications

- Beam tubes in particle accelerators
- UHV systems

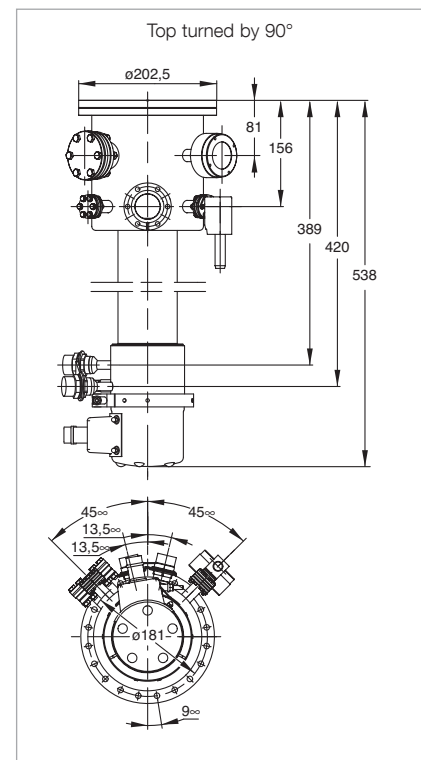

Dimensional drawing for the COOLVAC 800 BL UHV (160 CF)

Technical Data

		800 BL (ISO-K)	COOLVAC 800 BL (CF)	800 BL UHV (CF)
High vacuum flange	DN	160 ISO-K	160 CF	160 CF
Fore vacuum flange	DN	25 KF	25 KF	40 CF
Flange for other purposes	DN	16 KF (2x)	16 KF (2x)	16 CF (1x), 40 CF (1x)
Safety valve with DN 40 KF flange connection for gas exhaust line		welded-in	welded-in	burst disk mounted on DN 16 CF
Pumping speed				
H ₂ O	l x s ⁻¹	2600	2600	2600
Ar / N ₂	l x s ⁻¹	640 / 800	640 / 800	640 / 800
H ₂ / He	l x s ⁻¹	1000 / 300	1000 / 300	1000 / 300
Capacity				
Ar / N ₂	bar x l (Torr x l)	300 (225 000) / 300 (225 000)	300 (225 000) / 300 (225 000)	300 (225 000) / 300 (225 000)
H ₂ at 10 ⁻⁶ mbar	bar x l (Torr x l)	4.5 (3375)	4.5 (3375)	4.5 (3375)
He	bar x l (Torr x l)	0.5 (375)	0.5 (375)	0.5 (375)
Built-in cold head	COOLPOWER	7/25	7/25	7/25
Max. throughput				
Ar / N ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	4 (3) / 4 (3)	4 (3) / 4 (3)	4 (3) / 4 (3)
H ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	2 (1.5)	2 (1.5)	2 (1.5)
Crossover value	mbar x l (Torr x l)	150 (112)	150 (112)	150 (112)
Cool down time to 20 K	min	50	50	50
Overall height	mm (in.)	535 (21.06)	538 (21.18)	538 (21.18)
Weight	kg (lbs)	12 (26.5)	12 (26.5)	12 (26.5)
Silicon diode for temperature measurements at second stage of the cold head		built-in to a DN 16 KF with 4-way HV current feedthrough	built-in to a DN 16 KF with 4-way HV current feedthrough	built-in to a DN 16 CF with 4-way with UHV feedthrough

Ordering Information

	800 BL (ISO-K)	COOLVAC 800 BL (CF)	800 BL UHV (CF)
	Part No.	Part No.	Part No.
COOLVAC	844160V1006	844160V1002	844160V9002
Compressor unit			
COOLPAK 2000	840000V2000	840000V2000	840000V2000
COOLPAK 2200	840000V2200	840000V2200	840000V2200
COOLPAK 2000 A	840000V2010	840000V2010	840000V2010
COOLPAK 2200 A	840000V2210	840000V2210	840000V2210
Connecting cable			
Compressor – cold head, 4.5 m (15.75 ft)	E 400000323	E 400000323	E 400000323
Electric extension cable EL 4.5	893 74	893 74	893 74
Flexlines			
FL 4.5 (1/2", 1/2")	892 87	892 87	892 87
or FL 9.0 (1/2", 1/2")	892 88	892 88	892 88
Low temperature measuring instrument	upon request	upon request	upon request
Cable for the silicon diode, 10 m (35.0 ft) long	upon request	upon request	upon request

Cryo Pumps with Fully Automatic Control, ClassicLine

COOLVAC 800 CL

COOLVAC 1.500 CL



COOLVAC 1.500 CL

Advantages to the User

- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High crossover value
- Simple operation
- Trouble-free integration into complex systems
- Fully automatic regeneration through Cryo Compact Control
- Easy servicing

Typical Applications


- Evaporators
- Sputtering systems
- Ion implanters
- Optical coating systems
- Metallization systems

Advantages to the User


- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High crossover value
- Simple operation
- Trouble-free integration into complex systems
- Fully automatic regeneration through Cryo Compact Control
- Easy servicing

Typical Applications

- Evaporators
- Sputtering systems
- Ion implanters
- Optical coating systems
- Metallization systems

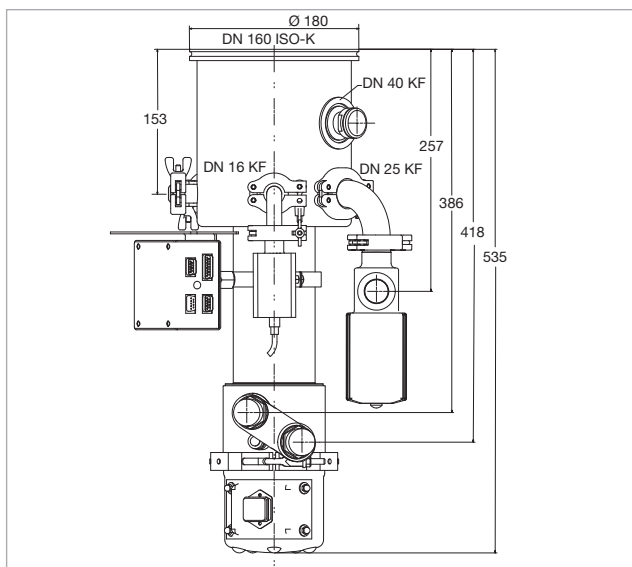

Dimensional drawing for the COOLVAC 800 CL (DN 160 ISO-K)

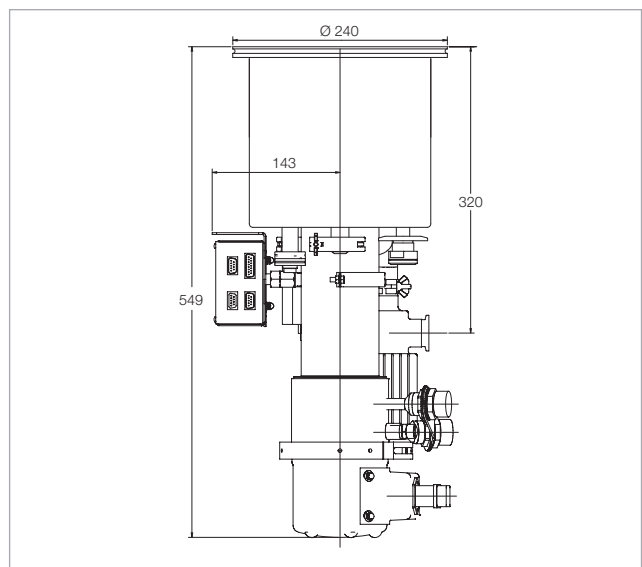

Dimensional drawing for the COOLVAC 1.500 CL (DN 200 ISO-K)

Technical Data

COOLVAC

800 CL

1.500 CL

High vacuum (HV) flange	DN	160 ISO-K / 160 CF	200 ISO-K / 200 CF / 6" ANSI
Fore vacuum flange	DN	25 KF	25 KF
Flange for connection a gauge head	DN	16 KF	16 KF
Flange for the electrical connection	DN	16 KF	16 KF
Safety valve with flange connection for gas exhaust line	DN	40 KF	40 KF
4-way current feedthrough for Si diode on a flange	DN	16 KF	16 KF
Heaters			
1st stage	W	160	160
	V AC	42	42
2nd stage	W	90	90
	V AC	42	42
Temperature sensor			
1st stage		Pt100	Pt100
2nd stage		Si diode	Si diode
Built-in cold head	COOLPOWER	7/25	7/25
Weight	kg (lbs)	15 (33.1)	25 (55.2)
Cooldown time to $T_2 = 20$ K	min	50	60
Crossover value	mbar x l (Torr x l)	150 (112)	210 (157)
Pumping speed			
H ₂ O	l x s ⁻¹	2600	4600
Ar / N ₂	l x s ⁻¹	640 / 800	1200 / 1500
H ₂	l x s ⁻¹	1000	2500
Capacity			
Ar / N ₂	bar x l	300 / 300	1000 / 1000
H ₂ at 10 ⁻⁶ mbar	bar x l	4.5	12.0
Max. throughput			
Ar / N ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	4 (3) / 4 (3)	12 (9) / 12 (9)
H ₂ O	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	2 (1.5)	6 (4.5)
Helium connections (Self-sealing couplings: outside thread, type 5400-S2-8)	DN	1/2"	1/2"

Ordering Information

COOLVAC 800 CL

	Single Operation		Dual operation			Multiple Operation	
	Europe	USA/Japan	Europe	Europe	USA/Japan	Europe	USA/Japan
	Part No.		Part No.			Part No.	
COOLVAC 800 CL DN 160 CF DN 160 ISO-K	844160V0002 844160V0006		844160V0002 (2x) 844160V0006 (2x)			844160V0002 (3x) 844160V0006 (3x)	
Electronics and Cables							
System controller SC	844 230		844 230	844 230	844 230	844 230	
Power supply PS (50/60 Hz) 230 V, 1-ph. (switchable to 115 V) 200 V, 3-ph. (switchable to 400 V)	844 135 -		844 135 -	- 844 235	- 844 235	- 844 235	
Network communication cable – System controller to the pump(s) 10 m (35.0 ft) 20 m (70.0 ft)	844 261 844 262		844 261 844 262	844 261 844 262	844 261 844 262	844 261 844 262	
Network PM cable for the link between the pumps 3 m (10.5 ft) 10 m (35.0 ft)	- -		844 256 844 258	844 256 844 258	844 256 844 258	844 256 (2x) 844 258 (2x)	
Power supply cable from power supply to pump 10 m (35.0 ft) 20 m (70.0 ft)	- -		- -	844 251 (2x) 844 252 (2x)	844 251 (2x) 844 252 (2x)	844 251 (3x) 844 252 (3x)	
Remote control cable CP, 1 m (3.5 ft)	-		-	844 265	844 265	844 265	
Cable compressor – Power supply 10 m (35.0 ft) 20 m (70.0 ft)	844 129 844 139		844 129 844 139	- -	- -	- -	
Cable system controller – Power supply 1 m (3.5 ft)	844 141		844 141	-	-	-	
Cable pump module PM – Power supply 10 m (35.0 ft) 20 m (70.0 ft)	844 128 844 138		844 128 (2x) 844 138 (2x)	- -	- -	- -	
Connecting cable compressor – pump, 4.5 m (15.75 ft)	E 400000323		E 400000323 (2x)	-	-	-	
Electric extension cable EL 4.5	893 74		893 74 (2x)	-	-	-	
Compressors and Flexlines							
Compressor							
CP 2000	840000V2000	-	-	-	-	-	-
CP 2000 A	840000V2010	-	-	-	-	-	-
CP 2200	-	840000V2200	-	-	-	-	-
CP 2200 A	-	840000V2210	-	-	-	-	-
CP 6000 HD	-	-	840000V6004	-	-	-	-
CP 6000 H	-	-	-	840000V6001	-	840000V6001	-
CP 6200 H	-	-	-	-	840000V6201	-	840000V6201
Accessories							
Water cooling discharge throttle	-	-	E 840000133	-	-	-	-
Power supply cable for compressor	1)		1)	1)	1)	1)	
Set of flexlines FL 4.5 (1/2", 1/2") or FL 9.0 (1/2", 1/2")	892 87 892 88		892 87 (2x) 892 88 (2x)	892 87 (2x) 892 88 (2x)	892 87 (2x) 892 88 (2x)	892 87 (3x) 892 88 (3x)	
Gas manifold (1 piece each) GD 2 GD 4	- -		840 253 (2x) -	840 253 (2x) -	840 253 (2x) -	- 840 254 (2x)	

The arrangement of the components is shown in the chapter "Accessories" under the heading "COOLVAC ClassicLine, System Components"

¹⁾ See Ordering Information for the compressor units COOLPAK

Ordering Information

COOLVAC 1.500 CL

	Single Operation		Dual operation			Multiple Operation	
	Europe	USA/Japan	Europe	Europe	USA/Japan	Europe	USA/Japan
	Part No.		Part No.			Part No.	
COOLVAC 1.500 CL							
DN 200 CF	844200V0002		844200V0002 (2x)			844200V0002 (3x)	
DN 6" ANSI	844200V0004		844200V0004 (2x)			844200V0004 (3x)	
DN 200 ISO-K	844200V0006		844200V0006 (2x)			844200V0006 (3x)	
Electronics and Cables							
System controller SC	844 230	844 230	844 230	844 230	844 230	844 230	
Power supply PS (50/60 Hz)							
230 V, 1-ph. (switchable to 115 V)	844 135	844 135	-	-	-	-	
200 V, 3-ph. (switchable to 400 V)	-	-	844 235	844 235	844 235	844 235	
Network communication cable – System controller to the pump(s)							
10 m (35.0 ft)	844 261	844 261	844 261	844 261	844 261	844 261	
20 m (70.0 ft)	844 262	844 262	844 262	844 262	844 262	844 262	
Network PM cable for the link between the pumps							
3 m (10.5 ft)	-	844 256	844 256	844 256	844 256	844 256 (2x)	
10 m (35.0 ft)	-	844 258	844 258	844 258	844 258	844 258 (2x)	
Power supply cable from power supply to pump							
10 m (35.0 ft)	-	-	844 251 (2x)	844 251 (2x)	844 251 (2x)	844 251 (3x)	
20 m (70.0 ft)	-	-	844 252 (2x)	844 252 (2x)	844 252 (2x)	844 252 (3x)	
Remote control cable CP, 1 m (3.5 ft)	-	-	844 265	844 265	844 265	844 265	
Cable compressor – Power supply							
10 m (35.0 ft)	844 129	844 129	-	-	-	-	
20 m (70.0 ft)	844 139	844 139	-	-	-	-	
Cable system controller – Power supply							
1 m (3.5 ft)	844 141	844 141	-	-	-	-	
Cable pump module PM – Power supply							
10 m (35.0 ft)	844 128	844 128 (2x)	-	-	-	-	
20 m (70.0 ft)	844 138	844 138 (2x)	-	-	-	-	
Connecting cable compressor – pump, 4.5 m (15.75 ft)	E 400000323	E 400000323					
		(2x)	-	-	-	-	
Electric extension cable EL 4.5	893 74	893 74 (2x)	-	-	-	-	
Compressors and Flexlines							
Compressor							
CP 2000	840000V2000	-	-	-	-	-	-
CP 2000 A	840000V2010	-	-	-	-	-	-
CP 2200	-	840000V2200	-	-	-	-	-
CP 2200 A	-	840000V2210	-	-	-	-	-
CP 6000 HD	-	-	840000V6004	-	-	-	-
CP 6000 H	-	-	-	840000V6001	-	840000V6001	-
CP 6200 H	-	-	-	-	840000V6201	-	840000V6201
Accessories							
Water cooling discharge throttle	-	-	E 840000133	-	-	-	-
Power supply cable for compressor	1)	1)	1)	1)	1)	1)	
Set of FLEXLINES							
FL 4.5 (1/2", 1/2")	892 87	892 87 (2x)	892 87 (2x)	892 87 (2x)	892 87 (2x)	892 87 (3x)	
or FL 9.0 (1/2", 1/2")	892 88	892 88 (2x)	892 88 (2x)	892 88 (2x)	892 88 (2x)	892 88 (3x)	
Gas manifold (1 piece each)							
GD 2	-	840 253 (2x)	840 253 (2x)	840 253 (2x)	840 253 (2x)	-	
GD 4	-	-	-	-	-	840 254 (2x)	

The arrangement of the components is shown in the chapter "Accessories" under the heading "COOLVAC ClassicLine, System Components".

¹⁾ See Ordering Information for the compressor units COOLPAK

COOLVAC 2.000 CL




COOLVAC 2.000 CL

Advantages to the User

- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High crossover value
- Simple operation
- Trouble-free integration into complex systems
- Fully automatic regeneration through Cryo Compact Control
- Easy servicing

Typical Applications

- Evaporators
- Sputtering systems
- Ion implanters
- Optical coating systems
- Metallization systems

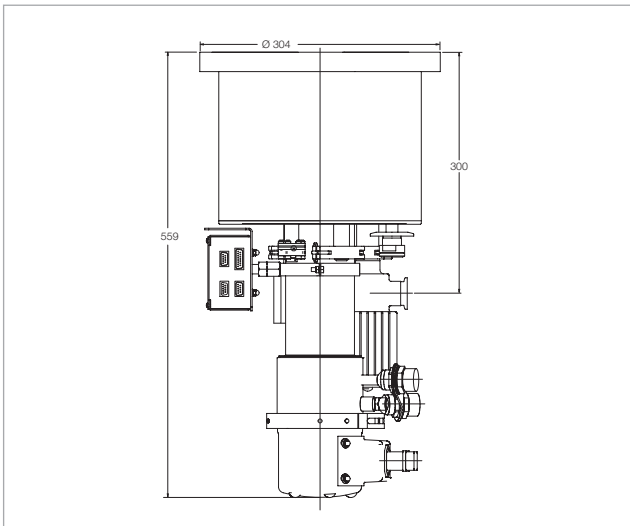

Dimensional drawing for the COOLVAC 2.000 CL (DN 250 CF)

COOLVAC 3.000 CL




COOLVAC 3.000 CL

Advantages to the User

- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High crossover value
- Simple operation
- Trouble-free integration into complex systems
- Fully automatic regeneration through Cryo Compact Control
- Easy servicing

Typical Applications

- Evaporators
- Sputtering systems
- Ion implanters
- Optical coating systems
- Metallization systems

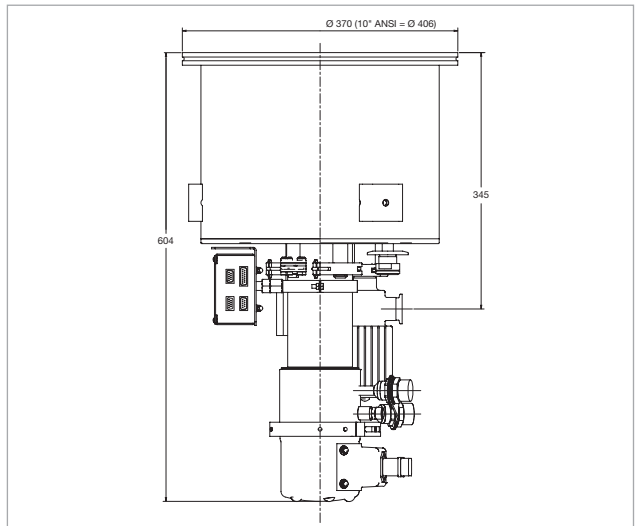

Dimensional drawing for the COOLVAC 3.000 CL (DN 320 ISO-K / 10" ANSI)

Technical Data

COOLVAC

2.000 CL

3.000 CL

		250 ISO-K / 250 CF / 8" ANSI	320 ISO-K / 10" ANSI
High vacuum (HV) flange	DN	250 ISO-K / 250 CF / 8" ANSI	320 ISO-K / 10" ANSI
Fore vacuum flange	DN	25 KF	25 KF
Flange for connection a gauge head	DN	16 KF	16 KF
Flange for the electrical connection	DN	16 CF	16 CF
Safety valve with flange connection for gas exhaust line	DN	40 KF	40 KF
4-way current feedthrough for Si diode on a flange	DN	16 KF	16 KF
Heaters			
1st stage	W	160	160
	V AC	42	42
2nd stage	W	90	90
	V AC	42	42
Temperature sensor			
1st stage		Pt100	Pt100
2nd stage		Si diode	Si diode
Built-in cold head	COOLPOWER	7/25	7/25
Weight	kg (lbs)	25 (55.2)	35 (77.3)
Cooldown time to $T_2 = 20$ K	min	70	80
Crossover value	mbar x l (Torr x l)	250 (187)	500 (375)
Pumping speed			
H ₂ O	l x s ⁻¹	7000	10500
Ar / N ₂	l x s ⁻¹	1600 / 2100	2500 / 3000
H ₂	l x s ⁻¹	3200	6000
Capacity			
Ar / N ₂	bar x l	1600 / 1600	2500 / 2500
H ₂ at 10 ⁻⁶ mbar	bar x l	15	28
Max. throughput			
Ar / N ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	12 (9) / 12 (9)	15 (11.2) / 15 (11.2)
H ₂ O	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	6 (4.5)	10 (7.5)
Helium connections (Self-sealing couplings: outside thread, type 5400-S2-8)	DN	1/2"	1/2"

Ordering Information

COOLVAC 2.000 CL

	Single Operation		Dual operation			Multiple Operation		
	Europe	USA/Japan	Europe	Europe	USA/Japan	Europe	USA/Japan	
	Part No.		Part No.			Part No.		
COOLVAC 2.000 CL								
DN 250 CF	844250V0002		844250V0002 (2x)			844250V0002 (3x)		
DN 8" ANSI	844250V0004		844250V0004 (2x)			844250V0004 (3x)		
DN 250 ISO-K	844250V0006		844250V0006 (2x)			844250V0006 (3x)		
Electronics and Cables								
System controller SC	844 230		844 230	844 230	844 230	844 230		
Power supply PS (50/60 Hz)								
230 V, 1-ph. (switchable to 115 V)	844 135		844 135	-	-	-		
200 V, 3-ph. (switchable to 400 V)	-		-	844 235	844 235	844 235		
Network communication cable – System controller to the pump(s)								
10 m (35.0 ft)	844 261		844 261	844 261	844 261	844 261		
20 m (70.0 ft)	844 262		844 262	844 262	844 262	844 262		
Network PM cable for the link between the pumps								
3 m (10.5 ft)	-		844 256	844 256	844 256	844 256 (2x)		
10 m (35.0 ft)	-		844 258	844 258	844 258	844 258 (2x)		
Power supply cable from power supply to pump								
10 m (35.0 ft)	-		-	844 251 (2x)	844 251 (2x)	844 251 (3x)		
20 m (70.0 ft)	-		-	844 252 (2x)	844 252 (2x)	844 252 (3x)		
Remote control cable CP, 1 m (3.5 ft)	-		-	844 265	844 265	844 265		
Cable compressor – Power supply								
10 m (35.0 ft)	844 129		844 129	-	-	-		
20 m (70.0 ft)	844 139		844 139	-	-	-		
Cable System Controller – Power Supply 1 m (3.5 ft)	844 141		844 141	-	-	-		
Cable pump module PM – Power supply								
10 m (35.0 ft)	844 128		844 128 (2x)	-	-	-		
20 m (70.0 ft)	844 138		844 138 (2x)	-	-	-		
Connecting cable compressor – pump, 4.5 m (15.75 ft)	E 400000323		E 400000323 (2x)	-	-	-		
Electric extension cable EL 4.5	893 74		893 74 (2x)	-	-	-		
Compressors and Flexlines								
Compressor								
CP 2000	840000V2000	-	-	-	-	-	-	
CP 2000 A	840000V2010	-	-	-	-	-	-	
CP 2200	-	840000V2200	-	-	-	-	-	
CP 2200 A	-	840000V2210	-	-	-	-	-	
CP 6000 HD	-	-	840000V6004	-	-	-	-	
CP 6000 H	-	-	-	840000V6001	-	840000V6001	-	
CP 6200 H	-	-	-	-	840000V6201	-	840000V6201	
Accessories								
Water cooling discharge throttle	-	-	E 840000133	-	-	-	-	
Power supply cable for compressor	1)		1)		1)		1)	
Set of flexlines								
FL 4.5 (1/2", 1/2")	892 87		892 87 (2x)	892 87 (2x)	892 87 (2x)	892 87 (3x)		
or FL 9.0 (1/2", 1/2")	892 88		892 88 (2x)	892 88 (2x)	892 88 (2x)	892 88 (3x)		
Gas manifold (1 piece each)								
GD 2	-		840 253 (2x)	840 253 (2x)	840 253 (2x)	-		
GD 4	-		-	-	-	840 254 (2x)		

The arrangement of the components is shown in the chapter "Accessories" under the heading "COOLVAC ClassicLine, System Components".

¹⁾ See Ordering Information for the compressor units COOLPAK

Ordering Information

COOLVAC 3.000 CL

	Single operation		Dual operation		
	Europe	USA/Japan	Europe	Europe	USA/Japan
	Part No.		Part No.		
COOLVAC 3.000 CL DN 10" ANSI DN 320 ISO-K	844320V0004 844320V0006		844320V0004 (2x) 844320V0006 (2x)		
Electronics and Cables					
System controller SC	844 230	844 230	844 230	844 230	844 230
Power supply PS (50/60 Hz) 230 V, 1-ph. (switchable to 115 V) 200 V, 3-ph. (switchable to 400 V)	844 135 -	844 135 -	844 135 -	- 844 235	- 844 235
Network communication cable – System controller to the pump(s) 10 m (35.0 ft) 20 m (70.0 ft)	844 261 844 262	844 261 844 262	844 261 844 262	844 261 844 262	844 261 844 262
Network PM cable for the link between the pumps 3 m (10.5 ft) 10 m (35.0 ft)	- -	- -	844 256 844 258	844 256 844 258	844 256 844 258
Power supply cable from power supply to pump 10 m (35.0 ft) 20 m (70.0 ft)	- -	- -	- -	844 251 (2x) 844 252 (2x)	844 251 (2x) 844 252 (2x)
Remote control cable CP, 1 m (3.5 ft)	-	-	-	844 265	844 265
Cable compressor – Power supply 10 m (35.0 ft) 20 m (70.0 ft)	844 129 844 139	844 129 844 139	844 129 844 139	- -	- -
Cable system controller – Power supply 1 m (3.5 ft)	844 141	844 141	844 141	-	-
Cable pump module PM – Power supply 10 m (35.0 ft) 20 m (70.0 ft)	844 128 844 138	844 128 844 138	844 128 (2x) 844 138 (2x)	- -	- -
Connecting cable compressor – pump, 4.5 m (15.75 ft)	E 400000323	E 400000323	E 400000323 (2x)	-	-
Electric extension cable EL 4.5	893 74	893 74	893 74 (2x)	-	-
Compressors and Flexlines					
Compressor					
CP 2000	840000V2000	-	-	-	-
CP 2000 A	840000V2010	-	-	-	-
CP 2200	-	840000V2200	-	-	-
CP 2200 A	-	840000V2210	-	-	-
CP 6000 HD	-	-	840000V6004	-	-
CP 6000 H	-	-	-	840000V6001	-
CP 6200 H	-	-	-	-	840000V6201
Accessories					
Water cooling discharge throttle	-	-	E 840000133	-	-
Power supply cable for compressor	1)		1)	1)	1)
Set of flexlines FL 4.5 (1/2", 1/2") or FL 9.0 (1/2", 1/2")	892 87 892 88	892 87 892 88	892 87 (2x) 892 88 (2x)	892 87 (2x) 892 88 (2x)	892 87 (2x) 892 88 (2x)
Gas manifold (1 piece each) GD 2	-	-	840 253 (2x)	840 253 (2x)	840 253 (2x)

The arrangement of the components is shown in the chapter "Accessories" under the heading "COOLVAC ClassicLine, System Components".

¹⁾ See Ordering Information for the compressor units COOLPAK

COOLVAC 5.000 CL




COOLVAC 5.000 CL

Advantages to the User

- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High crossover value
- Simple operation
- Trouble-free integration into complex systems
- Fully automatic regeneration through Cryo Compact Control
- Easy servicing

Typical Applications

- Evaporators
- Ion implanters
- Electron beam welding systems
- Optical coating systems
- Metallization systems

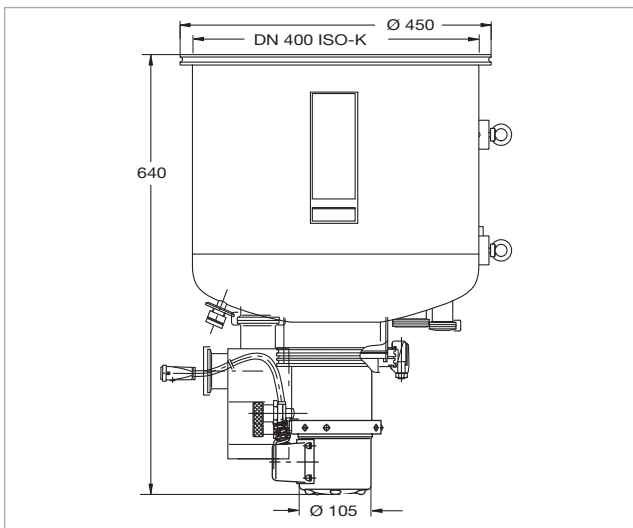

Dimensional drawing for the COOLVAC 5.000 CL

COOLVAC 10.000 CL




COOLVAC 10.000 CL

Advantages to the User

- Hydrocarbon-free high vacuum
- High capacity for argon and hydrogen
- High crossover value
- Simple operation
- Trouble-free integration into complex systems
- Fully automatic regeneration through Cryo Compact Control
- Easy servicing

Typical Applications

- Evaporators
- Space simulation chambers
- Electron beam welding systems
- Optical coating systems
- Metallization systems

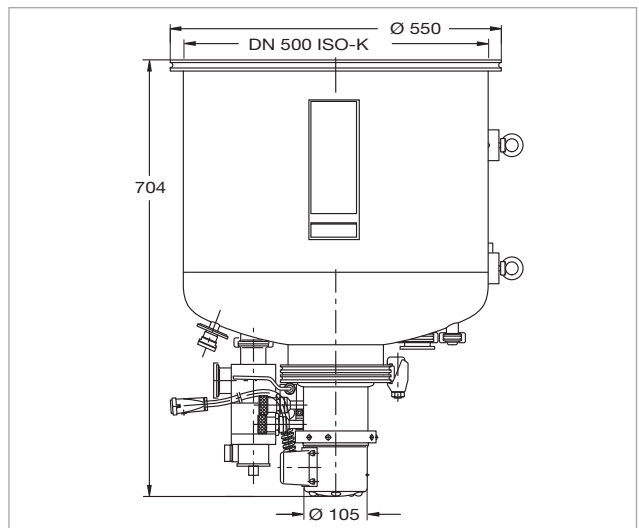

Dimensional drawing for the COOLVAC 10.000 CL

Technical Data

COOLVAC

5.000 CL

10.000 CL

High vacuum (HV) flange	DN	400 ISO-K	500 ISO-K
Fore vacuum flange	DN	40 KF	40 KF
Flange for connection of a gauge head	DN	16 KF	16 KF
Flange for the electrical connection	DN	40 KF	40 KF
Safety valve with flange connection for gas exhaust line	DN	40 KF	40 KF
4-way current feedthrough for Si diode on a flange	DN	16 KF	16 KF
Heaters			
1st stage	W	160	160
	V AC	42	42
2nd stage	W	90	90
	V AC	42	42
Temperature sensor			
1st stage		Pt100	Pt100
2nd stage		Si diode	Si diode
Built-in cold head	COOLPOWER	5/100	5/100
Weight	kg (lbs)	42 (92.7)	50 (110.4)
Cooldown time to $T_2 = 20$ K	min	100	150
Crossover value	mbar x l (Torr x l)	700 (525)	800 (600)
Pumping speed			
H ₂ O	l x s ⁻¹	18000	30000
Ar / N ₂	l x s ⁻¹	4000 / 5200	8400 / 10000
H ₂	l x s ⁻¹	6200	12000
Capacity			
Ar / N ₂	bar x l	3000 / 3000	5500 / 5500
H ₂ at 10 ⁻⁶ mbar	bar x l	32	45
Max. throughput			
Ar / N ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	10 (7.5) / 10 (7.5)	10 (7.5) / 10 (7.5)
H ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	7 (5.3)	7 (5.3)
Helium connection (Self-sealing couplings: outside thread, types 5400-S2-8)	DN	1/2"	1/2"

Ordering Information

	COOLVAC 5.000 CL		COOLVAC 10.000 CL	
	Europe	USA/Japan	Europe	USA/Japan
	Part No.	Part No.	Part No.	Part No.
COOLVAC				
5.000 CL, DN 400 ISO-K	844 410	844 410	-	-
10.000 CL, DN 500 ISO-K	-	-	844610V0006	844610V0006
Electronics and Cables				
System controller SC	Part No. 844 230	Part No. 844 230	Part No. 844 230	Part No. 844 230
Power supply PS 230 V, 1-ph.	844 135	844 135	844 135	844 135
Network communication cable – System controller to the pump(s)				
10 m (35.0 ft)	844 261	844 261	844 261	844 261
20 m (70.0 ft)	844 262	844 262	844 262	844 262
Cable compressor – Power supply PS				
10 m (35.0 ft)	844 129	844 129	844 129	844 129
20 m (70.0 ft)	844 139	844 139	844 139	844 139
Cable system controller – Power supply 1 m (3.5 ft)	844 141	844 141	844 141	844 141
Cable pump module PM – Power supply				
10 m (35.0 ft)	844 128	844 128	844 128	844 128
20 m (70.0 ft)	844 138	P844 138	844 138	844 138
Compressors and Flexlines				
Compressor				
CP 6000 H	840000V6001	-	840000V6001	-
CP 6200 H	-	840000V6201	-	840000V6201
Power supply cable for compressor	see Ordering Information for the Compressor Units COOLPAK	see Ordering Information for the Compressor Units COOLPAK	see Ordering Information for the Compressor Units COOLPAK	see Ordering Information for the Compressor Units COOLPAK
Set of flexlines				
FL 4.5 (1/2", 1/2")	892 87	892 87	892 87	892 87
or FL 9.0 (1/2", 1/2")	892 88	892 88	892 88	892 88
and EL 4.5 (electric extension cable)	893 74	893 74	893 74	893 74

The arrangement of the components is shown in the chapter "Accessories" under the heading "COOLVAC ClassicLine, System Components"

COOLVAC 18.000 CL




COOLVAC 18.000 CL with special flanges

Advantages to the User

- Hydrocarbon-free high vacuum
- High pumping speed for water vapor and nitrogen
- Fast, safe and efficient regeneration with the electric regeneration system
- Simple operation

Typical Applications

- Space simulation chambers
- Evaporators
- Electron beam welding systems
- Optical coating systems
- Metallization systems

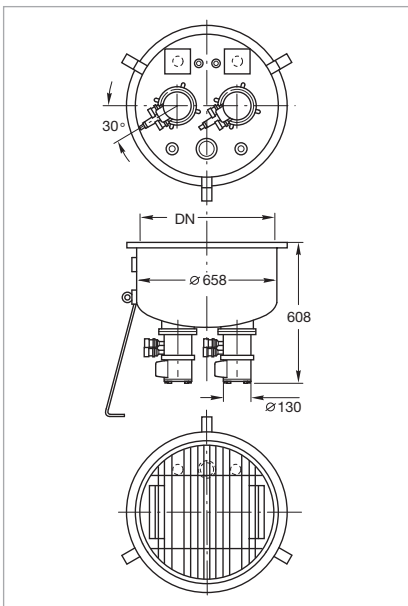

Dimensional drawing for the COOLVAC 18.000 CL

COOLVAC 30.000




COOLVAC 30.000 with special flanges

Advantages to the User

- Hydrocarbon-free high vacuum
- High pumping speed for water vapor and nitrogen
- Fast, safe and efficient regeneration with the electric regeneration system
- Simple operation

Typical Applications

- Space simulation chambers
- Evaporators
- Electron beam welding systems
- Optical coating systems
- Metallization systems

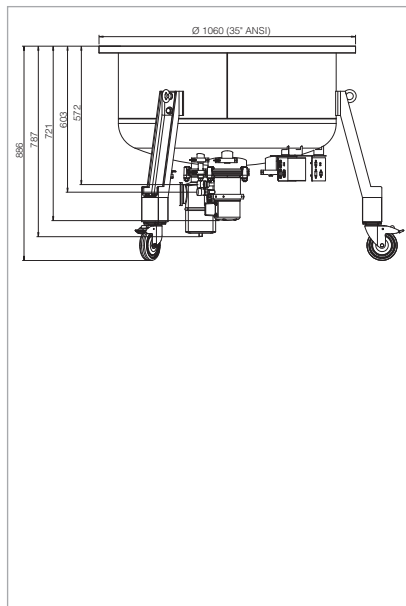

Dimensional drawing for the COOLVAC 30.000

COOLVAC 60.000

COOLVAC 60.000 LN₂ cooled upon request




COOLVAC 60.000 with special flanges

Advantages to the User

- Hydrocarbon-free high vacuum
- High pumping speed for water vapor and nitrogen
- Fast, safe and efficient regeneration with the electric regeneration system
- Simple operation

Typical Applications

- Space simulation chambers
- Evaporators
- Electron beam welding systems
- Optical coating systems
- Metallization systems

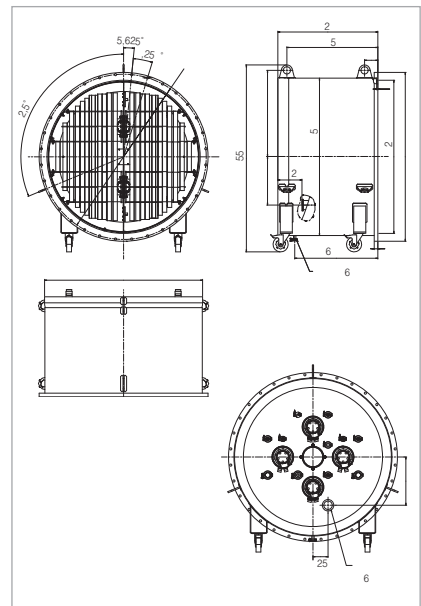

Dimensional drawing for the COOLVAC 60.000

Technical Data

COOLVAC 18.000 CL

COOLVAC 30.000

COOLVAC 60.000

High vacuum flange	DN	630 ISO-F	35" ANSI	1250 ISO-F
Fore vacuum flange	DN	63 ISO-K	63 ISO-K	63 ISO-K
Flange with current feedthrough for silicon diode	DN	25 KF (2x)	16 KF (2x)	16 KF (2x)
Flange for other purposes	DN	40 KF	40 KF	40 KF
Safety valve with DN 40 KF flange connection for gas exhaust line (opening pressure)	DN mbar	40 KF 1100	40 KF 1100	40 KF 1100
Pumping speed				
H ₂ O	l x s ⁻¹	46000	93000	180000
Ar / N ₂	l x s ⁻¹	13500 / 18000	25000 / 30000	47000 / 57000
H ₂ / He	l x s ⁻¹	14000 / 4000	30000 / 7000	60000 / 15000
Capacity				
Ar / N ₂	bar x l	5000 / 5000	6500 / 6500	9000 / 9000
H ₂ at 10 ⁻⁶ mbar	bar x l	65	100	150
H ₂ O	bar x l	945		
Built-in cold head	COOLPOWER	5/100 (2x)	5/100 (2x) and 140T (1x)	5/100 (2x) and 140T (2x)
Max. throughput				
Ar / N ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	14 / 14	14 / 14	25 / 25
H ₂	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	7	7	12
Crossover value at 20 K	mbar x l (Torr x l)	850	1200	1000
Cool down time to 20 K	min	180	260	330
Overall height	min	606	see drawing	see drawing
Weight	kg (lbs)	65	245	450
Silicon diode for temperature measurements at the second stage of the cold head		built-in (2x)	built-in (2x)	built-in (2x)
Regeneration heaters at the first and second stage of the cold head		built-in (2x)	-	-

Ordering Information

COOLVAC 18.000 CL

COOLVAC 30.000

COOLVAC 60.000


	Part No.	Part No.	Part No.
Cryopump			
COOLVAC 18.000 CL, 630 ISO-F	844630V0006	-	-
COOLVAC 30.000, 35" ANSI	-	upon request	-
COOLVAC 60.000, 1250 ISO-F	-	-	upon request
Compressor unit			
COOLPAK 6000 H	upon request (2x)	upon request (3x)	upon request (4x)
COOLPAK 6200 H	upon request (2x)	upon request (3x)	upon request (4x)
Power supply cable	see Ordering Information for the compressor units COOLPAK		
Set of flexlines			
FL 4.5 (1/2", 1/2") or FL 9.0 (1/2", 1/2") and EL 4.5 (electric extension cable)	Part No. 892 87 (2x) Part No. 892 88 (2x) Part No. 893 74 (2x)	Part No. 892 87 (3x) Part No. 892 88 (3x) Part No. 893 74 (3x)	Part No. 892 87 (4x) Part No. 892 88 (4x) Part No. 893 74 (4x)
Compact controller and cable kit	upon request	upon request	upon request

Products Cryogenics

Cold Heads, Pneumatically Driven Single-Stage Cold Heads COOLPOWER 50 and 140 T



Single-stage cold head's COOLPOWER 50 (left) and 140 T (right)

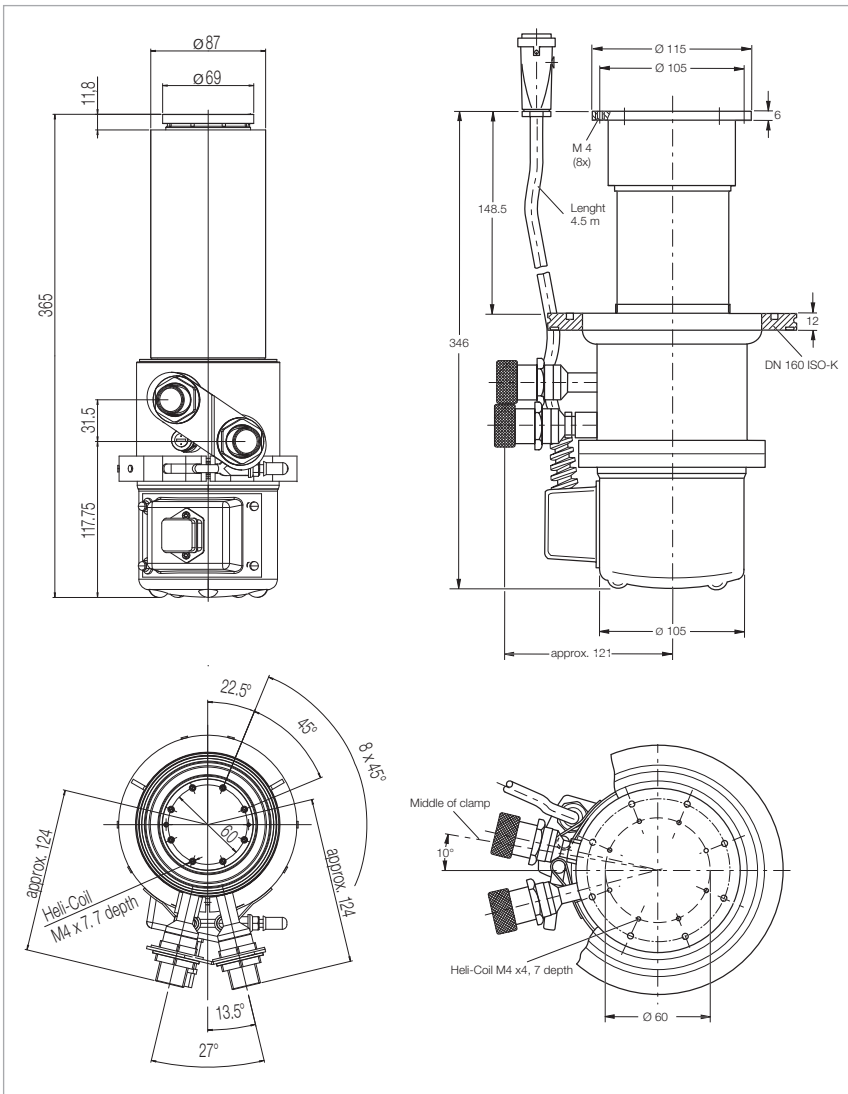

Dimensional drawing for the COOLPOWER 50 (left) and COOLPOWER 140 T (right)

Advantages to the User

- For installation mostly in any orientation
- High refrigerating capacity
- No liquid refrigerants are required
- Very simple to operate
- Short cooldown time

Typical Applications

- Cooling of cryopanel in cryo pumps and thus generation of high vacuum and ultra-high vacuum pressures
- Calibration of sensors
- Cooling of samples and detectors; especially for cooling of
 - samples for spectroscopic investigations in solid state and surface physics
 - high temperature superconductor and semiconductor conditions
 - infrared and gamma detectors

Technical Data
COOLPOWER 50
COOLPOWER 140 T

Refrigeration capacity at 50/60 Hz ¹⁾			
at 80 K, approx.	W	50	140
at 20 K, approx.	W	-	20
Lowest attainable temperature ¹⁾	K	≤ 26	≤ 15
Cooldown time down to 20 K	min	-	≤ 55
to 20 K, approx.	min	20	-
Permissible ambient temperature	°C (°F)	+10 to +40 (+50 to +104)	+10 to +40 (+50 to +104)
He filling pressure at room temperature	bar	16	16
He connections			
Self-sealing screwed connections			
High pressure connection		1/2" ²⁾	1/2" ³⁾
Low pressure connection		1/2" ²⁾	1/2" ³⁾
Weight	kg (lbs)	8 (17.7)	12 (26.5)
Length of the electrical connection line to the compressor unit	m (ft)	-	4.5 (15.75)

Ordering Information
COOLPOWER 50
COOLPOWER 140 T

	Part No.	Part No.
Cold head		
with DN 100 CF-R	842050V0001	-
with DN 160 ISO-K	-	842 030
with weld-on pipe	842050V0000	-
other flanges	upon request	upon request
Accessories		
Connecting cable compressor – cold head, 4.5 m (15.75 ft)	E 400000323	included with the cold head
Compressor unit (for operation of one cold head)		
COOLPAK 2000	840000V2000	-
COOLPAK 2000 A	840000V2010	-
COOLPAK 2200	840000V2200	-
COOLPAK 2200 A	840000V2210	-
COOLPAK 6000 H	-	840000V6001
400 V/50 Hz; 470 V/60 Hz	-	840000V6201
COOLPAK 6200 H	-	
200 V/50 Hz; 200 V, 230 V/60 Hz	-	
Power supply cable	see Ordering Information for the compressor units COOLPAK	see Ordering Information for the compressor units COOLPAK
Set of flexlines		
FL 4.5 (1/2", 1/2")	892 87	892 87
or FL 9.0 (1/2", 1/2")	892 88	892 88
and EL 4.5 (electric extension cable)	893 74	893 74
Options		
Temperature measurement		
Silicon diode	890 89	890 89
Low temperature measuring instrument	upon request	upon request
Measuring cable	upon request	upon request

¹⁾ The refrigerating capacities and temperatures stated apply only to vertical operation with the cold end at the bottom

²⁾ Series 5400 from Aeroquip or compatible types

³⁾ Series 8 from Aeroquip

Dual-Stage Cold Heads

COOLPOWER 7/25, 5/100 and 5/100 T



Dual-stage cold head COOLPOWER 7/25



Dual-stage cold heads COOLPOWER 5/100 and COOLPOWER 5/100 T


Advantages to the User

- For installation in any orientation
- High refrigerating capacity
- No liquid refrigerants are required
- Very simple to operate
- Short cooldown time


Typical Applications

- Cooling of cryopanel in cryo pumps and thus generation of high vacuum and ultra-high vacuum pressures
- Cooling of samples and detectors; especially for cooling of
 - samples for spectroscopic investigations in solid state and surface physics

- high temperature superconductors
- superconductors and semi conductors
- infrared and gamma detectors
- Calibration of sensors
- Cooling of accelerator components in the area of high energy physics
- Cooling of superconducting magnets; in nuclear magnetic resonance tomographs, for example (only COOLPOWER 5/100 and 5/100 T)

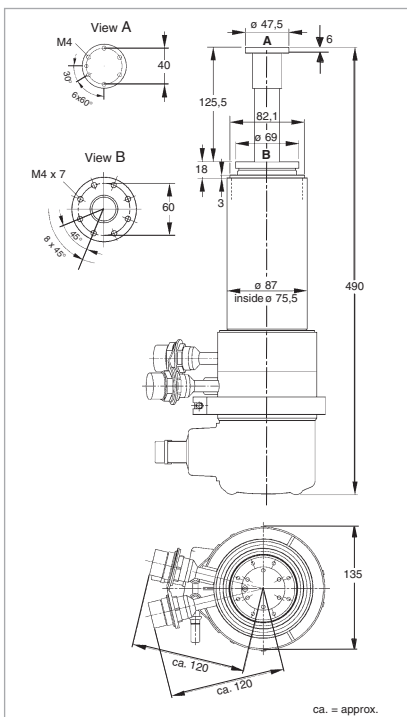

Dimensional drawing for the COOLPOWER 7/25

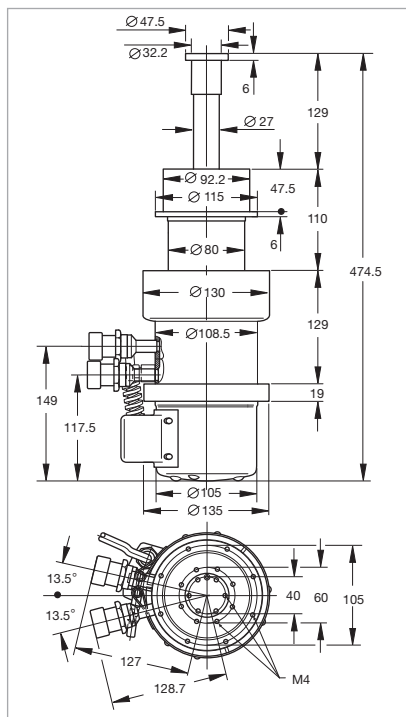

Dimensional drawing for the COOLPOWER 5/100 and COOLPOWER 5/100 T

Technical Data

		COOLPOWER		
		7/25	5/100	5/100 T
Refrigeration capacity at 50/60 Hz ¹⁾				
1st stage at 80 K, approx.	W	25	100	100
2st stage at 20 K, approx.	W	7	5	7.5
2st stage at 10 K, approx.	W	-	-	3.5
2st stage at 40 K, approx.	W	-	-	35
Lowest attainable temperature ¹⁾				
1st stage, approx.	K	≤ 35	≤ 35	≤ 35
2nd stage, approx.	K	≤ 10	≤ 10	6
Cooldown time of the				
2nd stage to 20 K, approx.	min	20	20	20
1st stage to 80 K, approx.	min	20	20	20
2nd stage to 10 K, approx.	min	-	-	35
1st stage to 40 K, approx.	min	-	-	30
2nd stage to 6 K, approx.	min	-	-	45
1st stage to 30 K, approx.	min	-	-	40
Permissible ambient temperature	°C (°F)	+5 to +40 (+41 to +104)	+5 to +40 (+41 to +104)	+5 to +40 (+41 to +104)
He filling pressure at room temperature	bar	16	16	16
He connections				
Self-sealing screwed connections				
High pressure connection		1/2" (#8 ²⁾)	1/2" (#8 ²⁾)	1/2" (#8 ²⁾)
Low pressure connection		1/2" (#8)	1/2" (#8)	1/2" (#8)
Weight	kg (lbs)	11 (24.3)	11 (24.3)	11 (24.3)
Length of the electrical connection line to the compressor unit (included with cold head)	m (ft)	4.5 (15.75)	4.5 (15.75)	4.5 (15.75)

Ordering Information

		COOLPOWER		
		7/25	5/100	5/100 T
		Part No.	Part No.	Part No.
Cold head				
COOLPOWER 7/25		842 040	-	-
COOLPOWER 5/100 with weld-on pipe		-	893 05	-
COOLPOWER 5/100 T		-	-	129 78
Accessories				
Connecting cable compressor – cold head, 4.5 m (15.75 ft)		E 400000323	included with the cold head	included with the cold head
Compressor unit (for operation of one cold head)				
COOLPAK 2000		840000V2000	-	-
COOLPAK 2000 A		840000V2010	-	-
COOLPAK 2200		840000V2200	-	-
COOLPAK 2200 A		840000V2210	-	-
COOLPAK 6000 H		-	840000V6001	840000V6001
COOLPAK 6200 H		-	840000V6201	840000V6201
Power supply cable		³⁾	³⁾	³⁾
Set of flexlines				
FL 4.5 (1/2", 1/2")		892 87	892 87	892 87
or FL 9.0 (1/2", 1/2")		892 88	892 88	892 88
and EL 4.5 (electric extension cable)		893 74	893 74	893 74
Options				
Temperature measurement / control				
Silicon diode		890 89	890 89	890 89
Low temperature measuring instrument		upon request	upon request	upon request
Measuring cable		upon request	upon request	upon request
Electrical heaters		upon request	upon request	upon request
Low temperature controller MODEL 9700		842 400	842 400	842 400
Measuring cable, 3 m (10.5 ft) long		842 401	842 401	842 401

¹⁾ The refrigerating capacities and temperatures stated apply to vertical operation with the cold end at the bottom

²⁾ Series 8 from Aeroquip

³⁾ See Ordering Information for the compressor units COOLPAK

Cold Heads, Mechanically Driven

Dual-Stage Cold Head COOLPOWER 10 MD



Dual-stage Cold Head COOLPOWER 10 MD

COOLPOWER 10 MD - the strongest 10 K GM cooler available on the market:

- High 2nd stage cooling capacity of > 18 W at 20 K
- High 1st stage cooling capacity of > 25 W at 40 K and 110 W at 80 K


Advantages to the User

- Excellent cooling performance
- 18 W at 20 K by press-button operation
- High reliability
- Design optimized for MTBF 100,000 h
- Long and maintenance-free operation
- Low vibration due to directly driven displacer
- No liquid refrigerants are required
- Very simple to operate
- Short cooldown time
- Easy operation
 - Plug & Cool - as usual for all Oerlikon Leybold Vacuum GM coolers
 - Simple variation of motor speed via the COOLPAK MD compressor unit

Typical Applications

The COOLPOWER 10 MD is a mechanically driven double-stage Gifford McMahon (GM) cryo cooler and ideally suited for

- Cooling of cryo probes in NMR spectrometers
- Shield cooling of superconducting magnets in MRI
- Cooling of cryopanel in special Cryo pumps and thus generation of high vacuum and ultra-high vacuum pressures
- Cooling of larger samples and devices; especially
 - High temperature superconductor coils, wires and bulk materials
 - Recondensation of liquid refrigerants such as H₂, Ne
 - Samples for spectroscopic investigations in solid state and surface physics
 - Infrared and gamma detectors
- Calibration of sensors

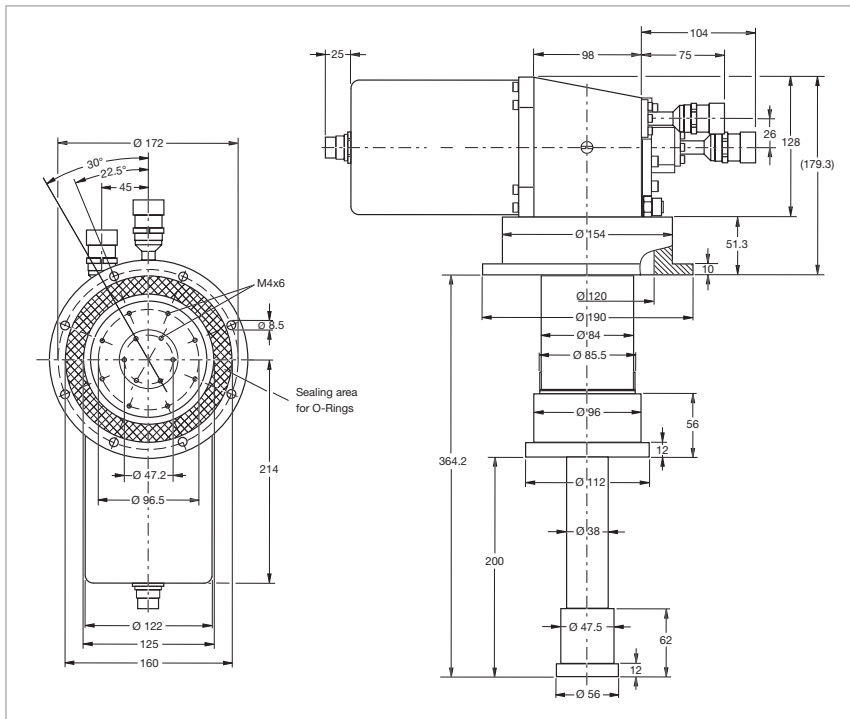

Dimensional drawing for the COOLPOWER 10 MD

Technical Data

COOLPOWER 10 MD

Refrigeration capacity at 50/60 Hz ¹⁾		
1st stage at 80 K, approx.	W	110
2nd stage at 20 K, approx.	W	18
Lowest attainable temperature ¹⁾		
1st stage, approx.	K	≤ 28
2nd stage, approx.	K	≤ 8
Cooldown time of the 2nd stage to 20 K, approx.	min	25
Permissible ambient temperature	°C (°F)	+5 to +40 (+41 to +104)
He filling pressure at room temperature	bar	16
He connections		
Self-sealing screwed connections		
High pressure connection		1/2" (#8 ²⁾)
Low pressure connection		1/2" (#8)
Weight	kg (lbs)	20 (44.15)

Ordering Information

COOLPOWER 10 MD

	Part No.
Cold head COOLPOWER 10 MD	842 010
Accessories	see Ordering Information for the compressor unit COOLPAK 6000 HMD/6200 HMD, connecting cable and flexline

¹⁾ The refrigerating capacities and temperatures stated apply to vertical operation with the cold end at the bottom

²⁾ Series 8 from Aeroquip


Compressor Units for Pneumatically Driven Cold Heads and Pumps, Air Cooling COOLPAK 2000 A/2200 A



Compressor unit COOLPAK 2000 A (2200 A is similar)

Advantages to the User

- High efficiency and increased performance for cryogenic pumps and refrigerators
- High long-term reliability due to long-life and highly efficient components and improved oil management
- Very quiet and low vibration operation through the innovative horizontally suspended scroll compressor
- Simple installation and operation
- Global mains voltage compatibility
- Perfect integration within complex systems due to the 24 V Sub-D interface
- Simple adsorber replacement, otherwise maintenance-free
- Small footprint
- Low cost of ownership

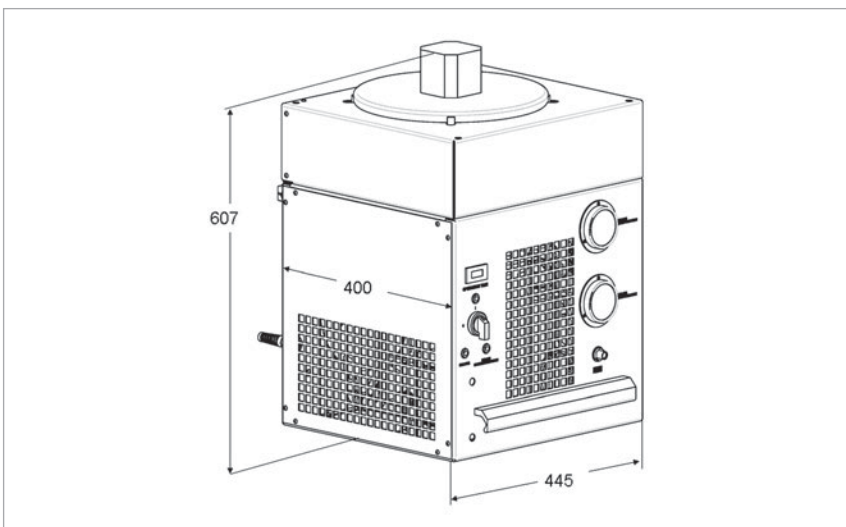

Dimensional drawing of the COOLPAK 2000 A/2200 A

Technical Data
COOLPAK
2000 A (50 Hz)
2200 A (60 Hz)

Number of electrical connections for cold heads		1	1
Helium system filling pressure at room temperature	bar	15	14
Ambient temperature	°C (°F)	+5 to +30 (+41 to +86)	+5 to +30 (+41 to +86)
Mains voltage (single phase)	V	230 ± 10%	208 ± 10%
Operating current			
with cooled down cold head	A	9.5 to 10.5	11.5 to 12.5
with warmed up cold head	A	12.0	13.0
Electric power consumption			
with cooled down cold head	kW	2.2	2.3
with warmed up cold head	kW	2.4	2.5
Remote control through interface		24 V DC	24 V DC
Helium connections			
self-sealing fittings			
high-pressure side (outside thread)		1/2"	1/2"
low-pressure side (outside thread)		1/2"	1/2"
Noise level (at a distance of 1 m (3.5 ft))	dB(A)	< 55	< 55
Dimensions (W x H x D)	mm (in.)	445 x 607 x 400 (17.52 x 23.90 x 15.74)	445 x 607 x 400 (17.52 x 23.90 x 15.74)
Weight	kg (lbs)	69 (152.32)	69 (152.32)

Ordering Information
COOLPAK
2000 A (50 Hz)
2200 A (60 Hz)

	Part No.	Part No.
Compressor unit	840000V2010	840000V2210
Accessories, optional		
19" installation kit	840 022	840 022
RC adapter box (for operating older cold heads of type RGD, RGS or COOLPOWER 20 / 210 / 30 / 510)	840 910	840 910
Spare parts		
Absorber CPS-V8	E 840001973	E 840001973


Compressor Units for Pneumatically Driven Cold Heads and Pumps, Water Cooling COOLPAK 2000/2200



Compressor unit COOLPAK 2000 (2200 is similar)

Advantages to the User

- High efficiency and increased performance for cryogenic pumps and refrigerators
- High long-term reliability due to long-life and highly efficient components and improved oil management
- Very quiet and low vibration operation through the innovative horizontally suspended scroll compressor
- Simple installation and operation
- Global mains voltage compatibility
- Perfect integration within complex systems due to the 24 V Sub-D interface
- Simple adsorber replacement, otherwise maintenance-free
- Small footprint
- Low cost of ownership

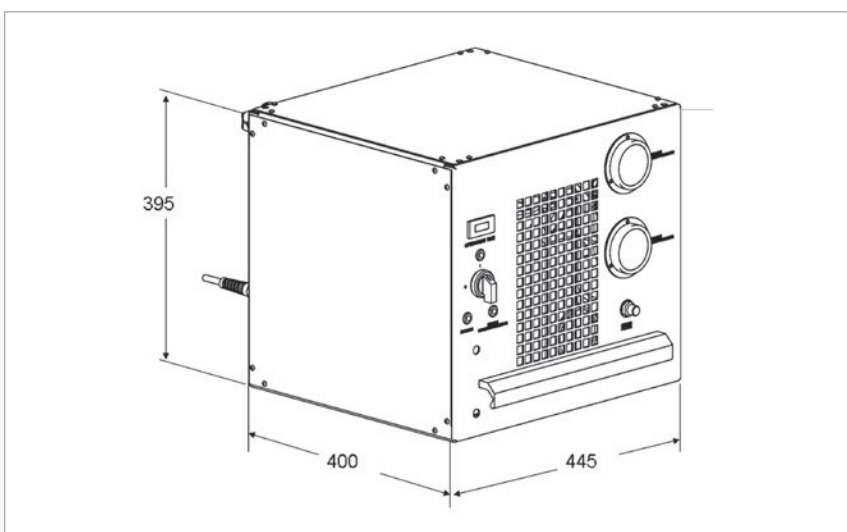

Dimensional drawing of the COOLPAK 2000/2200

Technical Data
COOLPAK

		2000 (50 Hz)	2200 (60 Hz)
Number of electrical connections for cold heads		1	1
Helium system filling pressure at room temperature	bar	15	14
Ambient temperature	°C (°F)	+5 to +40 (+41 to +104)	+5 to +40 (+41 to +104)
Cooling water consumption		< 5	< 5
Cooling water feed temperature	°C (°F)	+5 to +25 (+41 to +77)	+5 to +25 (+41 to +77)
Mains voltage (single phase)	V	230 ± 10%	208 ± 10%
Operating current			
with cooled down cold head	A	9.5 to 10.5	11.5 to 12.5
with warmed up cold head	A	12.0	13.0
Electric power consumption			
with cooled down cold head	kW	2.2	2.3
with warmed up cold head	kW	2.4	2.5
Remote control through interface	V DC	24	24
Helium connections			
self-sealing fittings			
high-pressure side (outside thread)		1/2"	1/2"
low-pressure side (outside thread)		1/2"	1/2"
Water connections	DN	10	10
Noise level (at a distance of 1 m (3.5 ft))	dB(A)	< 55	< 55
Dimensions (W x H x D)	mm (in.)	445 x 395 x 400 (17.52 x 15.55 x 15.74)	445 x 395 x 400 (17.52 x 15.55 x 15.74)
Weight	kg (lbs)	69 (152.32)	69 (152.32)

Ordering Information
COOLPAK

	2000 (50 Hz)	2200 (60 Hz)
	Part No.	Part No.
Compressor unit	840000V2000	840000V2200
Accessories, optional		
19" installation kit	840 022	840 022
RC adapter box (for operating older cold heads of type RGD, RGS or COOLPOWER 20 / 210 / 30 / 510)	840 910	840 910
Spare parts		
Absorber CPS-V8	E 840001973	E 840001973


Compressor Units for Pneumatically Driven Cold Heads and Pumps, Water Cooling COOLPAK 6000 H/6200 H/6000 HD



Compressor units COOLPAK 6000 H/6200 H/6000 HD

Advantages to the User

- Highly effective and even more powerful when connected with Oerlikon Leybold Vacuum cryo pumps and refrigerators
- Excellent long-term reliability owing to the modular design and the long life components
- Silent and low vibration operation through scroll compressors
- Simple installation and operation
- Global power supply compatibility
- Easy integration in complex systems due to 24 V DC or RS 232 C interfaces
- Almost maintenance-free
- Small footprint
- Low cost of ownership

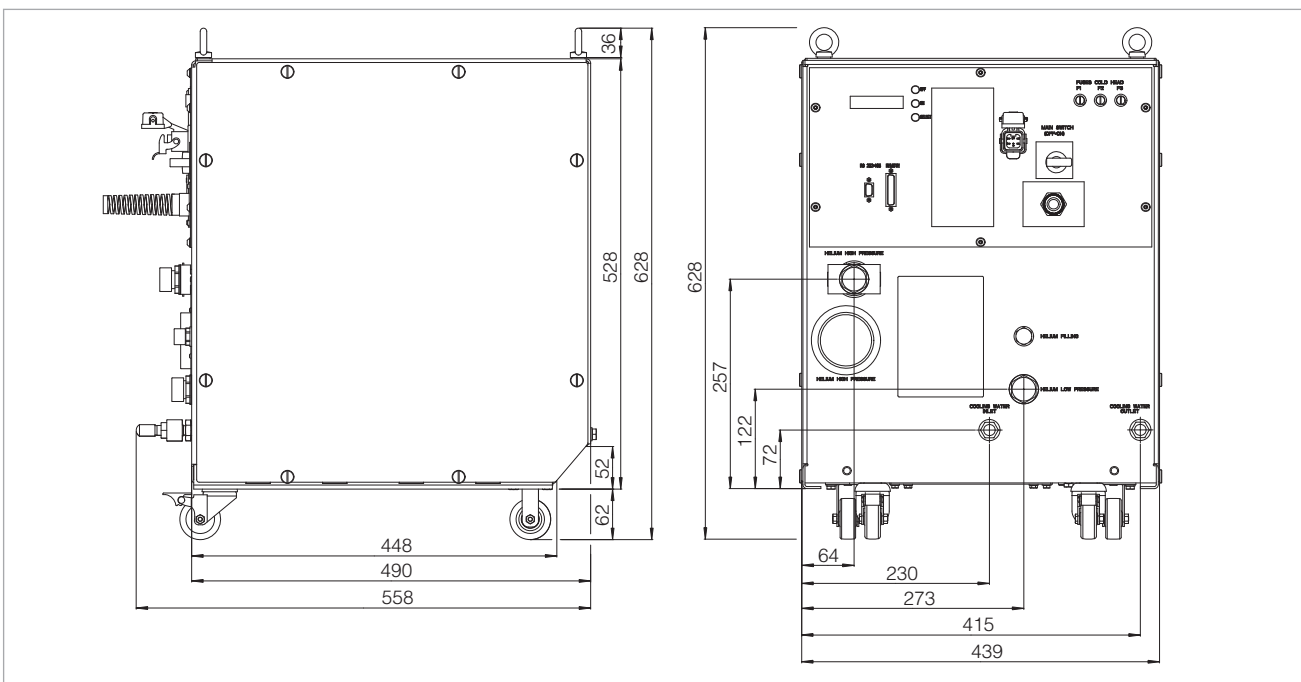

Dimensional drawing for the COOLPAK 6000 H/6200 H/6000 HD

Technical Data

COOLPAK

	6000 H / 6000 HD		6200 H	
	50 Hz	60 Hz	50 Hz	60 Hz
Number of electrical connections for cold heads	1	1	1	1
Helium system filling pressure at room temperature	bar	17	16	15
Ambient temperature	°C (°F)	+5 to +40 (+41 to +104)	+5 to +40 (+41 to +104)	+5 to +40 (+41 to +104)
Cooling-water consumption ¹⁾	l/min	5.0	5.0	5.0
Cooling-water entry temperature	°C (°F)	+5 to +25 (+41 to +77)	+5 to +25 (+41 to +77)	+5 to +25 (+41 to +77)
Main voltage (3 phase) upon delivery	V	380 - 400 ± 10%	–	230 ²⁾ + 1% / - 10%
alternative setting	V	–	470 ± 10%	200 ± 10%
Operating currents with the cold head cool	A	10 to 12	–	20 to 22
with the cold head warm	A	11 to 13	–	22 to 25
Electrical power consumption with the cold head cool	kW	6.5 to 7.5	7.0 to 8.0	6.5 to 7.5
with the cold head warm	kW	7.0 to 8.0	7.5 to 8.5	7.0 to 8.0
Remote control via interface		24 V DC or RS 232 C	24 V DC or RS 232 C	24 V DC or RS 232 C
Helium connections				
Self-sealing couplings				
High pressure connection (outside thread)		1/2"	1/2"	1/2"
Low pressure connection (outside thread)		1/2"	1/2"	1/2"
Water connections		Hose nozzle DN 12 / G 1/2" outside thread	Hose nozzle DN 12 / G 1/2" outside thread	Hose nozzle DN 12 / G 1/2" outside thread
Sound level (at 1 m (3.5 ft) distance)	dB(A)	60	60	60
Dimensions (W x H x D)	mm (in.)	440 x 589 x 558 (17.32 x 23.19 x 21.97)	440 x 589 x 558 (17.32 x 23.19 x 21.97)	440 x 589 x 558 (17.32 x 23.19 x 21.97)
Weight	kg (lbs)	104 (230)	104 (230)	104 (230)

Ordering Information

COOLPAK

	6000 H / 6000 HD		6200 H	
	50 Hz	60 Hz	50 Hz	60 Hz
	Part No.	Part No.	Part No.	Part No.
Compressor unit				
without power supply cable				
Connection for 1 cold head (CP ... H)	840000V6001	840000V6001	840000V6201	840000V6201
Connection for 2 cold heads (CP ... HD)	840000V6004	840000V6004	–	–
Power supply cable				
3.5 m (12.25 ft)				
CEE plug, 32 A/6h, 3-pol +N+PE	893 95	–	–	–
NEMA plug, L 16-20 P, 20 A/480 V, 3-pol +PE (AWG 12)	–	893 96	–	–
10 m (35.0 ft)				
with end splice (AWG 10)	–	–	840 111 ³⁾	840 111 ³⁾
20 m (70.0 ft)				
with end splice (AWG 10)	–	–	840 112 ³⁾	840 112 ³⁾
Accessories				
Water cooling discharge throttle	E 840000133 ⁴⁾	E 840000133 ⁴⁾	–	–
Spare parts				
Adsorber CACP 4000/6000	E 840002863	E 840002863	E 840002863	E 840002863

¹⁾ At a cooling water entry temperature of 25 °C (77 °F)

²⁾ At 14 bar filling pressure

³⁾ Also suitable for COOLPAK 6000 H(D)

⁴⁾ Only for COOLPAK 6000 HD

Compressor Units for Mechanically Driven Cold Heads and Pumps, Water Cooling COOLPAK 6000 HMD/6200 HMD




Serves the purpose of individually driving the cold heads with mechanically driven displacers; i.e. COOLPOWER 10 MD, but also older cold heads like COOLPOWER 150, 130, 4.2 GM, 0.5 WATT and 4.2 ONE WATT.

Compressor unit COOLPAK 6000 HMD/6200 HMD

Advantages to the User

- Compact
- Simple to operate
- Can be controlled remotely
- Selectable voltages
- Low noise
- UL approved
- Long maintenance-free period of operation
- Variable cold head motor speed

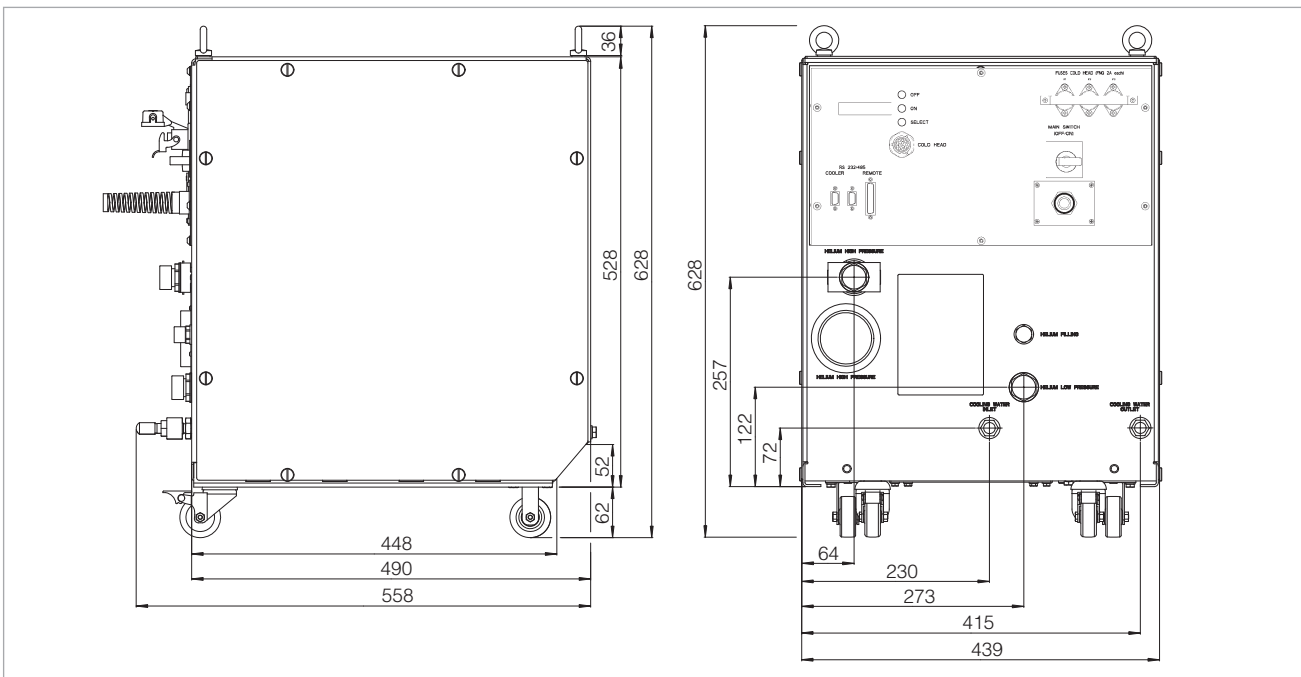

Dimensional drawing for the COOLPAK 6000 HMD/6200 HMD

Technical Data

COOLPAK

6000 HMD

6200 HMD

Mains voltage	50 Hz, 400 ± 10% 60 Hz, 460 ± 10%	50 Hz, 200 ± 10% 60 Hz, 200 - 230 ± 10%
For all other Technical Data, see COOLPAK 6000 H and 6200 H		

Ordering Information

COOLPAK

6000 HMD

6200 HMD

	Part No.	Part No.
Compressor type		
400 V/3-ph. 50 Hz or 460 V/3-ph. 60 Hz ± 10%	840000V6002	-
200 V/3-ph. 50 Hz or 200-230 V/3-ph. 60 Hz ± 10%	-	840000V6202
Flexible pressure line (for operating mechanically driven cold heads)		
6 m (21.0 ft) (High-pressure) FL6 HP-DN 20 (8f/8f)	840 210	840 210
6 m (21.0 ft) (Low-pressure) FL6 LP-DN 16 (8f/8f)	840 211	840 211
9 m (31.5 ft) (High-pressure) FL9 HP-DN 20 (8f/8f)	840 217	840 217
9 m (31.5 ft) (Low-pressure) FL9 LP-DN 16 (8f/8f)	840 218	840 218
20 m (75.0 ft) (High-pressure) FL20 HP-DN 16 (8f/8f)	840 230	840 230
20 m (75.0 ft) (Low-pressure) FL20 LP-DN 16 (8f/8f)	840 231	840 231
Connection cable for the cold heads COOLPOWER 10 MD, 150, 130, 4.2 GM, 0.5 WATT and 4.2 ONE WATT		
9.0 m (31.5 ft)	842 110	842 110
20.0 m (75.0 ft)	842 112	842 112
30.0 m (105.0 ft)	842 114	842 114
Power supply cable		
3.5 m (12.25 ft) CEE plug, 32 A/6h, 3-pol +N+PE	893 95	-
NEMA plug, L 16-20 P, 20 A/480 V, 3-pol +PE (AWG 12)	893 96	-
10 m (35.0 ft) with end splice (AWG 10)	-	840 111 ¹⁾
20 m (75.0 ft) with end splice (AWG 10)	-	840 112 ¹⁾
Accessories		
Water cooling discharge throttle	E 840000133	E 840000133

¹⁾ Also suitable for COOLPAK 4000(D)/6000(D)

General Accessories for Compressor Units COOLPAK

Technical Data	Length	Connections on both sides (inside thread)	
		High pressure line (HD)	Low pressure line (ND)
Flexlines ^{1), 2)} FL 4.5 (1/2", 1/2") FL 9.0 (1/2", 1/2")	4.5 m (15.75 ft) 9.0 m (31.50 ft)	1/2" 1/2"	1/2" 1/2"
	Adaptor		Adaptor
Accessories for Flexlines	Outside thread (m)		Inside thread (f)
Adaptor for flexlines AD (1/2" m, 3/4" f) AD (1/2" f, 3/4" m)	1/2" 3/4"		3/4" 1/2"
	Connections		Connections
	Outside thread (m)		Inside thread (f)
Elbow 1/2" for flexlines Isolating piece 1/2" for flexlines	1/2" 1/2"		1/2" 1/2"
	Connections on both sides		
	Outside thread (m)		
Coupling 1/2" for interconnecting two 1/2" flexlines		1/2"	
	Gas Distributors	Gas Manifold - Connections	
	required quantity	At the compressor (inside thread)	At the cold head (outside thread)
Gas manifold (1 piece each) GD 2 (for dual operation) ²⁾ GD 4 (for up to quad operation) ²⁾	2 2	1/2" 1/2"	2 x 1/2" 4 x 1/2"
	Length		
EL 4.5 extension cable for linking cold head and compressor unit	4.5 m (15.75 ft)		

Ordering Information

General Accessories


	Part No.
Flexlines ^{1), 2)} FL 4.5 (1/2", 1/2") FL 9.0 (1/2", 1/2")	892 87 892 88
Adaptor AD (1/2" m, 3/4" f) AD (1/2" f, 3/4" m)	892 89 892 90
Elbow 1/2"	891 73
Coupling 1/2"	891 71
Gas manifold (1 piece each) GD 2 (for dual operation) ²⁾ GD 4 (for up to quad operation) ²⁾	840 253 (2x) 840 254 (2x)
EL 25 extension cable for linking cold head and compressor unit ²⁾	200 20 900
EL 4.5 extension cable for linking cold head and compressor unit ²⁾	893 74

All flexible pressure lines, adaptor pieces, bends, isolating pieces, line couplings and gas manifolds are equipped with self-sealing Aeroquip fittings and filled in the factory with high-purity helium gas (purity: 99.999%). The filling pressure is 16 bar

¹⁾ Minimum bending radius: 30 cm (11.81 in.)

²⁾ Only suited for pneumatically driven cold heads and cryo pumps

Refrigerator Cryostat based on the RDK 6-320

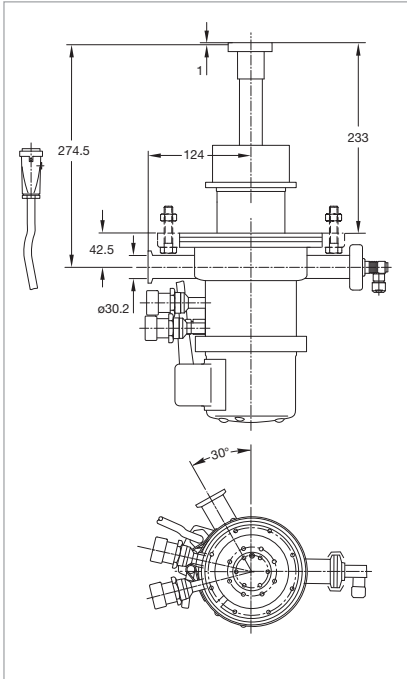

Basic unit RDK 6-320

The RDK 6-320 basic unit includes the COOLPOWER 5/100 T two-stage cold head. Its high refrigerating capacity at low temperatures permits experiments which previously could not be performed by relying on refrigerators and which required the use of liquid helium.

The RDK 6-320 basic unit is a complete system for measurements in the temperature range between 6 and 320 K.

The COOLPOWER 5/100 T cold head is augmented by:

- Silicon diode for measuring the temperatures at the second stage of the cold head
- Heater at the second stage of the cold head provided with overheating protection
- 11-way current feedthrough with matching external connector
- DN 25 KF pumpdown port
- DN 160 ISO-K vacuum flange

Advantages to the User

- Compact
- Very reliable
- Comprehensive range of accessories from one source
- For installation in any orientation
- Simple to operate
- Short cooldown time
- Cost-effective in long-term experiments since no liquid helium is required
- Simple and rapid servicing through the use of the standard COOLPOWER 5/100 T cold head with pneumatic drive system for the displacer

Typical Applications

- Cooling of samples and detectors
- Material research and testing
- Spectroscopic applications
- Matrix isolation spectroscopy with neon and argon

General Remarks on Refrigerator Cryostats

Isolating Vacuum

A two-stage rotary vacuum pump will normally be adequate to produce an isolating vacuum. However, this pump should be equipped on the suction side with an adsorption trap and a isolation valve.

If the application requires that the cold surfaces remain free of hydrocarbons, we recommend the use of our small turbomolecular pump system PT 50 (see Catalog Part "Vacuum Pump Systems" Section "High Vacuum Pump Systems").

Temperature Measurement

In order to avoid measurement errors due to thermal resistances, the temperature at the sample should preferably be measured by a second optional silicon diode which is installed as close to the sample as possible. If possible it should be maintained at the same temperature level as that of the probe.

Temperature Control

The temperature at the second stage of the cold head (or that of the probe) is controlled by heating against the cooling effect produced by the refrigerator (while the cold head is running).

Optical Refrigerator Cryostat based on the RDK 6-320




Optical refrigerator cryostat RDK 6-320


Upgraded as an optical cryostat (option) the RDK 6-320 is tailor-made for experiments involving temperatures down to about 7 K.

Supplied Equipment

- Basic unit RDK 6-320
- Temperature attenuation disk out of Pb Sn
- Sample holder out of Al 99.5
- Thermal radiation shield out of E-Cu
- Vacuum jacket out of aluminum / stainless steel
- Five exchangeable windows (four windows on the sides, one window in the longitudinal axis of the cryostat); two windows on the sides and the window in the longitudinal axis are made of SUPRASIL I, the two other windows are blanked off and are made of brass

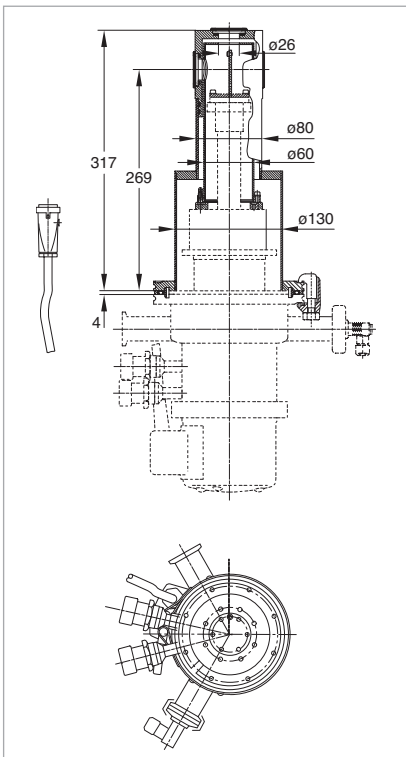

Dimensional drawing for the optical refrigerator cryostat

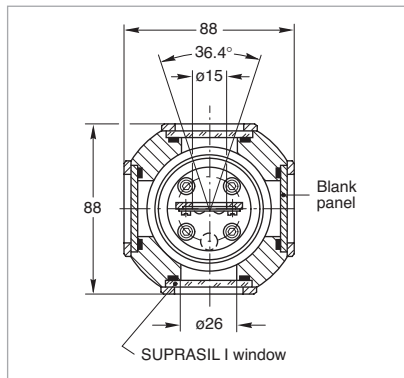

Section through the window area

Technical Data**RDK 6-320**

Temperature range		
2nd stage of the cold head	K	6 to 320
1st stage of the cold head	K	28 to 320
Silicon diode for temperature measurements at the 2nd stage of the cold head		built-in
Heater at the 2nd stage of the cold head		built-in
Heating power	W	50
Heating current	A	1
Heating voltage	V DC	50
Permissible ambient temperature	°C (°F)	+5 to +40 (+41 to +104)
He filling pressure at room temperature	bar	16
He connections		
Self-sealing screwed connections		
High pressure connection (outside thread)		1/2"
Low pressure connection (outside thread)		1/2"
Length of the connection cable to the compressor unit	m (ft)	4.5 (15.75) [included]]
Weight	kg (lbs)	13 (28.7)

Ordering Information**RDK 6-320**

	Part No.
Basic unit RDK 6-320	842 403
Optical cryostat consisting of RDK 6-320 and Expansion Kit ROK	842 404
Compressor unit	
COOLPAK 6000 H 400 V/50 Hz; 470 V/60 Hz	840000V6001
COOLPAK 6200 H 200 V/50 Hz; 200 V, 230 V/60 Hz	840000V6201
Power supply cable	see Ordering Information for the compressor units COOLPAK
Flexlines	
FL 4.5 (1/2", 1/2")	892 87
Temperature measurement at 2nd stage with low temperature controller MODEL 9700	842 400
Sensor cable, 3 m (10.5 ft) long	842 401

Accessories for Cryo Pumps / Cryogenics

Controllers and Monitoring Units for Cryo Pumps

Advantages to the User

- Interface to external system controller
- For easy integration with external system controllers
- For safe pumping of hydrogen

Typical Applications

- For automated operation of the COOLVAC cryo pumps of the ClassicLine

System Controller COOLVAC SC



System controller COOLVAC SC

The intelligent COOLVAC system controller SC automatically controls and monitors up to 30 COOLVAC pumps. Online monitoring, help functions and a service interface for easy diagnostic are just a few user friendly features. It can be installed as a “stand alone system” or remote controlled via an interface.

Design Features

- 1/4 19" rack module
- 3 height units (HU)
- Dimensions (W x H x D)
106 x 129 x 178 mm
(4.17 x 5.08 x 7.01)
- Operation through pushbuttons

Supplied equipment

- Network terminator (Part No. 400 000 114)
- Hardware interlock plug (Part No. 400 000 133)
- O modem adapter for connection to the PC

Technical Data

COOLVAC SC


Operating voltage	Supply through RS 485 C cable from COOLVAC PM
Dimensions (W x H x D) mm (in.)	106 x 129 x 178 (4.17 x 5.08 x 7.01) [1/4 19", 3 HU]

Ordering Information

COOLVAC SC

	Part No.
System controller COOLVAC SC	844 230
System controller COOLVAC SC with Profibus interface	844230V0004

Power Supply PS for up to Two Cryo Pumps

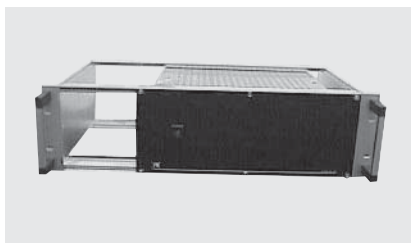

Power supply PS

The COOLVAC power supply PS provides the power for the cold head motor, the electrical heaters and the supplies voltage to the electronics for up to 2 COOLVAC pumps. Controlled via the system controller SC the PS turns the compressor unit on and off if required by the connected pumps.

The system controller COOLVAC SC (not included) will fit into the empty space.

Design Features

- 19" rack module
- 3 height units (HU)
- Dimensions (W x H x D)
483 x 135 x 320 mm
(19.02 x 5.31 x 12.60)

Supplied equipment

- Approximately 3 m (10.5 ft) long mains cord

Technical Data

PS for double connection

Power consumption, approx.	VA	900
Supply voltage, factory preset (optional 115 V AC is possible ¹⁾)	V AC	230 ± 10%, 1 phase
Output power	W	2 x 250
Rack mounting		Through 19" installation frame
Dimensions (W x H x D)	mm (in.)	483 x 135 x 320 (19.02 x 5.31 x 12.60) [3/4 19", 3 HU]
Weight	kg (lbs)	10 (22.1)

Ordering Information

PS for double connection

	Part No.
Power supply PS for up to 2 cryo pumps	844 135

¹⁾ Please contact Oerlikon Leybold Vacuum

Power supply PS for up to Three Cryo Pumps



Power supply PS

The COOLVAC power supply PS provides the power for the cold head motor, the electrical heaters and the supplies voltage to the electronics for up to 3 COOLVAC pumps. Controlled via the system controller SC the PS turns the compressor unit on and off if required by the connected pumps.

Design Features

- 19" rack module
- 4 height units (HU)
- Dimensions (W x H x D)
483 x 177 x 440 mm
(19.02 x 6.97 x 17.32)
- Single LED indicates correct direction of rotation for the rotating field

Supplied equipment

- 20 m (70 ft) long mains cord, fitted, without plug
- 19" mounting brackets for rack mounting

Technical Data

PS

for multiple connection

Nominal voltage (3 phase) factory default	V AC	3 x 200 + PE
switchable to	V AC	3 x 400 + PE 3 x 460 to 480 + PE
Voltage tolerance		± 10%
Frequency range	Hz	47 to 63
Fusing		Power switch
Ambient temperature range	°C (°F)	0 to +40 (+32 to +104)
Protection type	IP	20
Dimensions (W x H x D) [without handles]	mm (in.)	483 x 177 x 440 (19.02 x 6.97 x 17.32) [19", 4 HU]
Weight (including cord)	kg (lbs)	38.8 (85.65)


Ordering Information

PS

for multiple connection

	Part No.
Power supply PS for up to 3 cryo pumps	844 235


COOLVAC ClassicLine, Single System Configuration

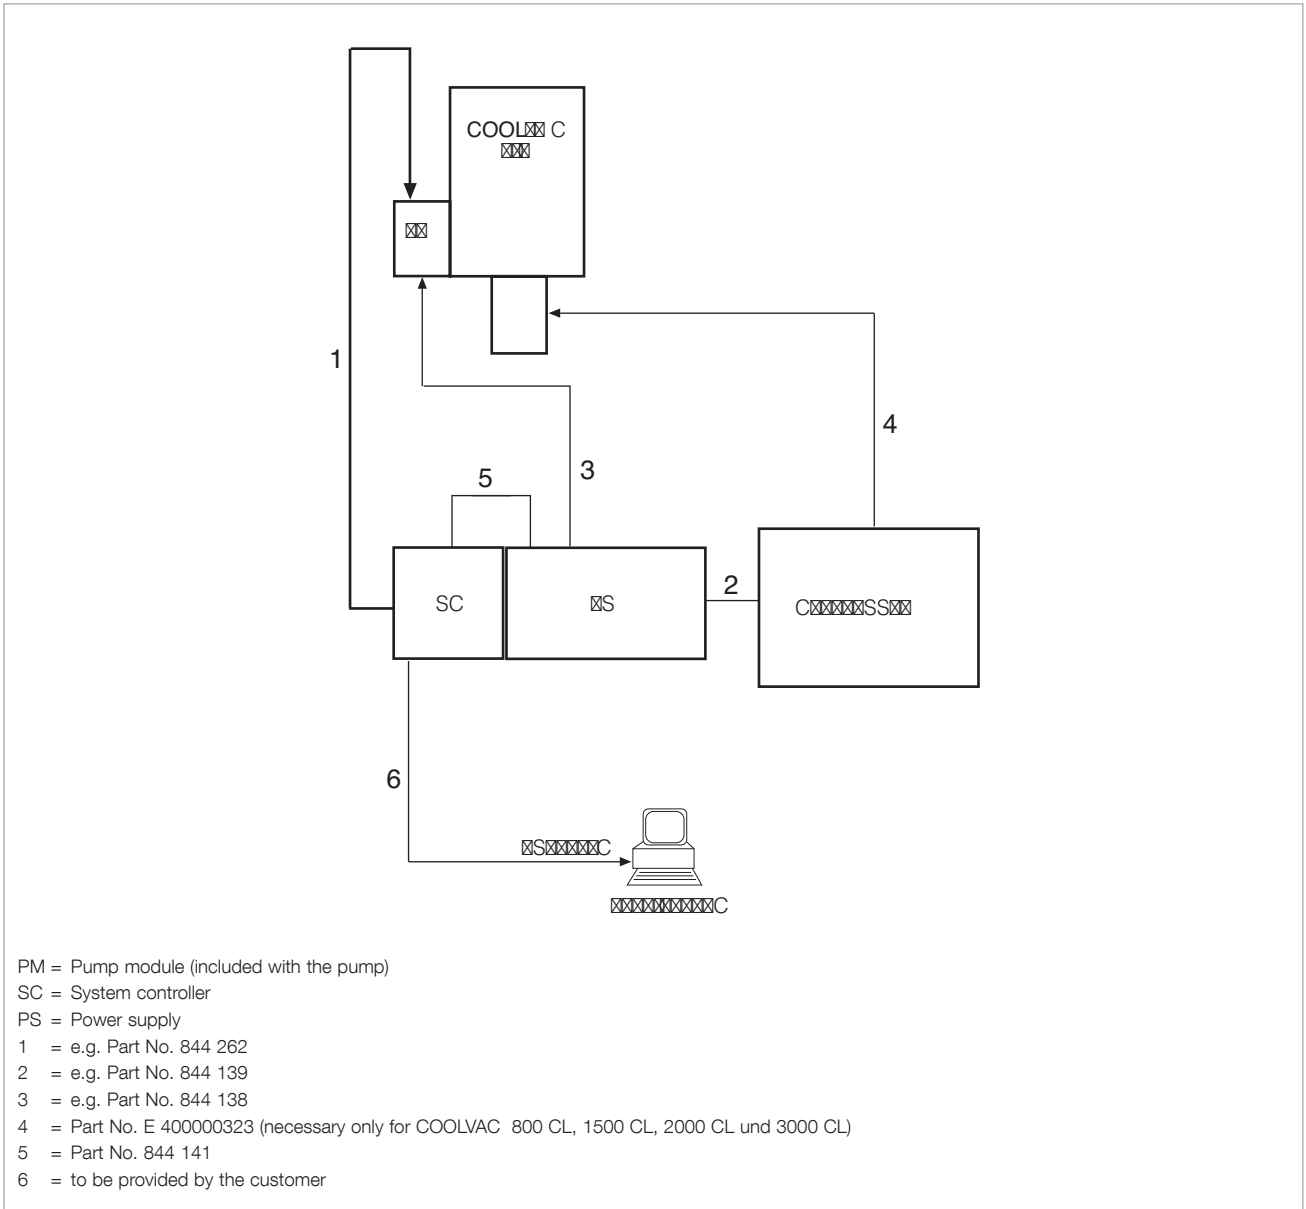

Single System Configuration


COOLVAC ClassicLine, Dual System Configuration

Only for European mains voltages and for compressors suited for dual operation

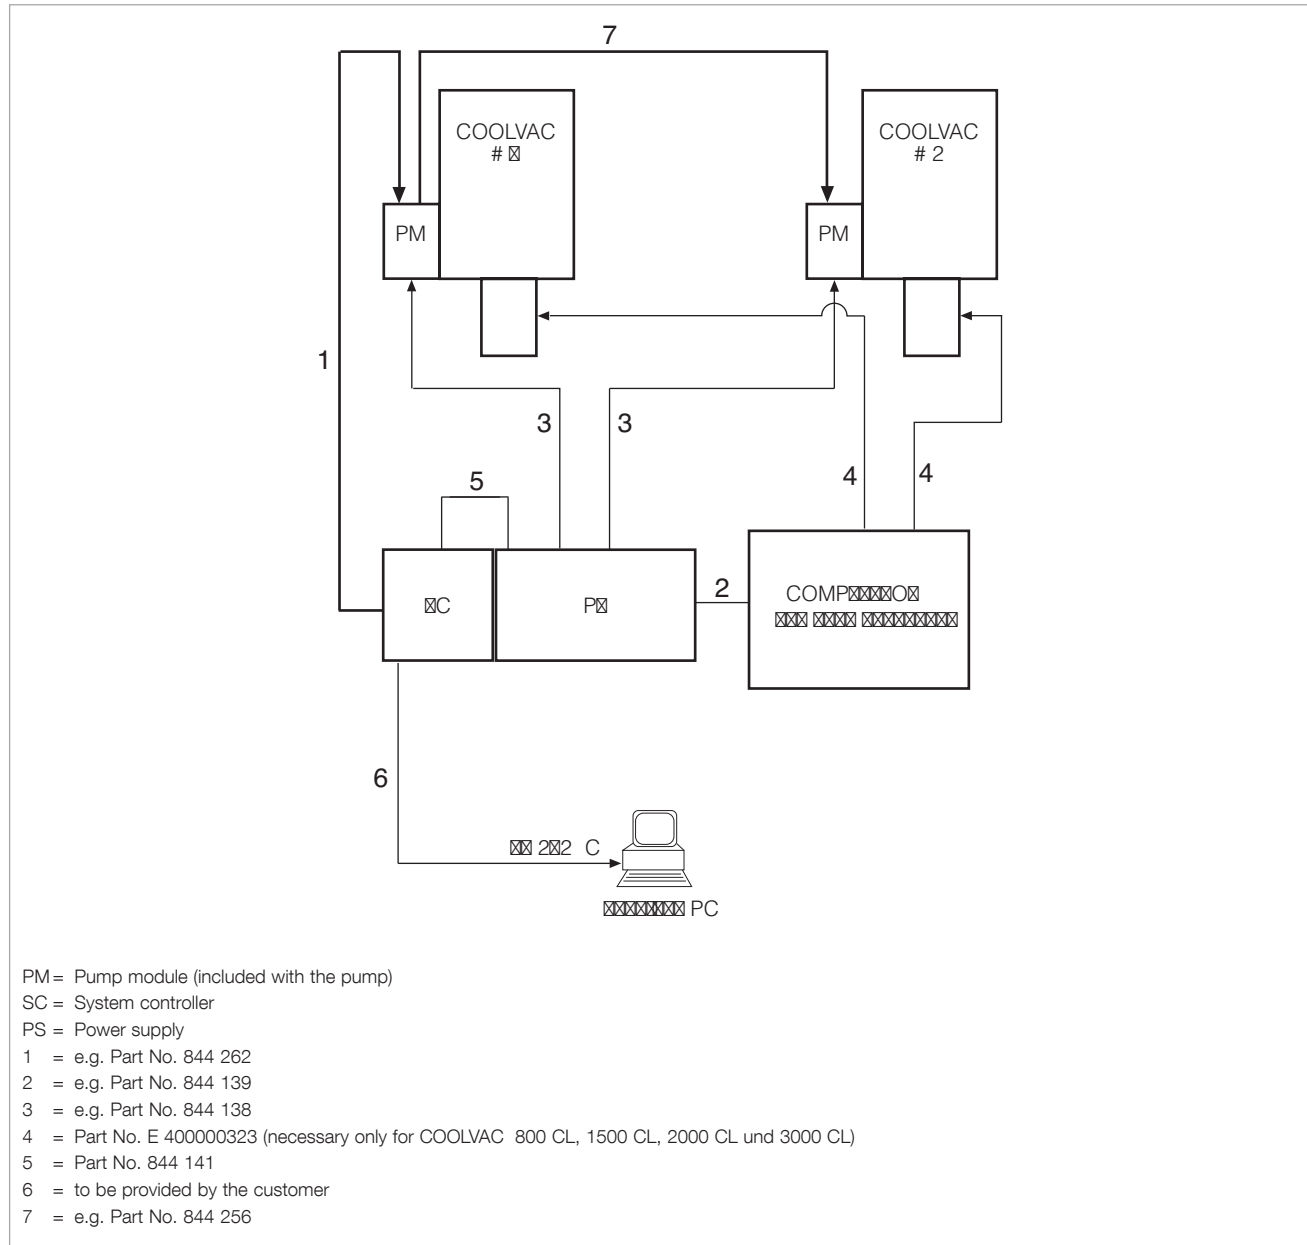

Dual System Configuration

COOLVAC ClassicLine, Dual and Multiple System Configuration

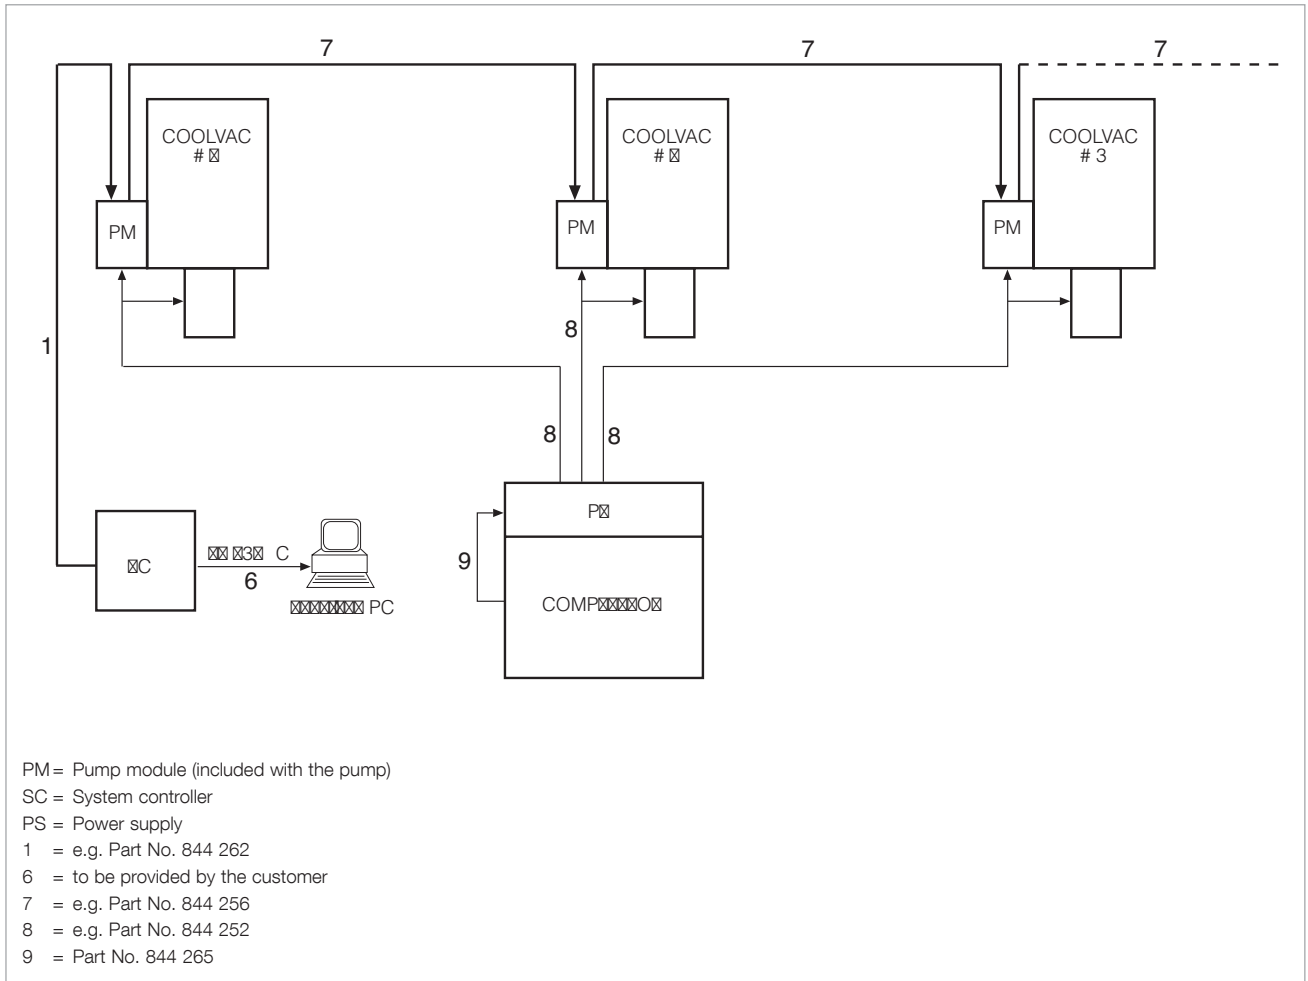

Dual and Multiple System Configuration

Low Temperature Controller MODEL 9700



Low temperature controller MODEL 9700

Advantages to the User

- Microprocessor controlled PID controller
- Digital temperature readout in Kelvin
- Control by means of counter heating
- High control accuracy over the entire temperature range (1.5 to 450 K)
- Electric heating power up to 50 W
- Programmable heater power limit
- Generation of linear temperature ramps
- Up to 50 program steps are programmable
- Standard interface RS 232 C and IEEE-488
- Data from two sensors can be displayed
- Analogue temperature outputs for both channels
- Can be used in three operating modes
 - Manual
 - Program
 - External computer control

Typical Applications

- Temperature control at refrigerator cryostats

Technical Data

MODEL 9700

Mains connection, 50/60 Hz	V AC	85 to 240
Power consumption, max.	W	150
Entry of data		3 x 4 membrane key pad
Data memory		EPROM
Display		Two line, 20 digit LED digital display
Temperature measurement Sensors		2 x silicon diodes type D or 2 x silicon diodes with standard temperature resistance characteristics
Measurement current	μ A	10
Measurement range	K	1.5 to 450
Measurement range of the silicon diode type D	K	1.4 to 325 K
Number of channels		2
Resolution		Simultaneous display of both channels
A/D converter resolution	bit	24
Switching outputs		2 relays (n.o. and n.c. contacts)
Temperature resolution	K	0.1
Temperature control		PID controller
Heating power, max.	W	50
Heating current, max.	A	1
Heating voltage, max.	V DC	0 to 50
Computer interface		RS 232 C and IEEE-488
Permissible ambient temperature °C (°F)		+10 to +30 (+50 to +86)
Mechanical design/cabinet		Table-top unit (8.5" x 3.5" x 12")
Dimensions (W x H x D) [high H without feet]	mm (in.)	215.9 x 88 x 304.8 (8.5 x 3.5 x 12.0)
Weight	kg (lbs)	2.3 (5)
Dimensions of the packaging (W x H x D)	mm (in.)	360 x 230 x 450 (14.17 x 9.06 x 17.72)
Weight (incl. packaging, approx.)	kg (lbs)	4.2 (9.3)
Length of mains cord	m (ft)	2.5 (8.75)

Ordering Information

MODEL 9700

	Part No.
Low temperature controller MODEL 9700	842 400
Sensor cable, 3 m (10.5 ft) long	842 401
Silicon diode type D with connection cable and miniature plugs	890 89

Low Temperature Measuring Instrument MODEL 211S



Low temperature measuring instrument MODEL 211S

Advantages to the User

- Supports one silicon diode
- 3-digit LED display
- Temperature readout between 1 and 450 Kelvin
- Two trigger thresholds
- RS 232 C interface

Typical Applications

- Temperature measurements on cryostats
- Temperature measurements on cryo pumps for monitoring their operation and to control pump systems

Technical Data

Measurement current	μA	10
Display		LED, 5-digits
Temperature range	K	1.4 to 475
Resolution		0.001 K from 1.4 to 99.9 K 0.01 K from 100 to 475 K
Accuracy		±0.05 K from 1.5 to 99.9 K ±0.05 K from 100 to 475 K
Power supply voltage		5 V DC at 1 A through the supplied 100-240 V AC power adaptor
Trigger thresholds		2
Switched output		2 relays (n.c. and n.o.) 30 V DC at 1 A
Analog output		
Voltage	V	0 to 10
Current	mA	4 to 20
RS 232 C interface		a) Temperature output b) External adjustment of switching thresholds
Admissible ambient temperature	°C (°F)	+15 to +35 (+59 to +95)
Mechanical design/housing		Benchttop unit
Dimensions (W x H x D)	mm (in.)	96 x 48 x 166 (3.78 x 1.89 x 6.54)
Weight (including packaging), approx.	kg (lbs)	0.45 (1.0)


Ordering Information

MODEL 211S


	Part No.
Low temperature measuring instrument MODEL 211S	844 110
HV cable 2-way with plug, 10 m (35.0 ft) long ¹⁾	844 112
HV cable 4-way with plug, 10 m (35.0 ft) long ¹⁾	844 113
UHV cable 4-way with plug, 10 m (35.0 ft) long ¹⁾	844 114
Silicon diode, type D, with connecting cable and micro plugs	890 89
HV current feedthrough on a flange DN 25 KF, 2-way	200 19 256
UHV current feedthrough on a flange DN 16 CF, 4-way	500 217

¹⁾ For COOLPOWER and COOLVAC pumps

Temperature Sensor

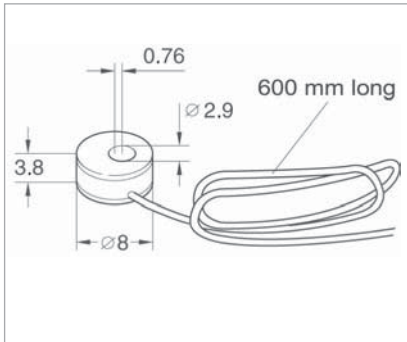

Dimensional drawing for the silicon diode, type D

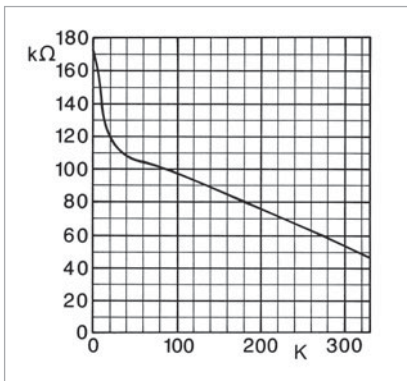

Standard characteristic of the silicon diode

In contrast to vapor pressure thermometers, electric temperature sensors can be used for continuous measurements within a wide range of temperatures.

Silicon diodes offer a negative temperature coefficient of resistance, i.e. their resistance drops as the temperature increases. The slope of the temperature/resistance characteristic and the absolute resistance are decisive regarding the suitability of these diodes. The slope determines the sensitivity of the sensor and a high electrical resistance permits accurate measurements while keeping the thermal load small (microwatts).

In systems which are degassed at high temperatures, silicon diodes can only be fitted after degassing has been completed.

The silicon diode type D matches the low temperature display unit and the low temperature control unit MODEL 9700.

Technical Data

Silicon Diode Type D


Temperature range	K	1.4 to 325
Temperature coefficient (dR/dT)		
qualitative		Negative in the entire temperature range
quantitative	Ω/K	Non-linear characteristic
Measurement current	μA	10
Bakeable to	$^{\circ}C$ ($^{\circ}F$)	+60 (+140)

Ordering Information

Silicon Diode Type D

	Part No.
Temperature sensor	890 89
Silicon diode with 4-way electrical feedthrough	200 20 694
Flange DN 16 ISO-KF	200 20 616

Safety Valve

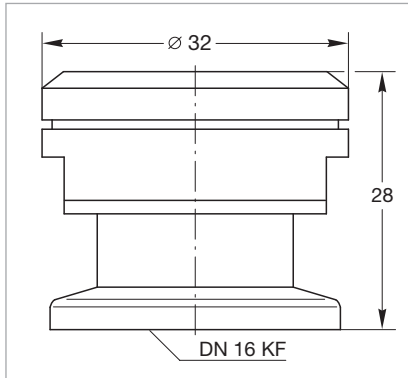

Dimensional drawing for the safety valve

Typical Applications

- Protecting sealed vacuum systems like cryo pumps, cryostats, lifting devices, for example against internal overpressures
- Mandatory for systems which are separated when cold, as a means of protection against overpressures

Technical Data

Safety Valve

Responding pressure	mbar	150 ± 40, over-pressure
Flow at 140 mbar	l x h ⁻¹	500
Valve disk		Spring loaded, with O-ring seal
Leak rate in the closed state	mbar x l x s ⁻¹ (Torr x l x s ⁻¹)	< 1 x 10 ⁻⁸ (< 0.75 x 10 ⁻⁸)
Connection	DN	16 KF
Diameter	mm (in.)	32 (1.26)
Material		Steel 1.4305
Overall height	mm (in.)	28 (1.10)
Weight	kg (lbs)	0.3 (0.7)

Ordering Information

Safety Valve

	Part No.
Safety valve on DN 16 KF flange	890 39

Sales and Service

Germany

Oerlikon Leybold Vacuum GmbH
Sales, Service, Support Center (3SC)
Bonner Strasse 498
D-50968 Cologne
Phone: +49-(0)221-347 1234
Fax: +49-(0)221-347 31234
sales.vacuum@oerlikon.com
www.oerlikon.com/leyboldvacuum

**Oerlikon Leybold Vacuum GmbH
Sales Area North**
Branch Office Berlin
Industriestrasse 10b
D-12099 Berlin
Phone: +49-(0)30-435 609 0
Fax: +49-(0)30-435 609 10
sales.vacuum.bn@oerlikon.com

**Oerlikon Leybold Vacuum GmbH
Sales Office South**
Branch Office Munich
Karl-Hammerschmidt-Strasse 34
D-85609 Aschheim-Dornach
Phone: +49-(0)89-357 33 9-10
Fax: +49-(0)89-357 33 9-33
sales.vacuum.mn@oerlikon.com
service.vacuum.mn@oerlikon.com

**Oerlikon Leybold Vacuum
Dresden GmbH
Service Competence Center**
Zur Wetterwarte 50, Haus 304
D-01109 Dresden
Service:
Phone: +49-(0)351-88 55 00
Fax: +49-(0)351-88 55 041
info.vacuum.dr@oerlikon.com

Europe

Belgium

**Oerlikon Leybold Vacuum
Nederland B.V.
Belgisch bijkantoor**
Leuvensesteenweg 542-9A
B-1930 Zaventem
Sales:
Phone: +32-2-711 00 83
Fax: +32-2-720 83 38
sales.vacuum.zv@oerlikon.com
Service:
Phone: +32-2-711 00 82
Fax: +32-2-720 83 38
service.vacuum.zv@oerlikon.com

France

**Oerlikon Leybold Vacuum
France S.A.S.**
Parc du Technopolis, Bâtiment Beta
3, Avenue du Canada
F-91940 Les Ulis cedex
Sales and Service:
Phone: +33-1-69 82 48 00
Fax: +33-1-69 07 57 38
info.vacuum.ctb@oerlikon.com
sales.vacuum.ctb@oerlikon.com

**Oerlikon Leybold Vacuum
France S.A.S.**
Valence Factory
640, Rue A. Bergès
B.P. 107
F-26501 Bourg-lès-Valence Cedex
Phone: +33-4-75 82 33 00
Fax: +33-4-75 82 92 69
marketing.vacuum.vc@oerlikon.com

Great Britain

**Oerlikon Leybold Vacuum
UK LTD.**
Unit 9
Silverglade Business Park
Leatherhead Road
Chessington
Surrey (London)
KT9 2QL
Sales:
Phone: +44-13-7273 7300
Fax: +44-13-7273 7301
sales.vacuum.ln@oerlikon.com
Service:
Phone: +44-13-7273 7320
Fax: +44-13-7273 7303
service.vacuum.ln@oerlikon.com

Italy

**Oerlikon Leybold Vacuum
Italia S.r.l.**
Via Trasimeno 8
I-20128 Mailand
Sales:
Phone: +39-02-27 22 31
Fax: +39-02-27 20 96 41
sales.vacuum.mi@oerlikon.com
Service:
Phone: +39-02-27 22 31
Fax: +39-02-27 22 32 17
service.vacuum.mi@oerlikon.com

Netherlands

**Oerlikon Leybold Vacuum
Nederland B.V.**
Floridadreef 102
NL-3565 AM Utrecht
Sales and Service:
Phone: +31-(30) 242 63 30
Fax: +31-(30) 242 63 31
sales.vacuum.ut@oerlikon.com
service.vacuum.ut@oerlikon.com

Switzerland

**Oerlikon Leybold Vacuum
Schweiz AG, Pfäffikon**
Churerstrasse 120
CH-8808 Pfäffikon
Warehouse and shipping address:
Riedthofstrasse 214
CH-8105 Regensdorf
Sales:
Phone: +41-44-308 40 50
Fax: +41-44-302 43 73
sales.vacuum.zh@oerlikon.com
Service:
Phone: +41-44-308 40 62
Fax: +41-44-308 40 60
service.vacuum.zh@oerlikon.com

Spain

**Oerlikon Leybold Vacuum
Spain, S.A.**
C/. Huelva, 7
E-08940 Cornellà de Llobregat
(Barcelona)
Sales:
Phone: +34-93-666 43 11
Fax: +34-93-666 43 70
sales.vacuum.ba@oerlikon.com
Service:
Phone: +34-93-666 46 11
Fax: +34-93-685 43 70
service.vacuum.ba@oerlikon.com

America

USA

**Oerlikon Leybold Vacuum
USA Inc.**
5700 Mellon Road
USA-Export, PA 15632
Phone: +1-724-327-5700
Fax: +1-724-325-3577
info.vacuum.ex@oerlikon.com
Sales:
Phone: +1-724-327-5700
Fax: +1-724-333-1217
Service:
Phone: +1-724-327-5700
Fax: +1-724-325-3577

Brazil

**Oerlikon Leybold Vacuum
Brasil**
Rod. Vice-Prefeito Hermenegildo Tonolli,
nº. 4413 - 6B
Distrito Industrial
Jundiá - SP
CEP 13.212-315
Sales and Service:
Phone: +55 11 2152 0499
Fax: +55 11 99467 5934
sales.vacuum.ju@oerlikon.com
service.vacuum.ju@oerlikon.com

Asia

P. R. China

**Oerlikon Leybold Vacuum (Tianjin)
International Trade Co. Ltd.**
Beichen Economic
Development Area (BEDA),
No. 8 Western Shuangchen Road
Tianjin 300400
China
Sales and Service:
Phone: +86-22-2697 0808
Fax: +86-22-2697 4061
Fax: +86-22-2697 2017
sales.vacuum.tj@oerlikon.com
service.vacuum.tj@oerlikon.com

India

**Oerlikon Leybold Vacuum
India Pvt Ltd.**
No. 82(P), 4th Phase
K.I.A.D.B. Plot
Bommasandra Industrial Area
Bangalore - 560 099
India
Sales and Service:
Phone: +91-80-2783 9925
Fax: +91-80-2783 9926
sales.vacuum.bgl@oerlikon.com
service.vacuum.bgl@oerlikon.com

Japan

**Oerlikon Leybold Vacuum
Japan Co., Ltd.**
Headquarters
Shin-Yokohama A.K.Bldg., 4th floor
3-23-3, Shin-Yokohama
Kohoku-ku, Yokohama-shi
Kanawaga 222-0033
Japan
Sales:
Phone: +81-45-471-3330
Fax: +81-45-471-3323
info.vacuum.yh@oerlikon.com
sales.vacuum.yh@oerlikon.com

Oerlikon Leybold Vacuum Japan Co., Ltd.

Tsukuba Technical Service Center
1959, Kami-yokoba
Tsukuba-shi, Ibaraki-shi 305-0854
Japan
Service:
Phone: +81-29 839 5480
Fax: +81-29 839 5485
service.vacuum.iik@oerlikon.com

Malaysia

**Oerlikon Leybold Malaysia
Oerlikon Leybold Vacuum
Singapore Pte Ltd.**
No. 1 Jalan Hi-Tech 2/6
Kulim Hi-Tech Park
Kulim, Kedah Darul
Aman 09000
Malaysia
Sales and Service:
Phone: +604 4020 222
Fax: +604 4020 221
sales.vacuum.ku@oerlikon.com
service.vacuum.ku@oerlikon.com

South Korea

**Oerlikon Leybold Vacuum
Korea Ltd.**
3F. Jellzone 2 Tower
Jeongja-dong 159-4
Bundang-gu Sungnam-si
Gyeonggi-do
Bundang 463-384, Korea
Sales:
Phone: +82-31 785 1367
Fax: +82-31 785 1359
sales.vacuum.bd@oerlikon.com
Service:
623-7, Ulsung-Dong
Cheonan-Si
Chungcheongnam-Do
Korea 330-290
Phone: +82-41 589 3035
Fax: +82-41 588 0166
service.vacuum.cn@oerlikon.com

Singapore

**Oerlikon Leybold Vacuum
Singapore Pte Ltd.**
8 Commonwealth Lane #01-01
Singapore 149555
Singapore
Sales and Service:
Phone: +65-6303 7030
Fax: +65-6773 0039
sales.vacuum.sg@oerlikon.com
service.vacuum.sg@oerlikon.com

Taiwan

**Oerlikon Leybold Vacuum
Taiwan Ltd.**
No 416-1, Sec. 3
Chunghsin Rd., Chutung
Hsinchu County 310
Taiwan, R.O.C.
Sales and Service:
Phone: +886-3-500 1688
Fax: +886-3-583 3999
sales.vacuum.hc@oerlikon.com
service.vacuum.hc@oerlikon.com

**Oerlikon
Leybold Vacuum GmbH**
Bonner Strasse 498
D-50968 Cologne
Phone: +49-(0)221-347 0
Fax: +49-(0)221-347 1250
info.vacuum@oerlikon.com

oerlikon
leybold vacuum
www.oerlikon.com/
leyboldvacuum